



## JIB LOAD RATINGS

LOAD RATINGS IN LBS. WITH OUTRIGGERS AND STABILIZERS EXTENDED

DO NOT PAINT OVER ANY LABELS 1080270 043004





# ELLIOTT

EQUIPMENT COMPANY

## MODEL 1800 70-ft BOOM

RANGE DIAGRAM

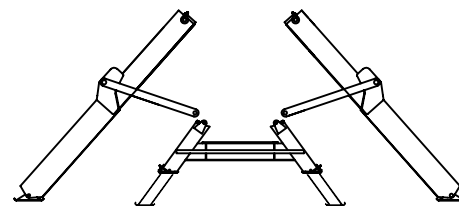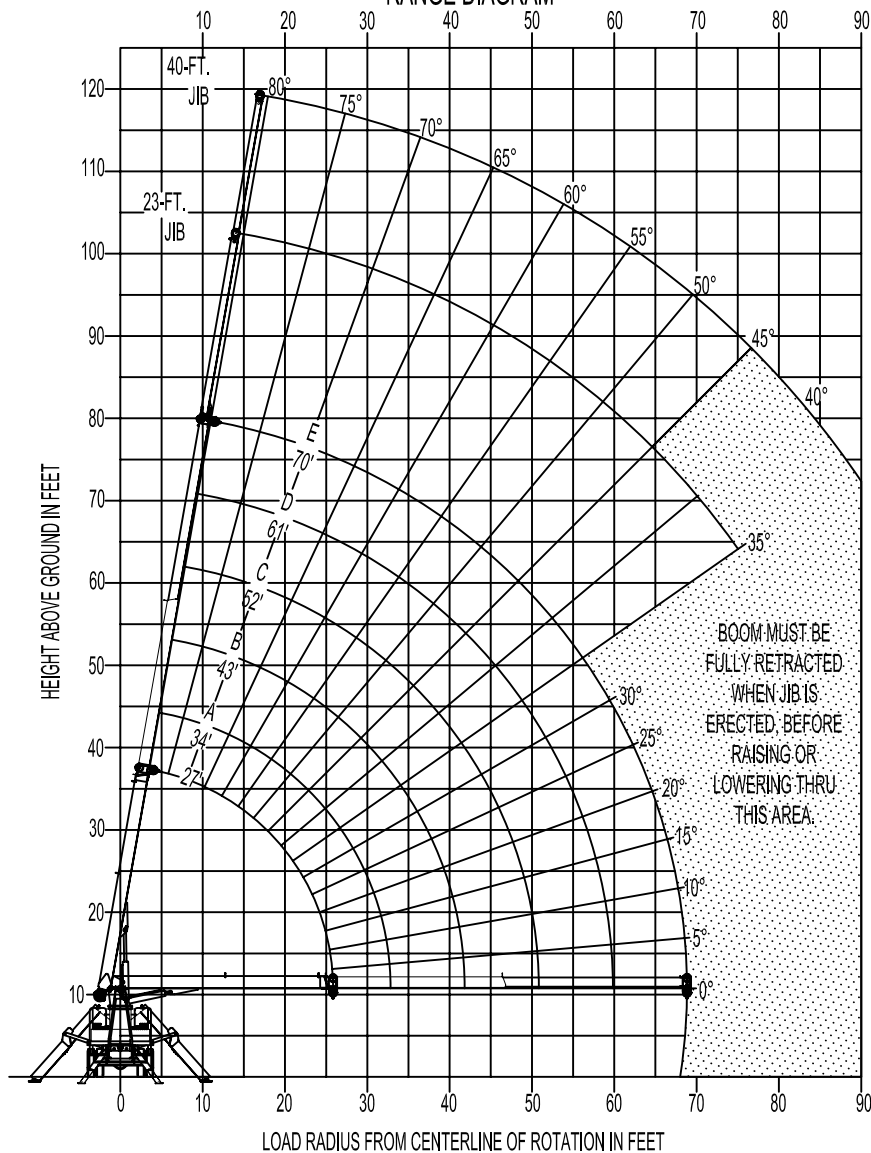

OUTRIGGERS AT FULL EXTENSION

NOTE:

1. Operate jib by radius when main boom is full extended. Increase boom angle if necessary to maintain load radius.
2. When boom is retracted, operate jib by boom angles. Do not exceed any rated jib capacities at reduced boom lengths.
3. Capacities do not exceed 85% stability.
4. Load ratings above bold line are structurally limited.
5. Personnel handling is allowed only with full span outriggers.
6. Boom load ratings are based on loaded boom radius. Loaded boom angles are given as reference only.

