

## KATO

# CR-250

## CITYRANGE CRANE



Maximum rated lifting capacity: 25t 360°
 Maximum boom length: 28.0m

# A new type of Crane, the CR-250 CITYRANGE CRANE packs a lot of punch into a small machine.







#### Features of the CITYRANGE CRANE



- 7) Compact for driving.
- 2) Five steering modes.
- 3) Compact tail radius for confined area.
- 4) Six-section, full power 28m main boom.
- Twin winches and rooster sheave as standard. (Four ton line pull on the rooster sheave).
- 6) Side-stowed underslung fly jib (optional). 5.4m/8.2m two sections with offset angles of 5°, 25° and 45°.
- 7) New hook stowage system.
- 8) Safe load indicator with "working range limit mode". Kato MULTIVISION ACS MS-15C-V fitted as





#### SIX-SECTION, 28M MAIN BOOM

This very long boom is fully powered throughout its extension and retraction between 6.7m and 28.0m. Its maximum hook height is 28.9m.


## SIDE-STOWED UNDERSLUNG FLY JIB (optional)

● 5.2m/8.2m two sections with offset angles of 5°, 25° and 45°. Maximum hook height using the jib is 37.1m. You can rig the jib even on a cramped site and the choice of three offset angles is ideal for working close up against buildings and for lifting to and from rooftops.

#### COMPACT TAIL RADIUS AT CRANE OPERATION


 The compact tail radius doesn't waste space on site. The radius of the counterweight: 2.23m (2.4m at the wire guide sheave)



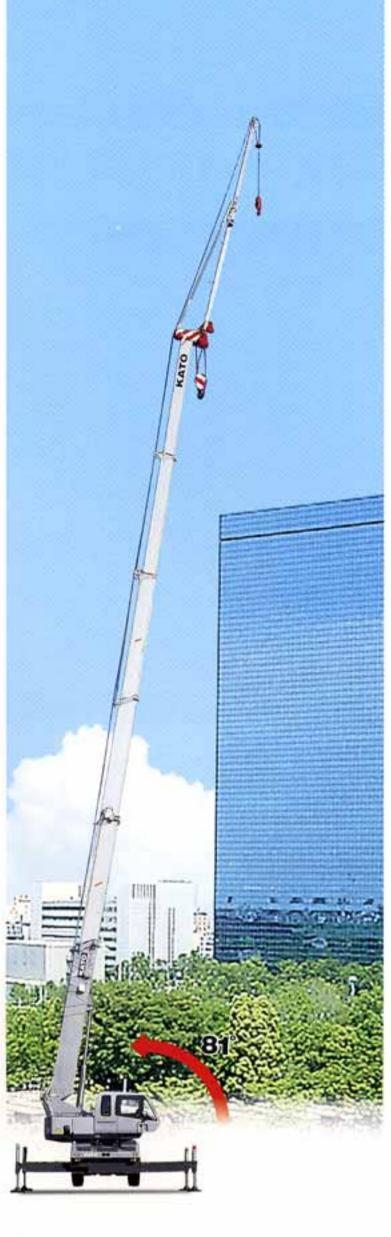

#### MULTI-PUMP SYSTEM

 The multi-pump system (with four pumps) provides precision in fine control and combined operations.

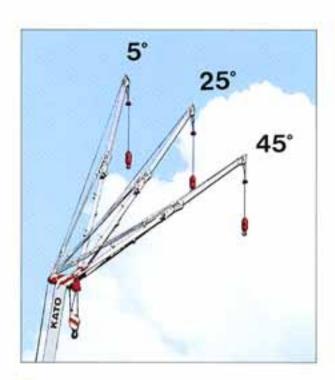

#### HOOK STOWAGE SYSTEM

• This system stows the hook by remote control from the cab. It allows swift preparation work and hook stowing at inside buildings or in other places where derricking is restricted.




#### TWIN WINCHES AND ROOSTER SHEAVE AS STANDARD

• Twin high-speed winches, bursting with newly developed strength, are fitted as standard. The rooster sheave achieves remarkable working efficiency with a maximum line pull capacity of 4 tons.

#### THREE-POSITION OUTRIGGERS SETTING

 The outriggers are designed with three extension positions of 6m, 4.5m and block on vertical cylinders.

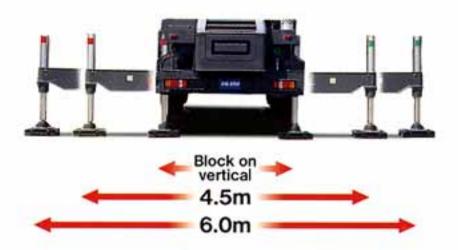

# A spec defined for the professional crane operator.



#### SEAT-SIDE LEVERS

• The control levers at the side of the seat allow for a relaxed operation whilst maintaining the simplicity, precision and reliability of long levers.






Panel with shift position indicator

#### An Industry First: "MULTIVISION"

Kato's proven safe load indicator, the MULTIVISION ACS MS-15C-V, is fitted as standard. It displays a number of convenient reference modes.

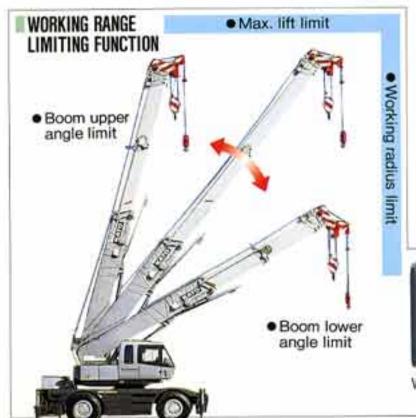

 












Working range limit mode

curve mode

Working radius-peformance Working status setting mode Check mode


## A new choice the CITYRANGE CRANE embodies enormous latent potential.



### FULL AUTOMATIC TRANSMISSION WITH HIGH/LOW TRANSFER

 Using the optimum gear ratio combination of 4 forward and 2 reverse speeds with High/Low select, this gearbox maximizes engine power and increases fuel economy as well as providing comfortable and satisfying driving.



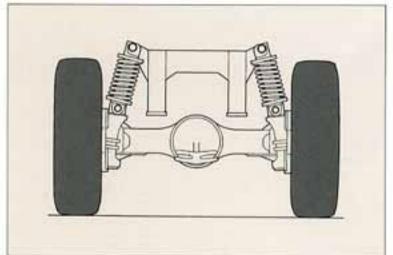



## THE COIL SPRING SUSPENSION & DISK BRAKE


- The design of the coil spring suspension is rugged and elegantly simple. It is fitted with shock absorbers for stability in forward motion and precise cornering.
- The machine is equipped with disk brakes of proven strength on all four wheels.

 
The five steering mode system lets the


CR-250 move freely around crowded or

cramped working sites where a normal crane would have difficulty. The operator can select mode using a simple dial switch.

**FIVE STEERING MODES** 

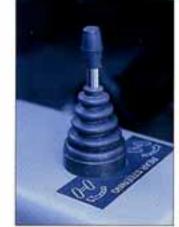





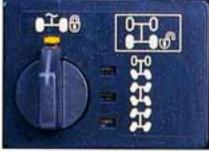



 Dial switch to select the modes




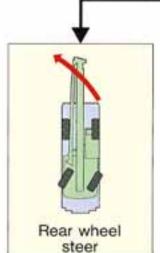

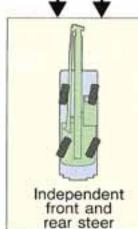

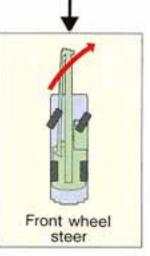

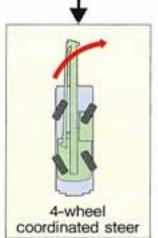

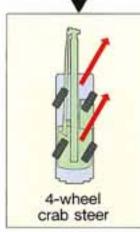













- \*Some differences may arise between the machine delivered and the photographs in the catalogue due to the country the crane will be used in or any added improvements.
- Note that the specification may be altered without notice. \*Before you use the crane read the instruction manual thoroughly and obey the instructions it contains.
- \* The actual colors of the body and interior decor may appear slightly different from those depicted due to limitations of photography and printing.

Address inquiries to:



#### KATO WORKS CO.,LTD.

9-37, Higashi-ohi 1-chome, Shinagawa-ku, Tokyo 140-0011, Japan.

Tel. : Head Office

Tokyo (03)3458-1111 Overseas Marketing Department Tokyo (03)3458-1115

Telex: 222-4519 (CRKATO J) Fax. : Tokyo (03)3458-1152 Cable: CRANEKATO TOKYO