



Load Rating Chart

Model 38124SHL




© Manitex 2000

NOTE: Additional copies of this Load Rating Chart can be purchased from your Manitex Distributor. When ordering, use the part number shown in the bottom left corner of this page.



RANGE DIAGRAM - FULLY EXTENDED OUTRIGGER CONFIGURATION -

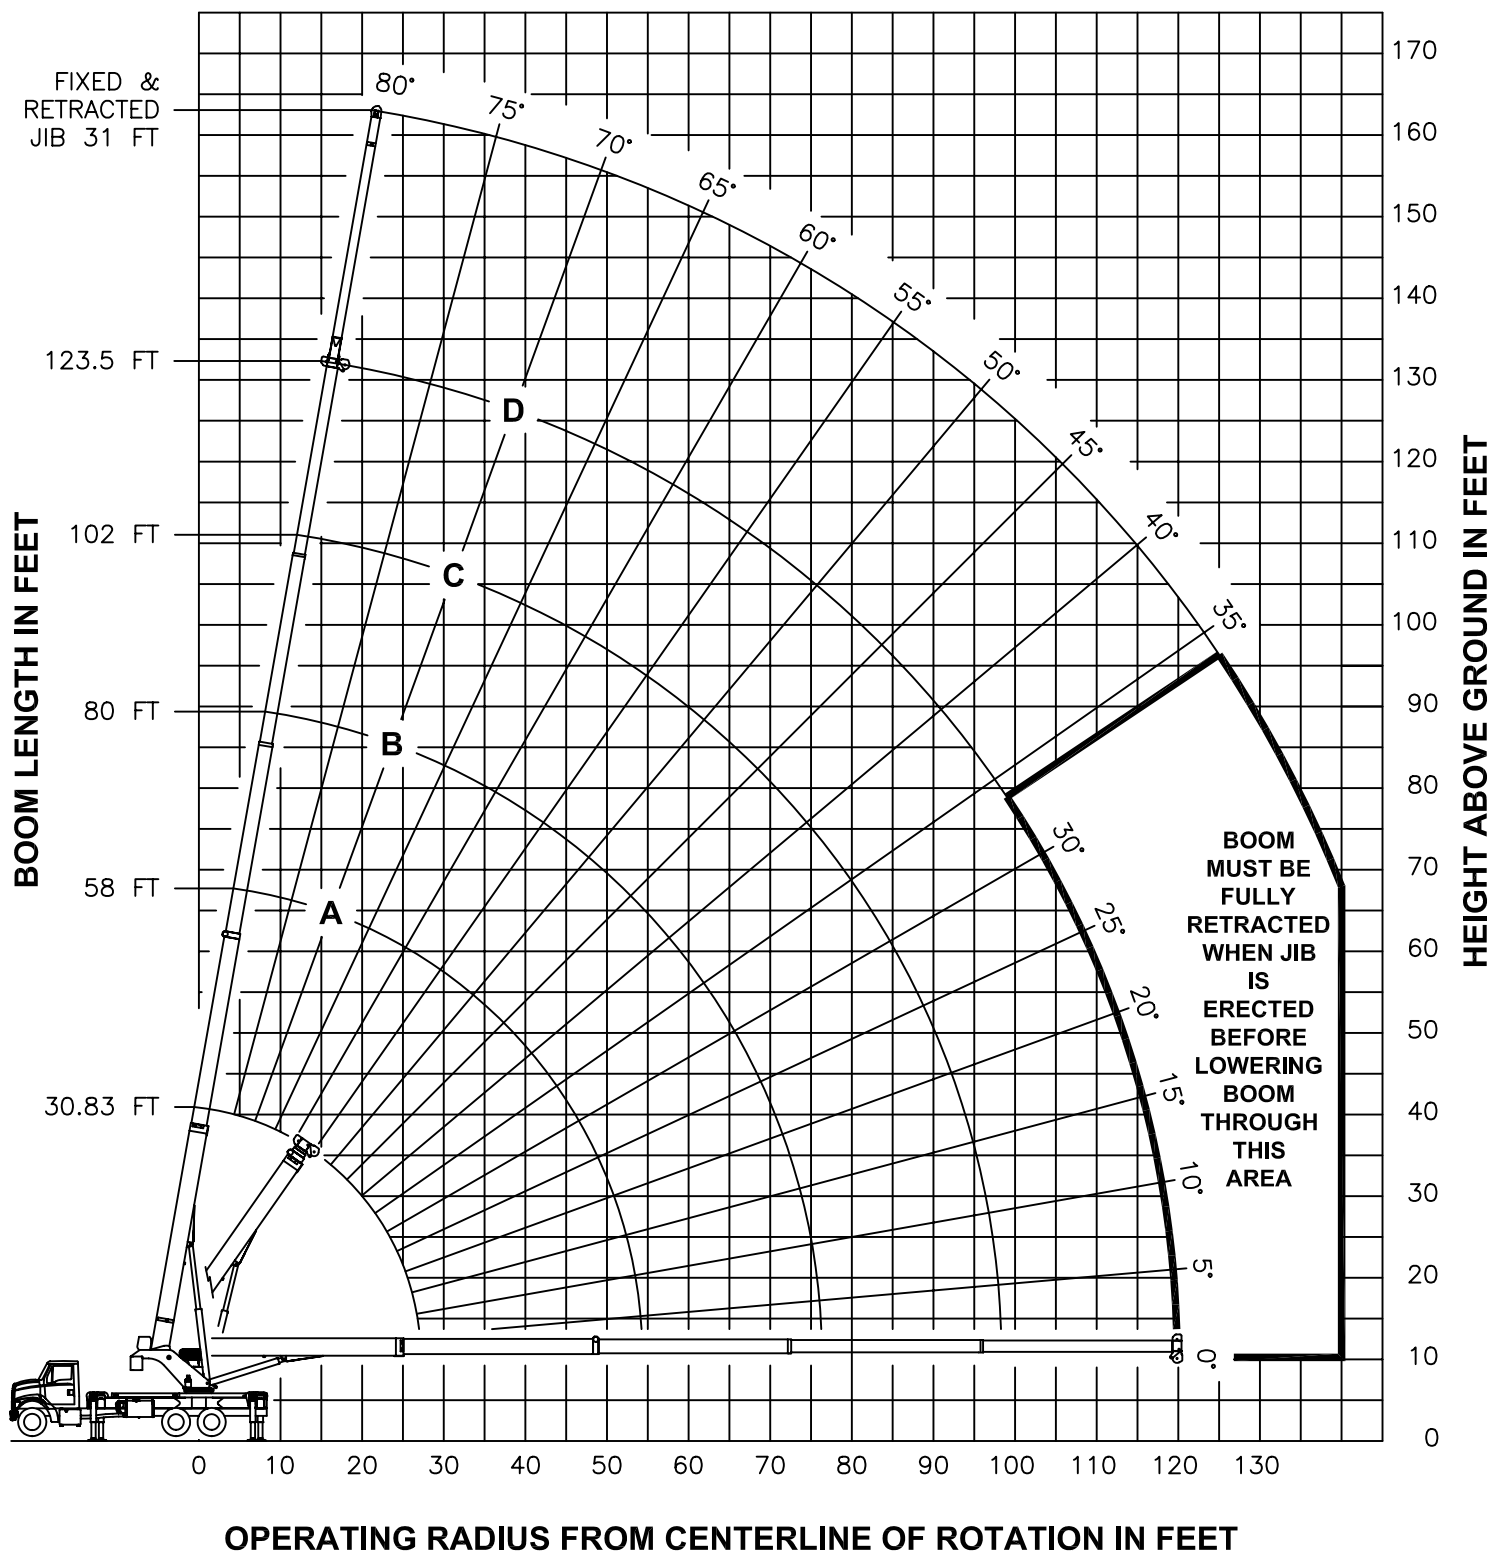




ALLOWABLE LINE PULL								WARNING
1 PART LINE	2 PART LINE	3 PART LINE	4 PART LINE	5 PART LINE	6 PART LINE	7 PART LINE	8 PART LINE	
								ANTI-TWO-BLOCK SYSTEM MUST BE IN GOOD OPERATING CONDITION BEFORE OPERATING CRANE. REFER TO THE OWNER'S MANUAL. KEEP AT LEAST 3 WRAPS OF LOAD LINE ON THE DRUM AT ALL TIMES.
9080 LBS	18160 LBS	27240 LBS	36320 LBS	45400 LBS	54480 LBS	63560 LBS	72640 LBS	5/8" ROT RESISTANT (5.0:1 SF) - 45400 LBS MIN BREAKING STRENGTH
9500 LBS	19000 LBS	28500 LBS	38000 LBS	47500 LBS	57000 LBS	66500 LBS	76000 LBS	5/8" 6 X 25 IWRC (3.5:1 SF) - 33250 LBS MIN BREAKING STRENGTH

AREA OF OPERATION

WARNING:

THE FRONT TIRES MUST BE IN CONTACT WITH THE GROUND, AND THE MACHINE LEVEL, WHEN OPERATING IN THIS AREA.

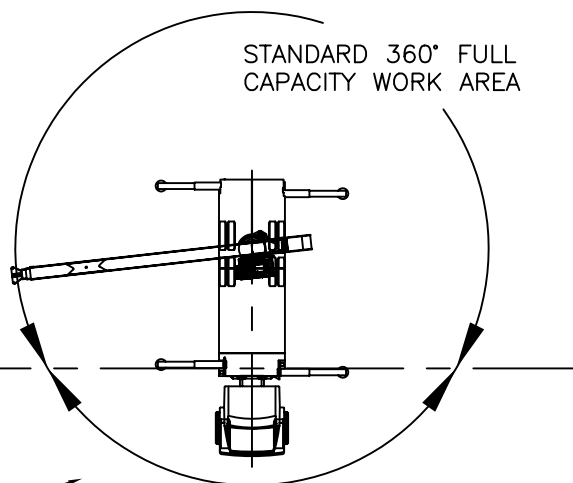


DEDUCTIONS FROM RATED LOADS FOR LOAD HANDLING DEVICES SUPPLIED BY MANITOWOC BOOM TRUCKS, INC.

AUXILIARY BLOCK ----- 50 LBS
OVERHAUL BALL ----- SEE OVERHAUL BALL MFRG. NAMEPLATE
LOADBLOCK ----- SEE LOADBLOCK MFRG. NAMEPLATE
HOSE REEL ----- 260 LBS
SWING AROUND JIB (STOWED) ----- SEE LOAD CHART




**USE THIS CHART
ONLY WHEN ALL
OUTRIGGERS ARE
FULLY RETRACTED**

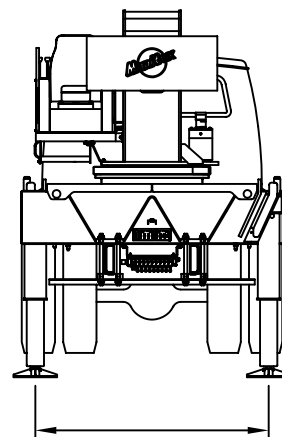

85.75 REF
(7'-1.75 REF)

- FULLY RETRACTED OUTRIGGER CONFIGURATION -

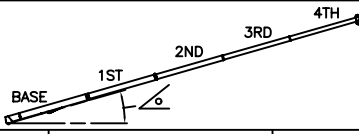
LOAD RATINGS IN LBS WITH ALL OUTRIGGERS FULLY RETRACTED LMI CODE #13								
OPERATING RADIUS FT	LOADED BOOM ANGLE	BOOM LENGTH AND MARKER						
			A	B	C			
			58 FT	80 FT	102 FT			
5	75	76000						
8	69	45710						
10	64	29790						
12	60	21410	75	22420				
15	53	14330	73	15250	79	15500		
20	40	8240	67	9110	75	9340	80	9460
25	22	4930	62	5830	71	6050	77	6160
30			56	3790	67	4000	74	4110
35			49	2390	63	2610	71	2710
40			42	1370	59	1590	68	1690
45					54	820	65	920
			450 LBS	240 LBS	180 LBS	140 LBS		

NO JIBS ARE TO
BE ERECTED IN
THIS OUTRIGGER
CONFIGURATION

DEDUCTIONS FOR
STOWED JIBS



RANGE DIAGRAM - FULLY RETRACTED OUTRIGGER CONFIGURATION -

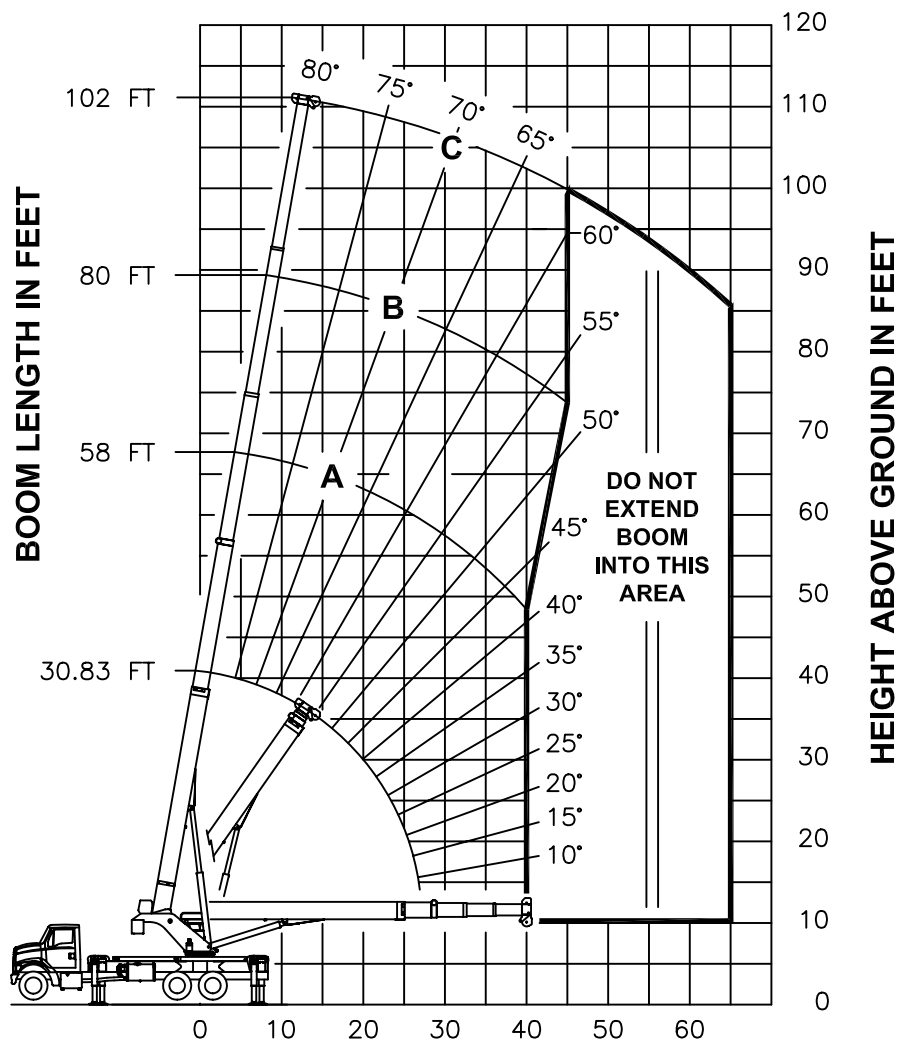

OPERATING RADIUS FROM CENTERLINE OF ROTATION IN FEET

NOTE : LIFTING PERSONNEL WITH CRANE IN THIS OUTRIGGER CONFIGURATION IS STRICTLY PROHIBITED. USE ONLY FULLY EXTENDED OUTRIGGER CONFIGURATION WHEN LIFTING PERSONNEL.



**USE THIS CHART ONLY
WHEN ALL
OUTRIGGERS ARE IN
THE INTERMEDIATE
POSITION**


PINS MUST BE
ENGAGED IN THIS
OUTRIGGER CONFIGURATION

OUTRIGGER BEAMS
MUST BE EXTENDED
TO MARK

MARK
INDICATES
BEAM IS
FULLY
EXTENDED


159.25 REF
(13'-3.25 REF)

- INTERMEDIATE OUTRIGGER CONFIGURATION -

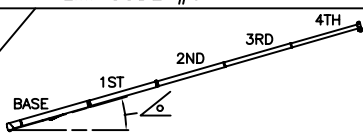LOAD RATINGS IN LBS WITH ALL OUTRIGGERS IN THE INTERMEDIATE POSITION										JIB LOAD RATINGS IN LBS WITH ALL OUTRIGGERS IN THE INTERMEDIATE POSITION					
LMI CODE #9										LMI CODE #10					
OPERATING RADIUS FT	LOADED BOOM ANGLE BOOM LENGTH AND MARKER												OPERATING RADIUS FT	BOOM ANGLE LOADED	31 FT JIB FOR ALL BOOM LENGTHS SEE WARNING NOTE 4
			A		B		C		D						
	°	30.83 FT	°	58 FT	°	80 FT	°	102 FT	°	123.5 FT					
5	75	76000													
8	69	60500													
10	64	52550													
12	60	46600	75	25000							10				
15	53	36000	73	25000	79	21500					12				
20	40	20410	67	21480	75	19700	80	14500			15				
25	22	13230	62	14290	71	14550	77	13500	80	8450	20				
30			56	10170	67	10420	74	10540	78	8150	25				
35			49	7490	63	7740	71	7860	75	7800	30	80	4000		
40			42	5610	59	5860	68	5980	72	6040	35	78	3850		
45			34	4220	54	4470	65	4580	70	4650	40	76	3700		
50			23	3120	50	3390	61	3510	67	3570	45	74	3550		
55					44	2540	58	2660	65	2720	50	72	3400		
60					39	1840	54	1970	62	2030	55	70	3110		
65					32	1260	50	1390	59	1450	60	68	2410		
70					24	770	46	900	56	970	65	66	1830		
75											70	64	1340		
80											75	62	920		
											80	60	560		
	450 LBS		240 LBS		180 LBS		140 LBS		120 LBS		DEDUCTIONS FOR STOWED JIB				




RANGE DIAGRAM - INTERMEDIATE OUTRIGGER CONFIGURATION -

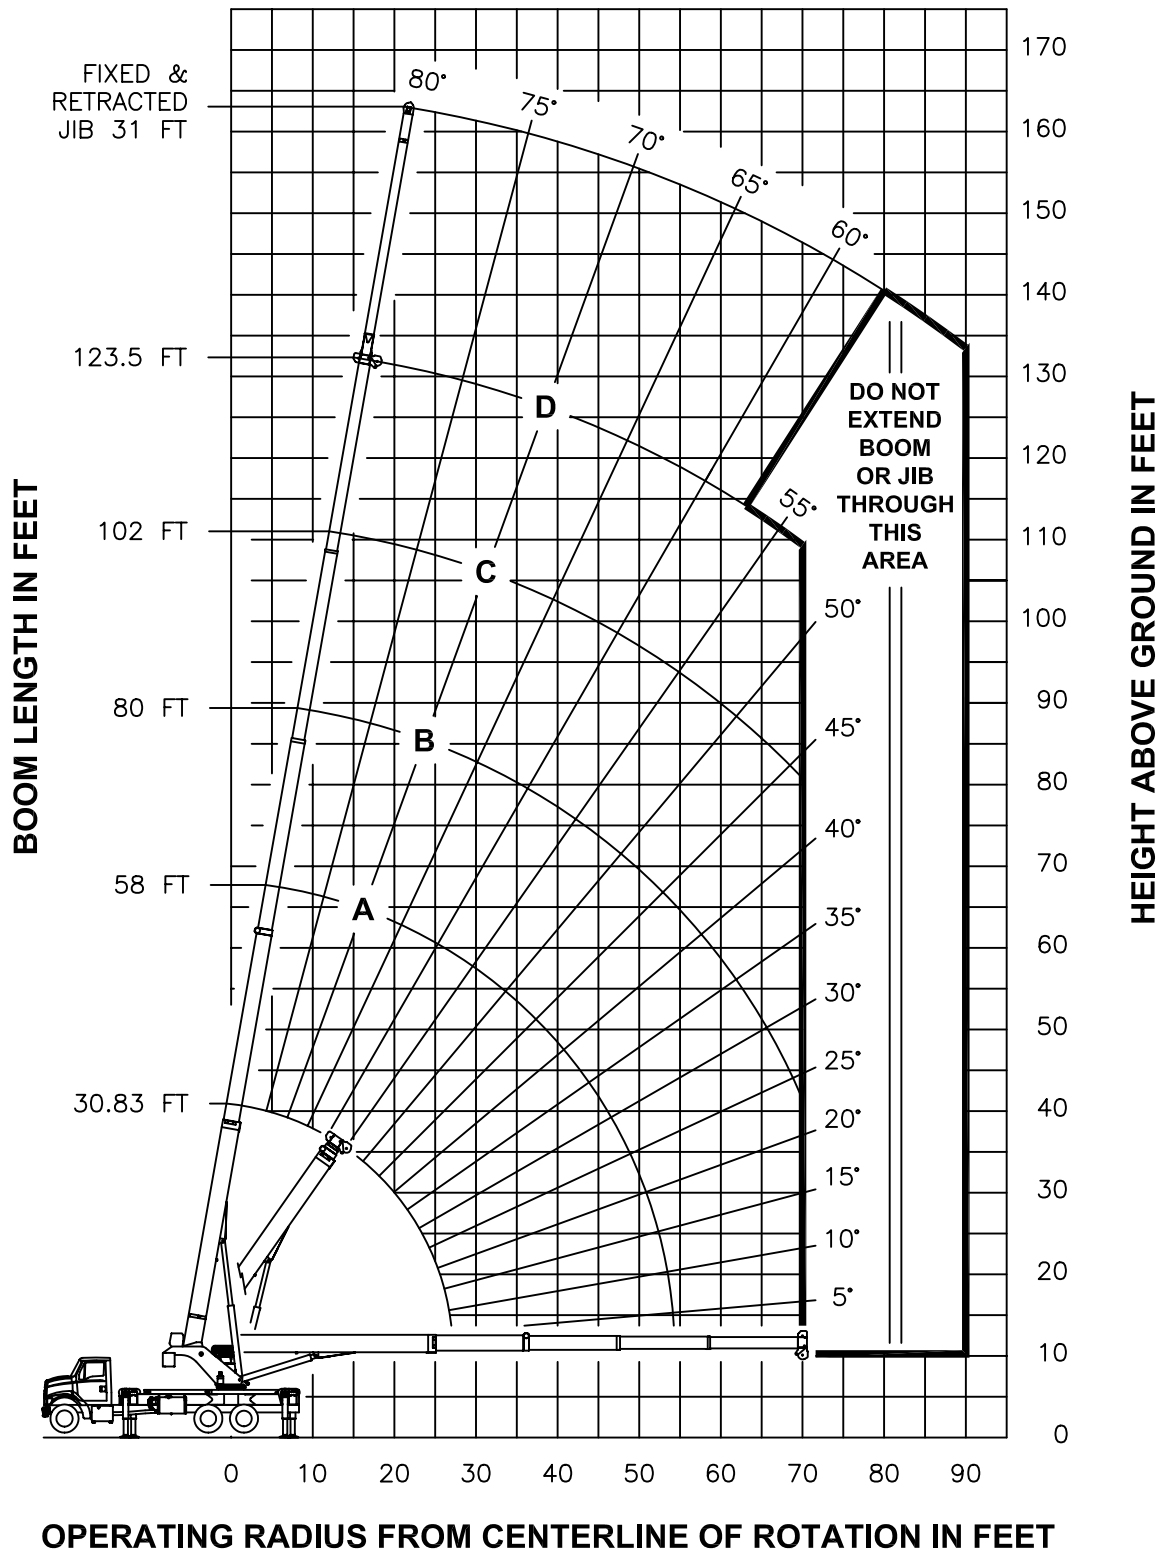




**USE THIS CHART ONLY
WHEN ALL
OUTRIGGERS ARE
FULLY EXTENDED**

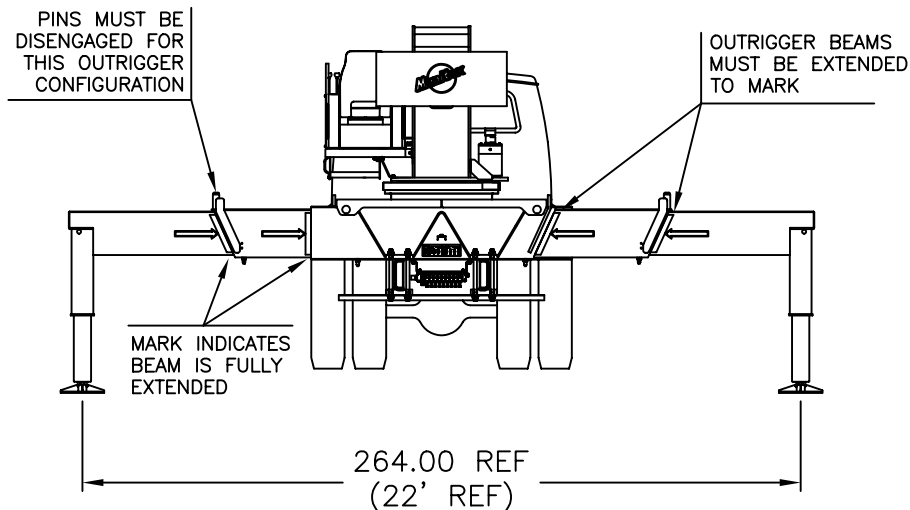

- FULLY EXTENDED OUTRIGGER CONFIGURATION -

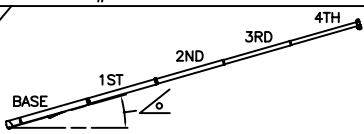LOAD RATINGS IN LBS WITH ALL OUTRIGGERS FULLY EXTENDED										JIB LOAD RATINGS IN LBS WITH ALL OUTRIGGERS FULLY EXTENDED			
LMI CODE #1										LMI CODE #2			
OPERATING RADIUS FT	LOADED BOOM ANGLE BOOM LENGTH AND MARKER										OPERATING RADIUS FT	BOOM LOADED ANG	31 FT JIB FOR ALL BOOM LENGTHS SEE WARNING NOTE 4
			A		B		C		D				
	∠	30.83 FT	∠	58 FT	∠	80 FT	∠	102 FT	∠	123.5 FT			
5	75	76000											
8	69	60500											
10	64	52550											
12	60	46600	75	25000							10		
15	53	39600	73	25000	79	21500					12		
20	40	31330	67	25000	75	19700	80	14500			15		
25	22	24100	62	22840	71	18200	77	13500	80	8450	20		
30			56	19550	67	16250	74	12820	78	8150	25		
35			49	16100	63	14540	71	11380	75	7800	30	80	
40			42	12900	59	13070	68	10160	72	7280	35	78	
45			34	10540	54	10800	65	9370	70	6780	40	76	
50			23	8720	50	9000	61	8430	67	6160	45	74	
55					44	7570	58	7620	65	5540	50	72	
60					39	6400	54	6530	62	5000	55	70	
65					32	5430	50	5570	59	4520	60	68	
70					24	4610	46	4760	56	4090	65	66	
75					12	3900	42	4060	53	3700	70	64	
80							37	3470	50	3350	75	62	
85							32	2940	47	3020	80	60	
90							25	2480	43	2560	85	58	
95							17	2060	40	2150	90	55	
100									35	1790	95	53	
105									31	1460	100	51	
110									25	1160	105	48	
115									18	880	110	45	
120											115	43	
125											120	40	
											125	36	
	450 LBS		240 LBS		180 LBS		140 LBS		120 LBS		DEDUCTIONS FOR STOWED JIB		



LMI OPERATING CODES

SETTING	CRANE CONFIGURATION	OUTRIGGER CONFIGURATION
#1	— MAIN BOOM — — — — —	FULLY EXTENDED
#2	— FIXED JIB — — — — —	FULLY EXTENDED
#5	— PERSONNEL LIFTING PLATFORM ON MAIN BOOM — — — — —	FULLY EXTENDED
#6	— PERSONNEL LIFTING PLATFORM ON FIXED JIB — — — — —	FULLY EXTENDED
#9	— MAIN BOOM — — — — —	INTERMEDIATE
#10	— FIXED JIB — — — — —	INTERMEDIATE
#13	— MAIN BOOM — — — — —	FULLY RETRACTED

WARNING

1. THE OPERATOR MUST READ AND UNDERSTAND THE OWNER’S MANUAL BEFORE OPERATING THIS CRANE.
2. POSITIONING OR OPERATION OF CRANE BEYOND AREAS SHOWN ON THIS CHART IS NOT INTENDED OR APPROVED EXCEPT WHERE SPECIFIED IN OWNER’S MANUAL.
3. LOADED BOOM ANGLES AT SPECIFIED BOOM LENGTHS GIVE ONLY AN APPROXIMATION OF THE OPERATING RADIUS. THE BOOM ANGLE BEFORE LOADING SHOULD BE GREATER TO ACCOUNT FOR DEFLECTIONS. DO NOT EXCEED THE OPERATING RADIUS FOR RATED LOADS.
4. THE OPERATING RADIUS SHOWN IN THE JIB RATING CHART IS FOR FULLY EXTENDED BOOM ONLY. WHEN BOOM IS NOT FULLY EXTENDED, USE ONLY LOADED BOOM ANGLE TO DETERMINE LOAD RATING OF JIB.
5. FOR BOOM ANGLES NOT SHOWN ON JIB LOAD RATING CHART, USE RATING OF NEXT LOWER BOOM ANGLE.
6. FOR BOOM LENGTHS NOT SHOWN, USE RATING OF NEXT SHORTER OR LONGER BOOM LENGTH, WHICHEVER IS LESS. FOR RADII NOT SHOWN, USE RATING OF NEXT LONGER RADIUS.
7. CRANE LOAD RATINGS ON OUTRIGGERS ARE BASED ON FREELY SUSPENDED LOADS WITH THE MACHINE LEVELED AND STANDING ON A FIRM UNIFORM SUPPORTING SURFACE. NO ATTEMPT SHALL BE MADE TO MOVE A LOAD HORIZONTALLY ON THE GROUND IN ANY DIRECTION.



WARNING (CONTINUED)

8. PRACTICAL WORKING LOADS DEPEND ON SUPPORTING SURFACE, WIND, AND OTHER FACTORS AFFECTING STABILITY SUCH AS HAZARDOUS SURROUNDINGS, EXPERIENCE OF PERSONNEL, AND PROPER HANDLING, ALL OF WHICH MUST BE TAKEN INTO ACCOUNT BY THE OPERATOR.
9. THE MAXIMUM LOAD WHICH MAY BE TELESKOPED IS LIMITED BY HYDRAULIC PRESSURE, BOOM ANGLE, AND BOOM LUBRICATION. IT IS SAFE TO ATTEMPT TO TELESCOPE ANY LOAD WITHIN THE LIMITS OF THE LOAD RATING CHART.
10. LIFTING OFF THE MAIN BOOM POINT WHILE THE SWING AROUND JIB IS ERECTED IS NOT INTENDED OR APPROVED.

INFORMATION

1. DEDUCTIONS MUST BE MADE FROM RATED LOADS FOR STOWED JIB, OPTIONAL ATTACHMENTS, HOOKS, AND LOADBLOCKS (SEE DEDUCTION CHART). WEIGHTS OF SLINGS AND ALL OTHER LOAD HANDLING DEVICES SHALL BE CONSIDERED A PART OF THE LOAD.
2. LOAD RATINGS ABOVE THE HEAVY LINE ARE STRUCTURALLY LIMITED CAPACITIES. LOAD RATINGS BELOW THE HEAVY LINE ARE STABILITY LIMITED CAPACITIES AND DO NOT EXCEED 85% OF TIPPING.

DEFINITIONS

1. OPERATING RADIUS IS THE HORIZONTAL DISTANCE FROM THE AXIS OF ROTATION TO THE CENTER OF THE VERTICAL HOIST LINE OR TACKLE WITH LOAD APPLIED.
2. LOADED BOOM ANGLE AS SHOWN IN THE COLUMN HEADED BY , IS THE INCLUDED ANGLE BETWEEN THE HORIZONTAL AND LONGITUDINAL AXES OF THE BOOM BASE AFTER LIFTING RATED LOAD AT RATED RADIUS.