



FASSI CRANE

1

F 330B.23

use and maintenance

FROM SERIAL NUMBER *4001*

INDEX

1	INTRODUCTION
2	CLASSIFICATION OF THE CRANE MODEL
2.1	Generality
2.2	Hydraulic jibs
2.3	Technical data
3	CAPACITY PLATES
3.1	Generality
3.1.1	Capacity plates with lifting moment limiting device
3.1.2	Capacity plates with load limiting device
4	HYDRAULIC SCHEMATICS (CE) (version with lifting moment limiting device)
4.1	HYDRAULIC SCHEMATICS (version with load limiting device)
5	ELECTRIC SCHEMATICS
6	SAFETY NORMS
7	WARNING AND INSTRUCTIONS
7.1	Generality
7.2	Before operating
7.3	During operation
7.4	At the end of the operation (Prior to driving the vehicle)
7.5	Residual risks
8	IDENTIFICATION OF THE CRANE MODEL
8.1	Generality
8.2	Crane mark
9	CRANE NOMENCLATURE
9.1	Crane with ground controls on both sides
9.2	Crane with top seat controls and with ground controls for outriggers
10	NOMENCLATURE OF THE SAFETY AND PROTECTION DEVICES
10.1	Crane with ground controls on both sides
10.2	Crane with top seat controls and with ground controls for outriggers
11	SUPPLEMENTARY BEAMS
11.1	Generality
11.2	Identification of the supplementary beams
12	TILTABLE OUTRIGGER RAMS
12.1	Manually tiltable outrigger rams
13	MANOEUVRES AND CONTROLS TO STABILIZE THE VEHICLE
13.1	Generality
13.2	Manual extension and re-entry of the outrigger supports (not available)
13.3	Manoeuvres for the manual extension of the double outrigger supports (not available)
13.4	Functions of control levers for stabilization
13.5	Controls to stabilize the vehicle
13.5.1	Crane with hydraulic tiltable supports (with RACK) for outrigger rams
14	CONTROLS TO OPERATE THE CRANE



14.1	Generality
14.2	Manoeuvres to unfold the crane into a working condition
14.3	Manoeuvres to fold the crane into the rest condition
14.4	Manoeuvres to unfold the crane "C" into a working condition (only for the crane version "C")
14.5	Manoeuvres to fold the crane "C" into the rest condition (only for the crane version "C")
14.6	Indicator of inner boom horizontal position (optional)
14.7	Third control station (optional)
15	MANOEUVRES OF THE CRANE LOADS (version with load limiting device)
15.1	Generality
16	MANOEUVRES OF THE CRANE LOADS (version with lifting moment limiting device)(if fitted)
16.1	Generality
16.2	Lifting moment limiting device "ELECTRONIC" (if fitted)
16.3	Control panels (if fitted)
16.4	Load handling (if fitted)
16.5	Lifting moment limiting device for two working sectors (if fitted)
16.6	Rotation limiting device (if fitted)
16.7	In the case of the appearance of the signal "ALARM" on the display of the control panel or of the radio remote control or in case of an electrical failure (if fitted)
16.7.1	Diagnostic (Alarms/Input/Output) LME vers. 4-5 UC 01-7 (if fitted)
16.7.2	Temporary OVERRIDE-Reactivation for the crane functions with standard distributor (if fitted)
16.7.3	OVERRIDE-Reactivation lever for the crane functions (with Danfoss distributor) (if fitted)
16.8	XP device (if fitted, see the Use and Maintenance booklet)
16.8.1	Activation and instructions for use of the XP/V device (if fitted, see the Use and Maintenance booklet)
16.9	Use of the radio remote control (if fitted)
16.9.1	Scanreco control unit with linear levers (if fitted)
17	USE OF IMPLEMENTS
17.1	Generality
17.2	Hydraulic connections for implements - supplementary hoses
17.3	Oil cooler (heat exchanger)
18	MANUAL EXTENSIONS
18.1	Generality
18.2	Lifting moment limiting device "ELECTRONIC" for the manual extensions (valid starting from the version 3.0 of the software)
19	CONTROLS TO OPERATE THE HYDRAULIC IMPLEMENTS OF THE CRANE
20	HYDRAULIC JIBS
20.1	Generality
20.2	Identification of the hydraulic jib
20.3	Nomenclature of the hydraulic jib
20.4	Manoeuvres to unfold the jib in working condition
20.5	Manoeuvres to fold the jib in rest condition
20.6	Operations to remove the hydraulic jib from the crane
20.7	Operations to mount the hydraulic jib on the crane
20.8	Hydraulic jib articulated at 25 degrees with the automatic control (L515-L516)(not available)
20.9	Use of the hydraulic jib articulated at 25 degrees (not available on the L102 and on the L515-L516)
20.10	Crane with lifting moment limiting device and "pro link" (if fitted)
21	WINCH (if fitted)
21.1	Generality (version with lifting moment limiting device)
21.2	Winch for crane
21.2.1	Winches equipped with a mechanical stroke end device
21.3	Generality (version with load limiting device)
21.4	Winch for crane
21.4.1	Winches equipped with a mechanical stroke end device
22	MAINTENANCE INSTRUCTIONS
22.1	Generality
22.2	Timer
22.3	After every 8 working hours or at the end of every working day
22.4	After every 40 working hours or after every working week
22.5	After every 100 working hours or more frequently in case of more intensive utilisation
22.6	After every 500 working hours or after every 6 working months
22.7	After every 1000 working hours or after every working year
22.8	Complete overhaul of the crane is required when 10.000 working hours or 10 years'life are reached
22.9	Instructions for the dismantlement and the demolition of a FASSI crane
23	TABLE OF HYDRAULIC OIL AND LUBRICANTS CHARACTERISTICS
24	POSSIBLE FAULTS
24.1	Generality
24.2	Only operations which can be carried out by the user
24.3	Operations to be carried out only by a service center
25	INSTRUCTION AND WARNING PLATES



FASSI CRANE

use and maintenance ORIGINAL INSTRUCTIONS

THANK YOU FOR SELECTING ONE OF FASSI CRANES.

This crane is the result of **FASSI** philosophy: ongoing research, rigorous testing, data verification, and analysis of performances.

Many years of experience has allowed us to grant you the maximum safety of operation together with the optimization of machine performances.

All this represents the core of **FASSI quality system**.

**FASSI quality system is in conformity with
UNI EN ISO 9001:2000 (ISO 9001:2000)**

The fitment of the crane on the vehicle must be carried out in accordance with the instructions given by **FASSI** in the manual for hydraulic crane fitting and the relevant chassis manufacturers directives.

The Manufacturer declines all responsibility and guarantee if the fitting is entrusted to workshops without sufficient technical capability to carry out the work in conformity.

Be sure that the unit has been installed, inspected and tested in accordance with the local legal requirements.

As well as the principal safety norms, this manual contains a description of the crane and the instructions for use and maintenance.

The following instructions refer to mobile cranes in general and must be integrated with the manual for use supplied by the centre responsible for the crane fitting on truck, vehicle or other type of structure.

READ THIS MANUAL CAREFULLY prior to use or any maintenance. A few minutes spent now could save time and labour later.

Always conform to the safety norms and the instructions for use and maintenance contained in the present manual in order to guarantee a long life to the crane.

NOTE

The original version of the present manual is in italian.

The spare parts catalogue for the crane can be viewed in the Internet site: www.fassicat.com





2 CLASSIFICATION OF THE CRANE MODEL

2.1 Generality

The design of this crane has been carried out in respect of **DIN 15018** norms, fatigue test classification **H1B3**.

The crane can operate, intermittently, with lifting devices other than the hook.

The dimensions and the capacity of the implements must be proportioned with crane performances.


CLASSIFICATION OF
THE CRANE MODEL
F 330B.23

2

2.3 Technical data

F 330B.23

Lifting capacity	Standard reach	Hydraulic extension	Rotation arc	Rotation torque	Working pressure	Pump capacity	Oil tank capacity	Crane weight	Max. working pressure on the outrigger (Φ 210)
30,7 tm 301,06 kNm 222.054 lbf.ft	10,05 m 32'11" ft/in	5,65 m 18'6" ft/in	400°	4,84 tm 47,46 kNm 35.008 lbs.ft	30,5 MPa 4.424 psi	50 l/min 13,21 gal/min	180 l 47,55 gals	3685 kg 8.124 lbs	43,7 daN/cm² 641,07 psi

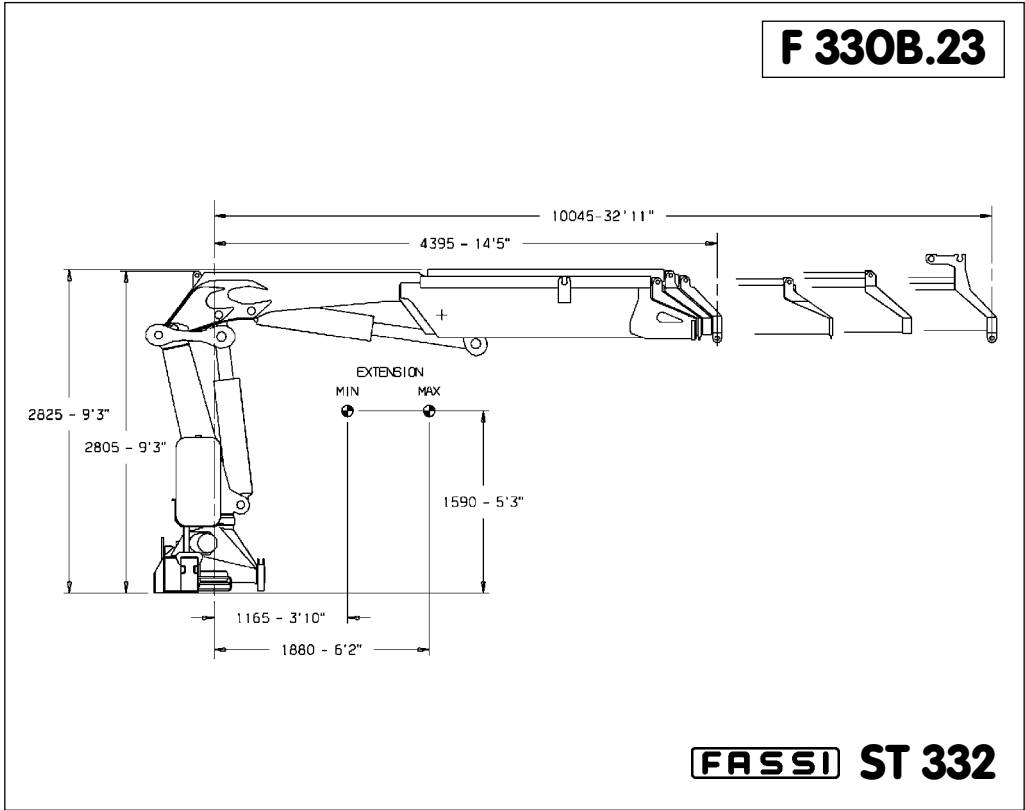





2.2

CLASSIFICATION OF
THE CRANE MODEL
F 330B.23

FASSI ST 332

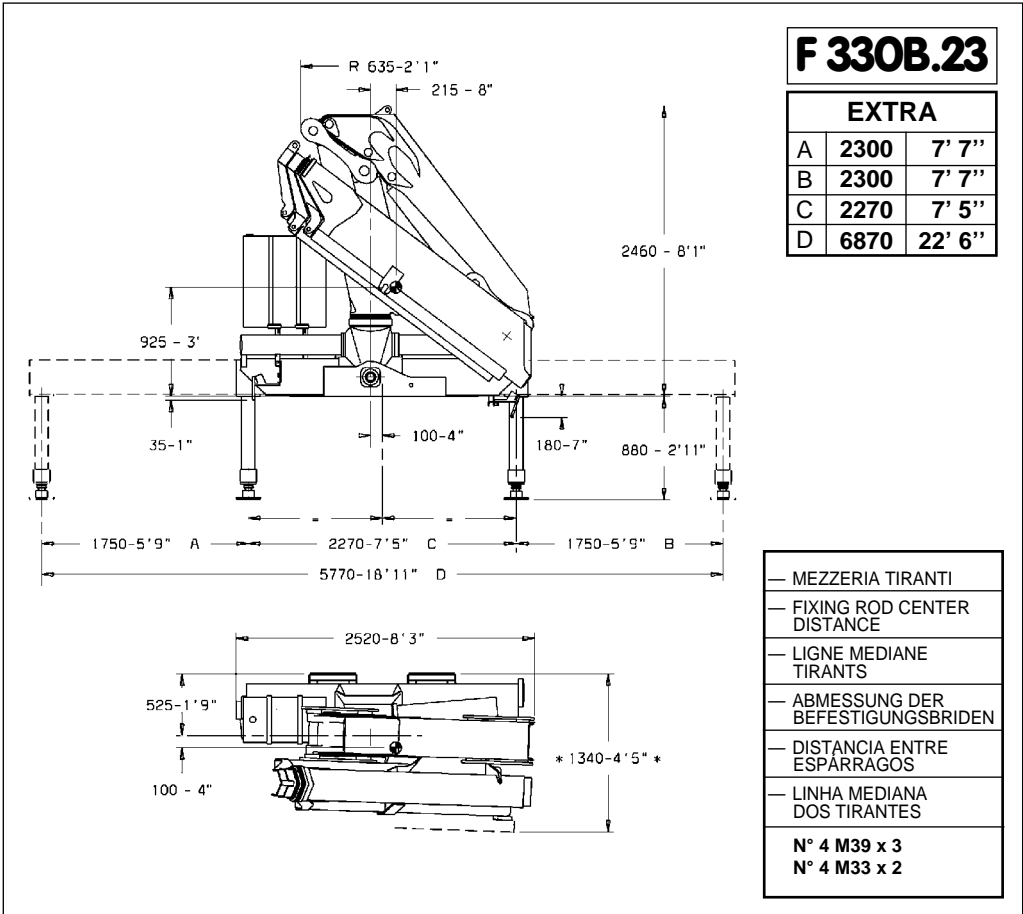

F 330B

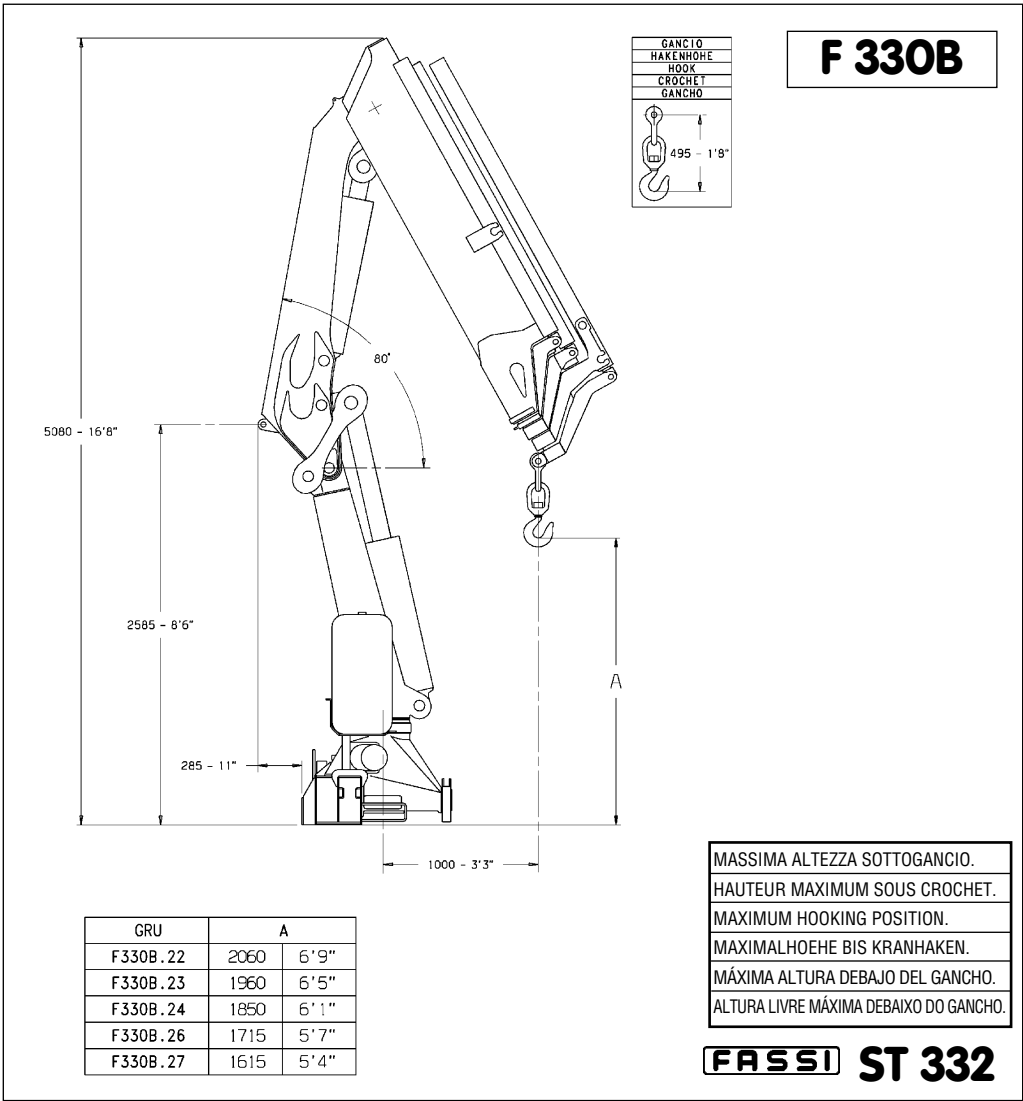



3 CAPACITY PLATES

CAPACITY PLATES
F 330B.23

3



3.1 Generality

The represented plates refer to the nominal design capacities.

(!) WARNING (!)

If the capacities are downgraded or partially reduced (e.g. sector in front of vehicle cab) capacity plates must be applied in line with the final test figures.

3.1-1 Capacity plates with lifting moment limiting device

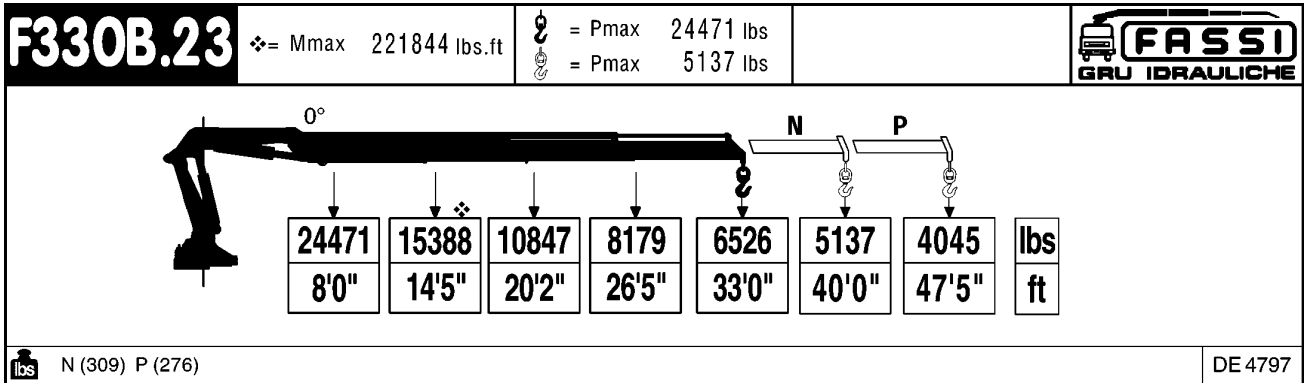
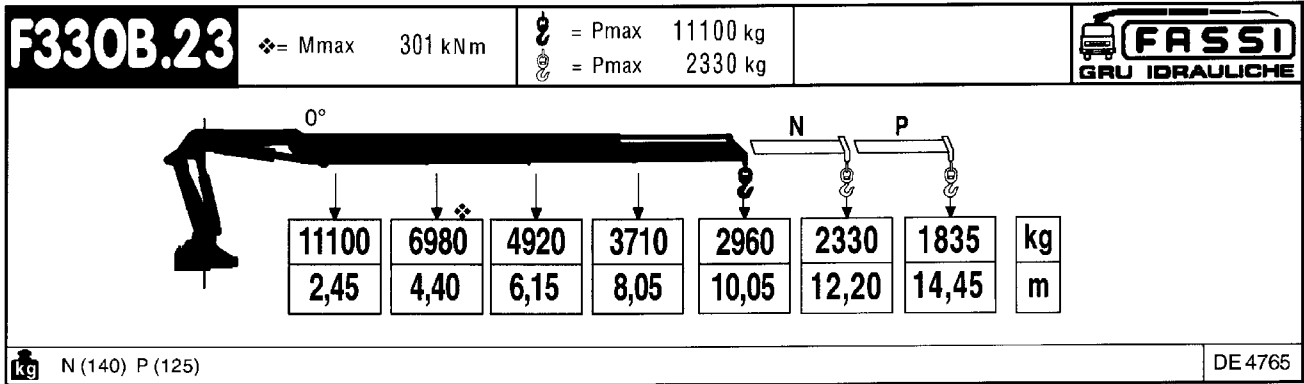




3.1-1


CAPACITY PLATES
F 330B.23

3.1-1 Capacity plates with lifting moment limiting device

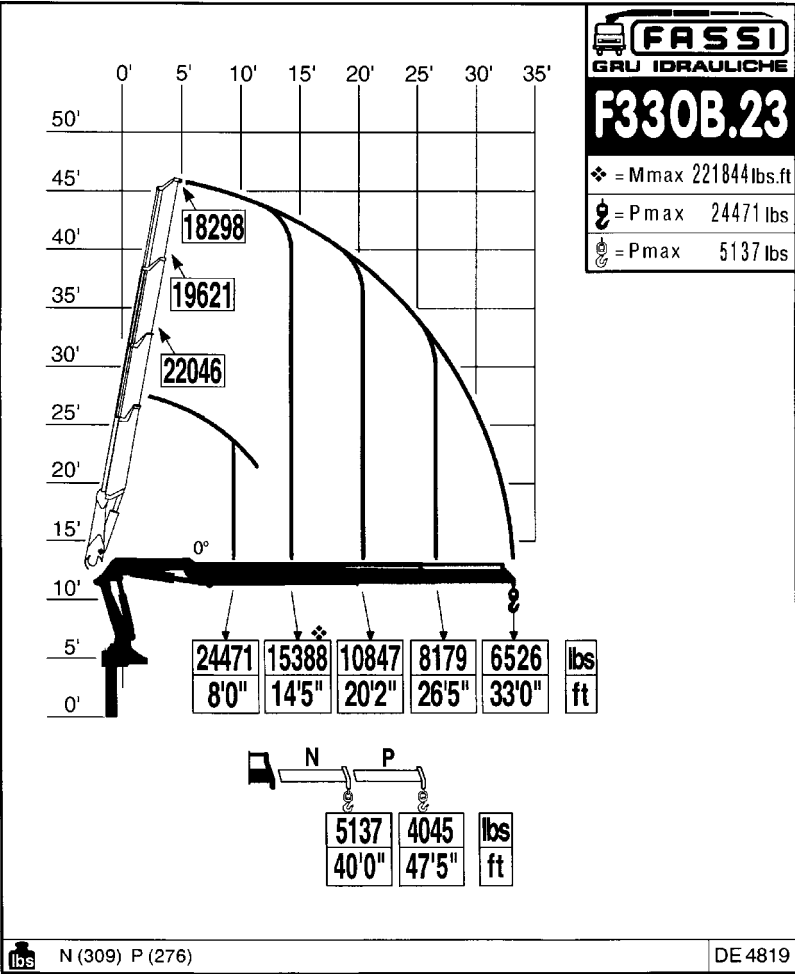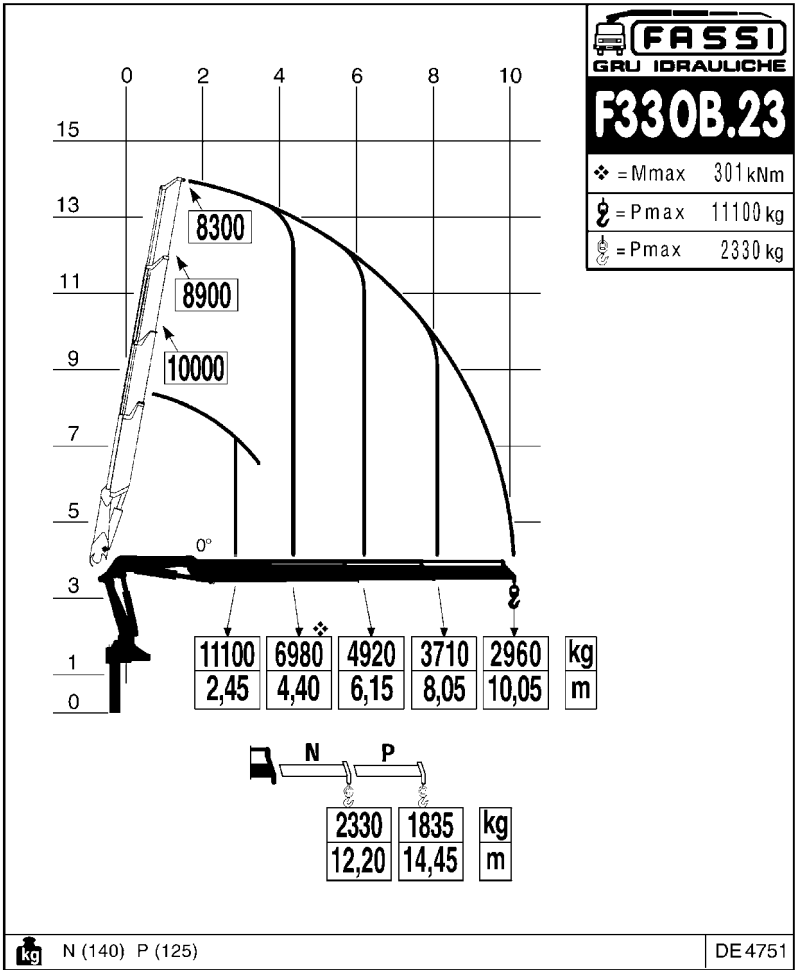



3.1-1 Capacity plates with lifting moment limiting device

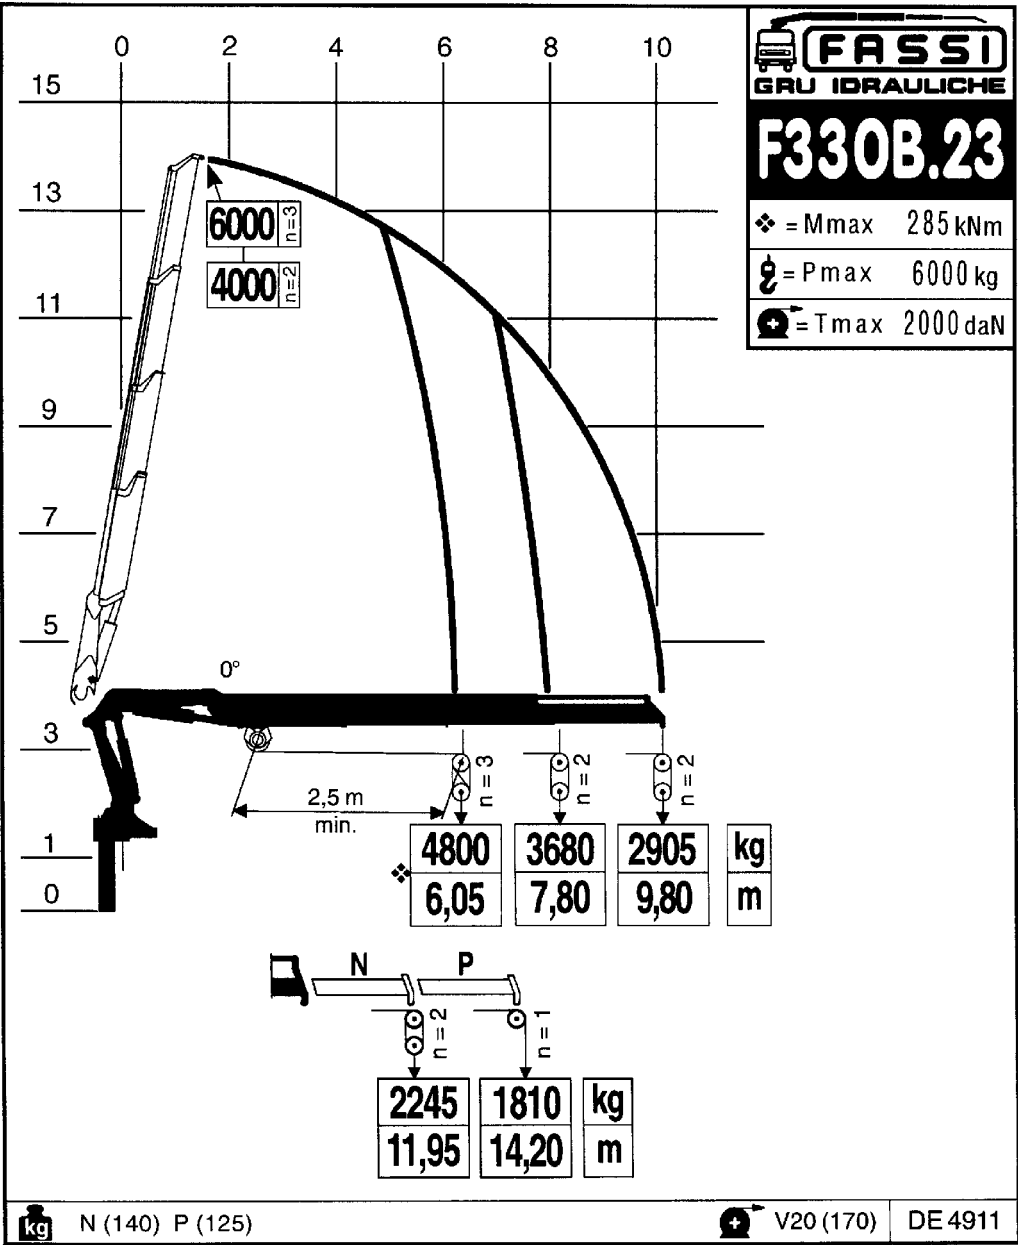




3.1-1



CAPACITY PLATES
F 330B.23

3.1-1 Capacity plates with lifting moment limiting device

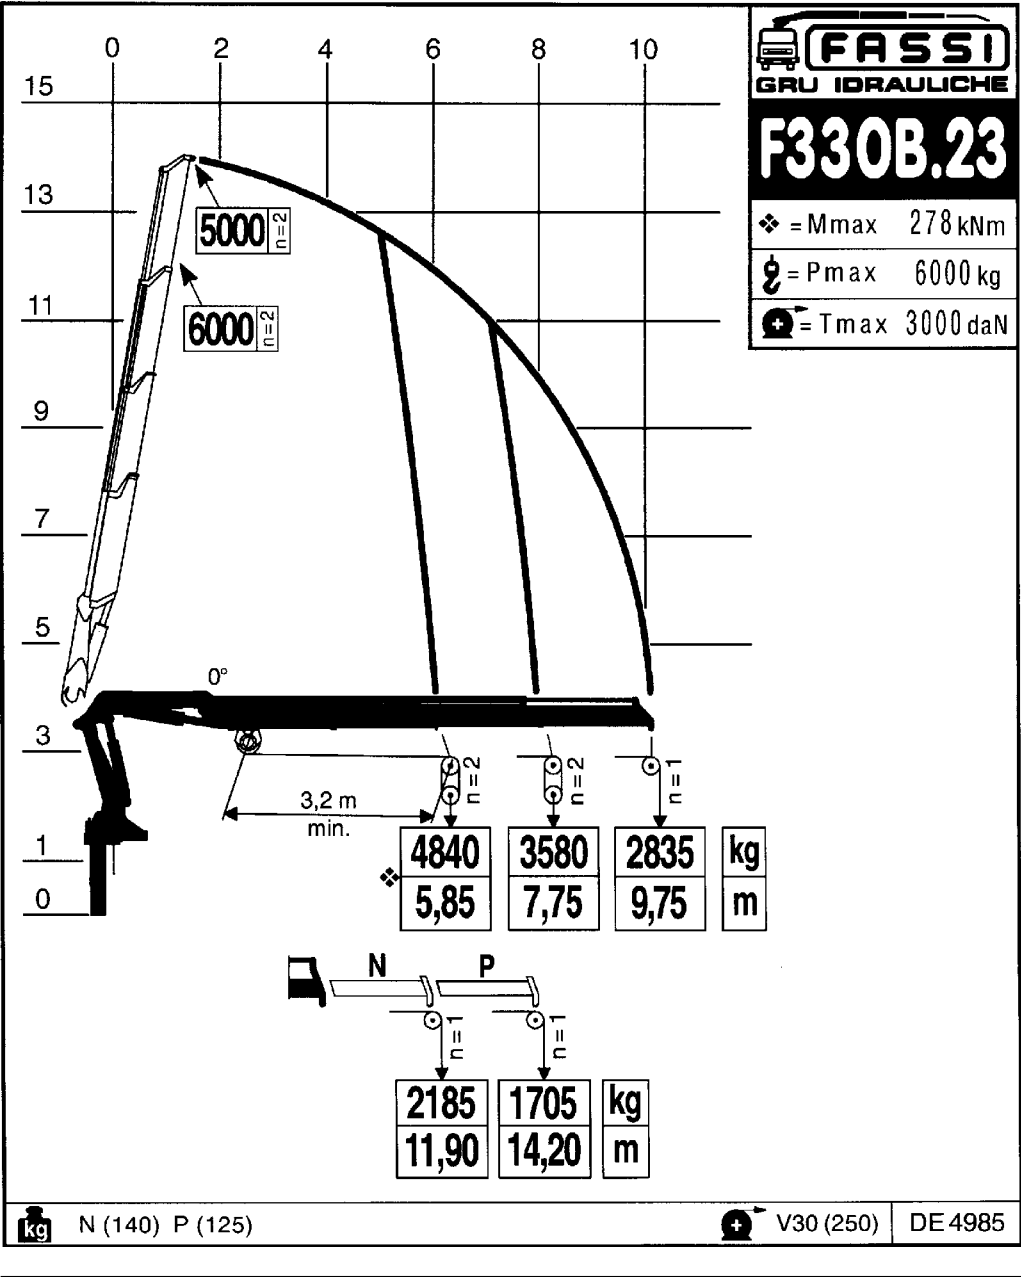



3.1-2 Capacity plates with load limiting device

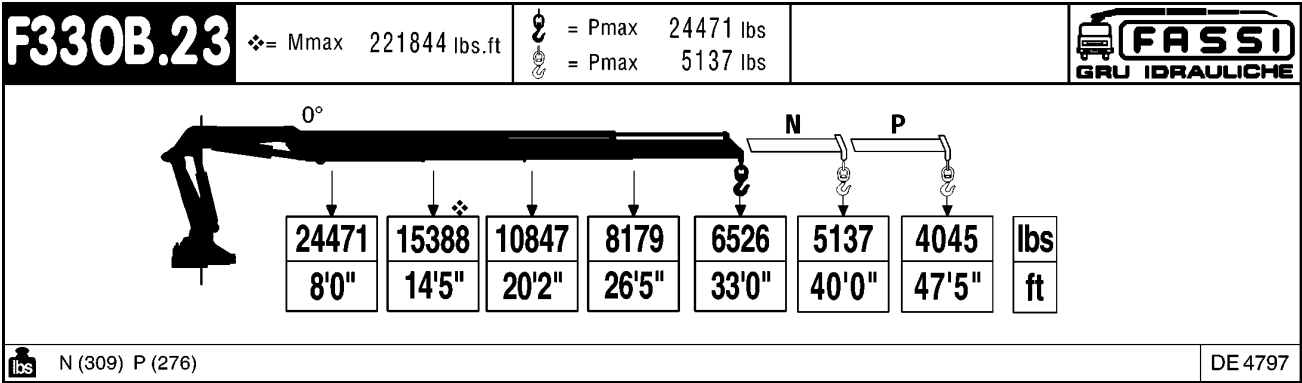
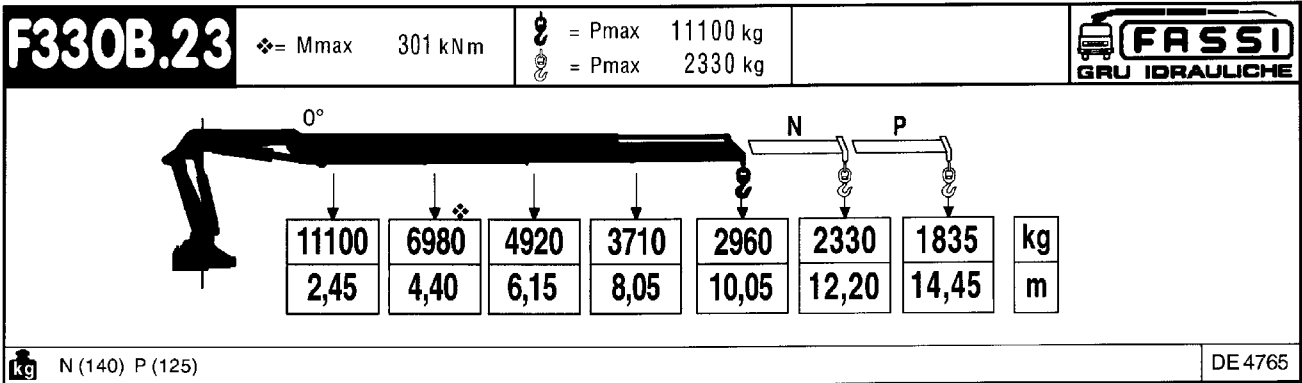




3.1-2

CAPACITY PLATES
F 330B.23

3.1-2 Capacity plates with load limiting device

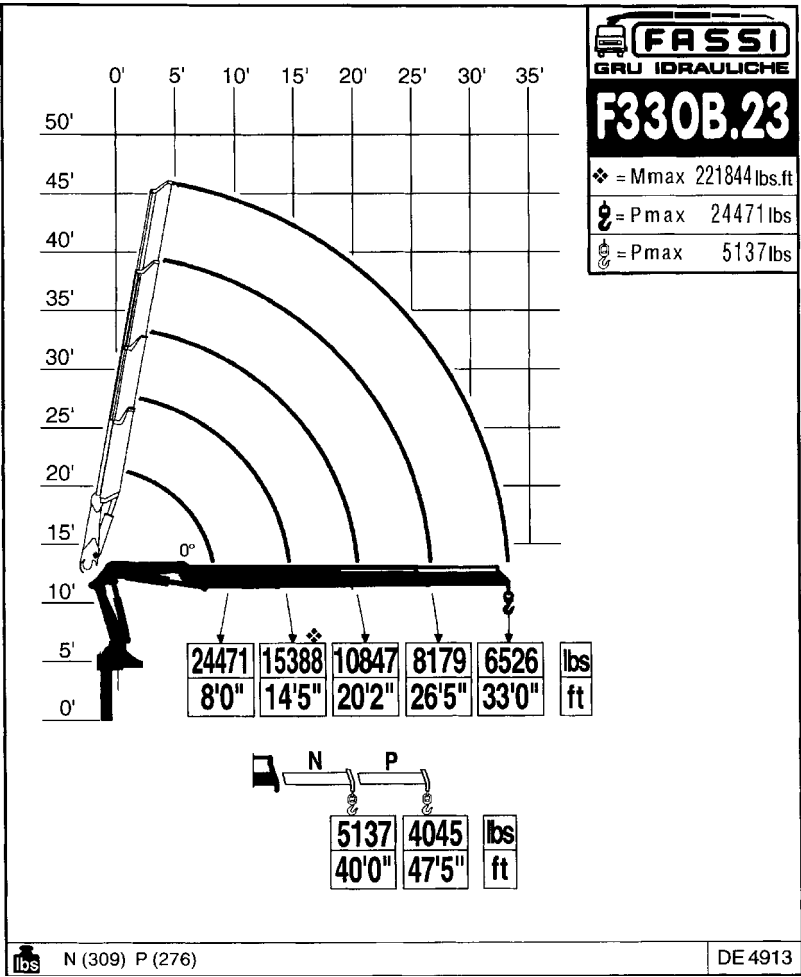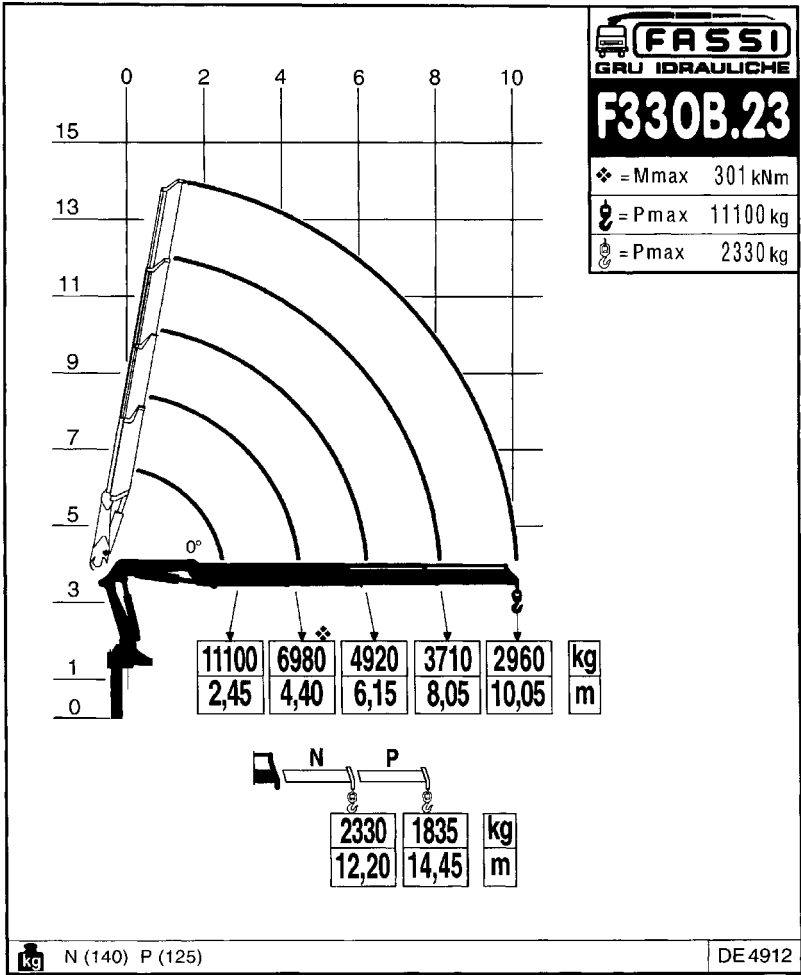

FASSI




4

HYDRAULIC SCHEMATICS
(version with lifting moment limiting device)

HYDRAULIC
SCHEMATICS
GR4_330

4

Hydraulic schematic for crane - HCD4 distributor - ground controls - “electronic” lifting moment limiting device - from serial number *4001*

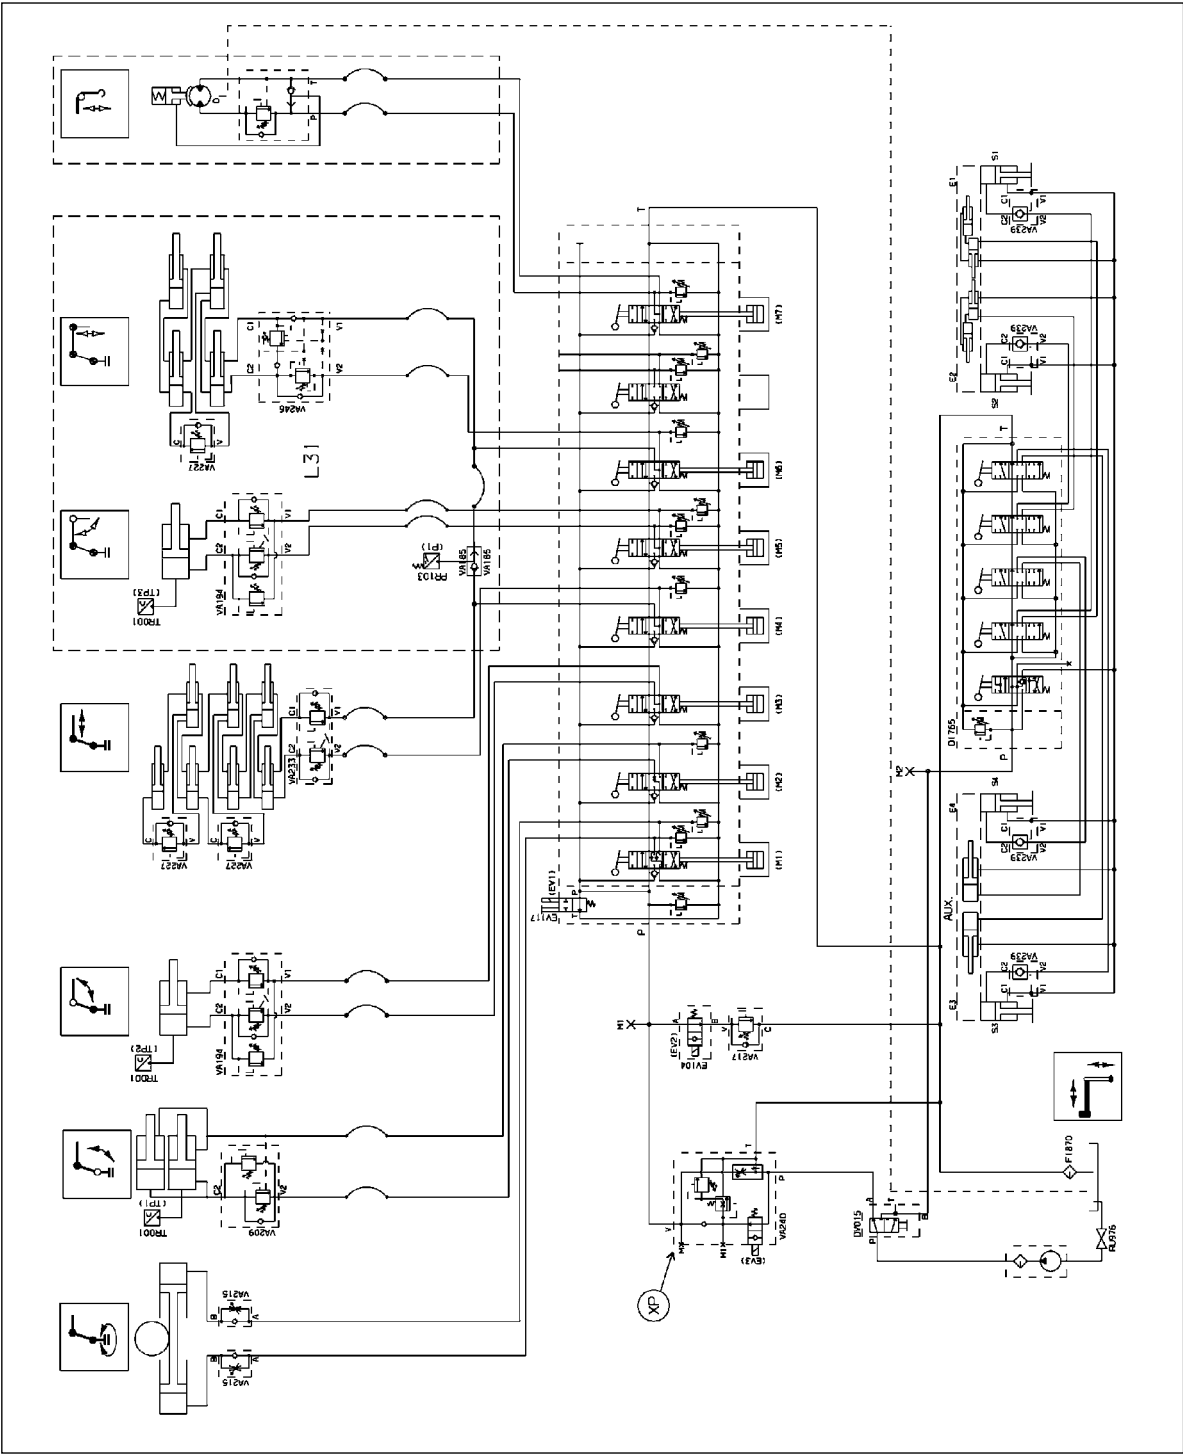


CODE	DESCRIPTION		
DI765	DISTRIBUTOR	VA194	DOUBLE EFFECT BLOCK VALVE
DV015	DEVIATOR	VA209	SIMPLE EFFECT BLOCK VALVE
EV104	ELECTROVALVE	VA215	OIL FLOW CHECK VALVE
EV117	ELECTROVALVE	VA217	SEQUENCE VALVE
FI870	FILTER	VA227	SEQUENCE VALVE
M1/M2	GAUGE QUICK CONNECTION	VA233	DOUBLE EFFECT BLOCK VALVE
PR103	PRESSURE SWITCH	VA239	SIMPLE EFFECT BLOCK VALVE
RU976	FAUCET	VA246	REGENERATIVE VALVE
TR001	PRESSURE TRANSDUCER	XP	
VA185	SELECTOR VALVE	VA240	"XP" VALVE



4 HYDRAULIC
SCHEMATICS
GR4_330

Hydraulic schematic for crane - HCD4 distributor - ground controls - "electronic" lifting moment limiting device - from serial number *4347*

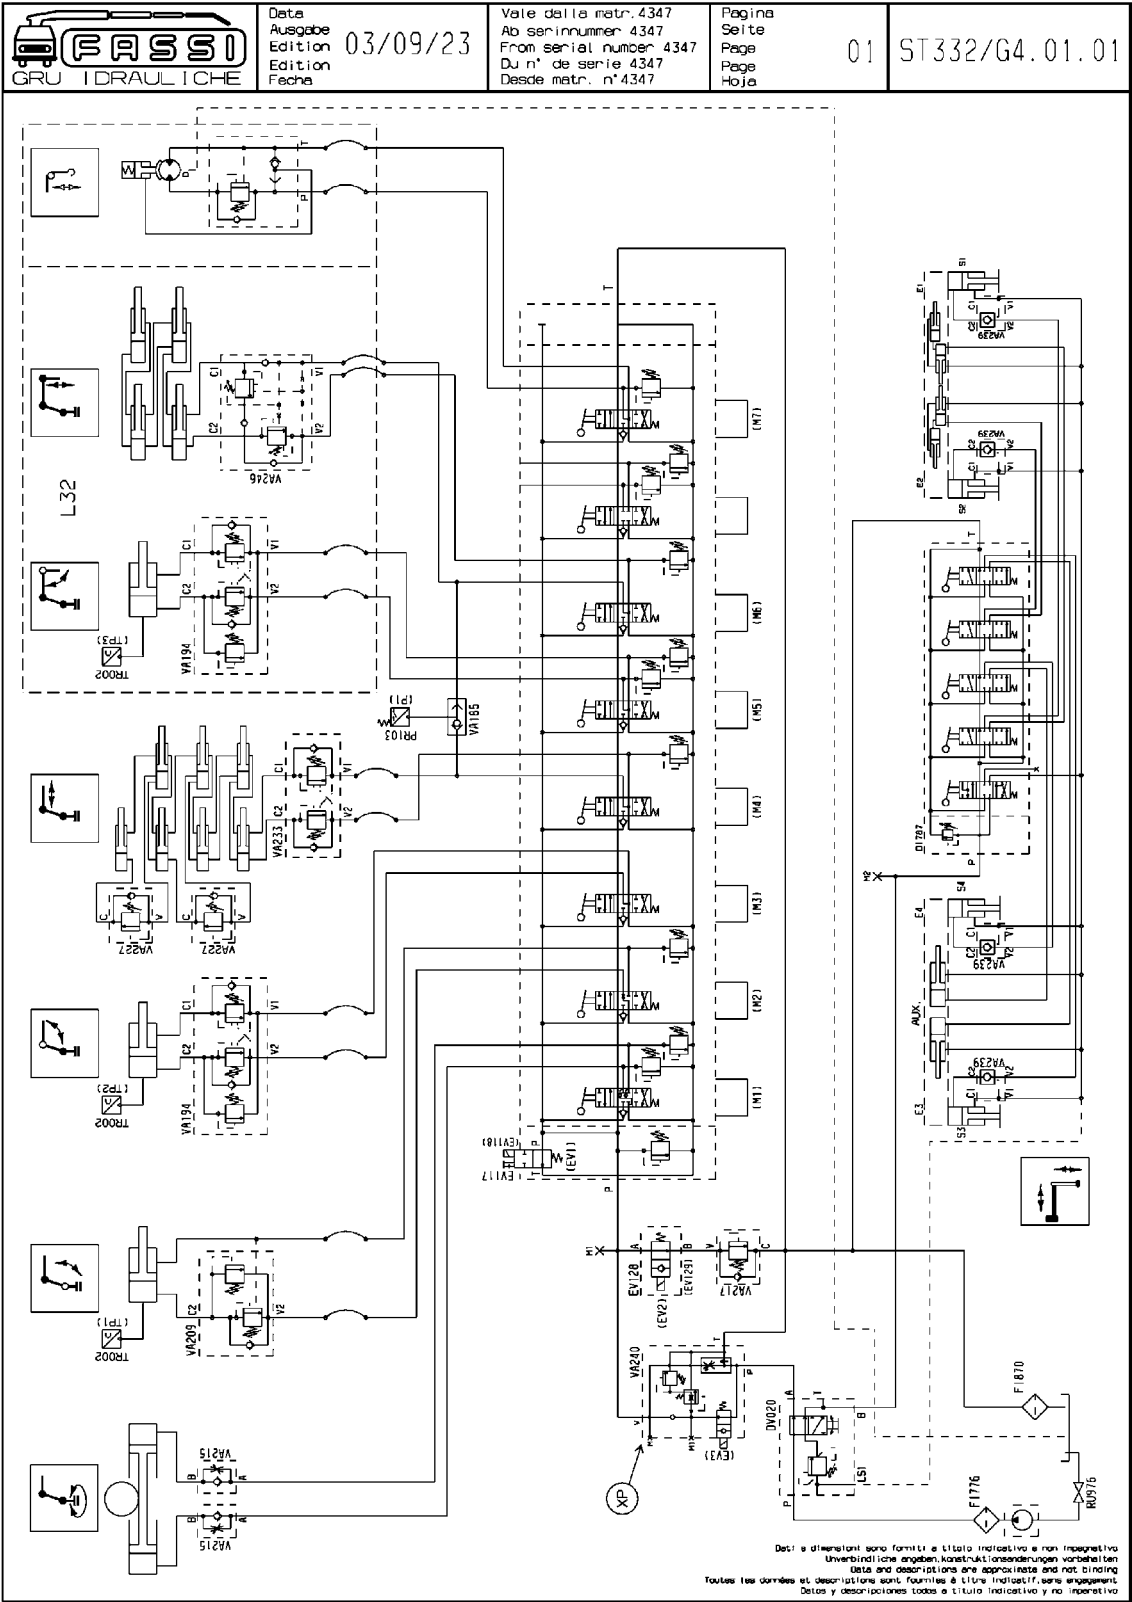


CODE DESCRIPTION

DI787	DISTRIBUTOR	VA194	DOUBLE EFFECT BLOCK VALVE
DV020	DEVIATOR	VA209	SIMPLE EFFECT BLOCK VALVE
EV128	ELECTROVALVE	VA215	OIL FLOW CHECK VALVE
EV117	ELECTROVALVE	VA217	SEQUENCE VALVE
FI870	FILTER	VA227	SEQUENCE VALVE
M1/M2	GAUGE QUICK CONNECTION	VA233	DOUBLE EFFECT BLOCK VALVE
PR103	PRESSURE SWITCH	VA239	SIMPLE EFFECT BLOCK VALVE
RU976	FAUCET	VA246	REGENERATIVE VALVE
TR002	PRESSURE TRANSDUCER	XP	
VA185	SELECTOR VALVE	VA240	"XP" VALVE



Hydraulic schematic for crane - HCD4 distributor - top seat controls - “electronic” lifting moment limiting device - from serial number *4001*

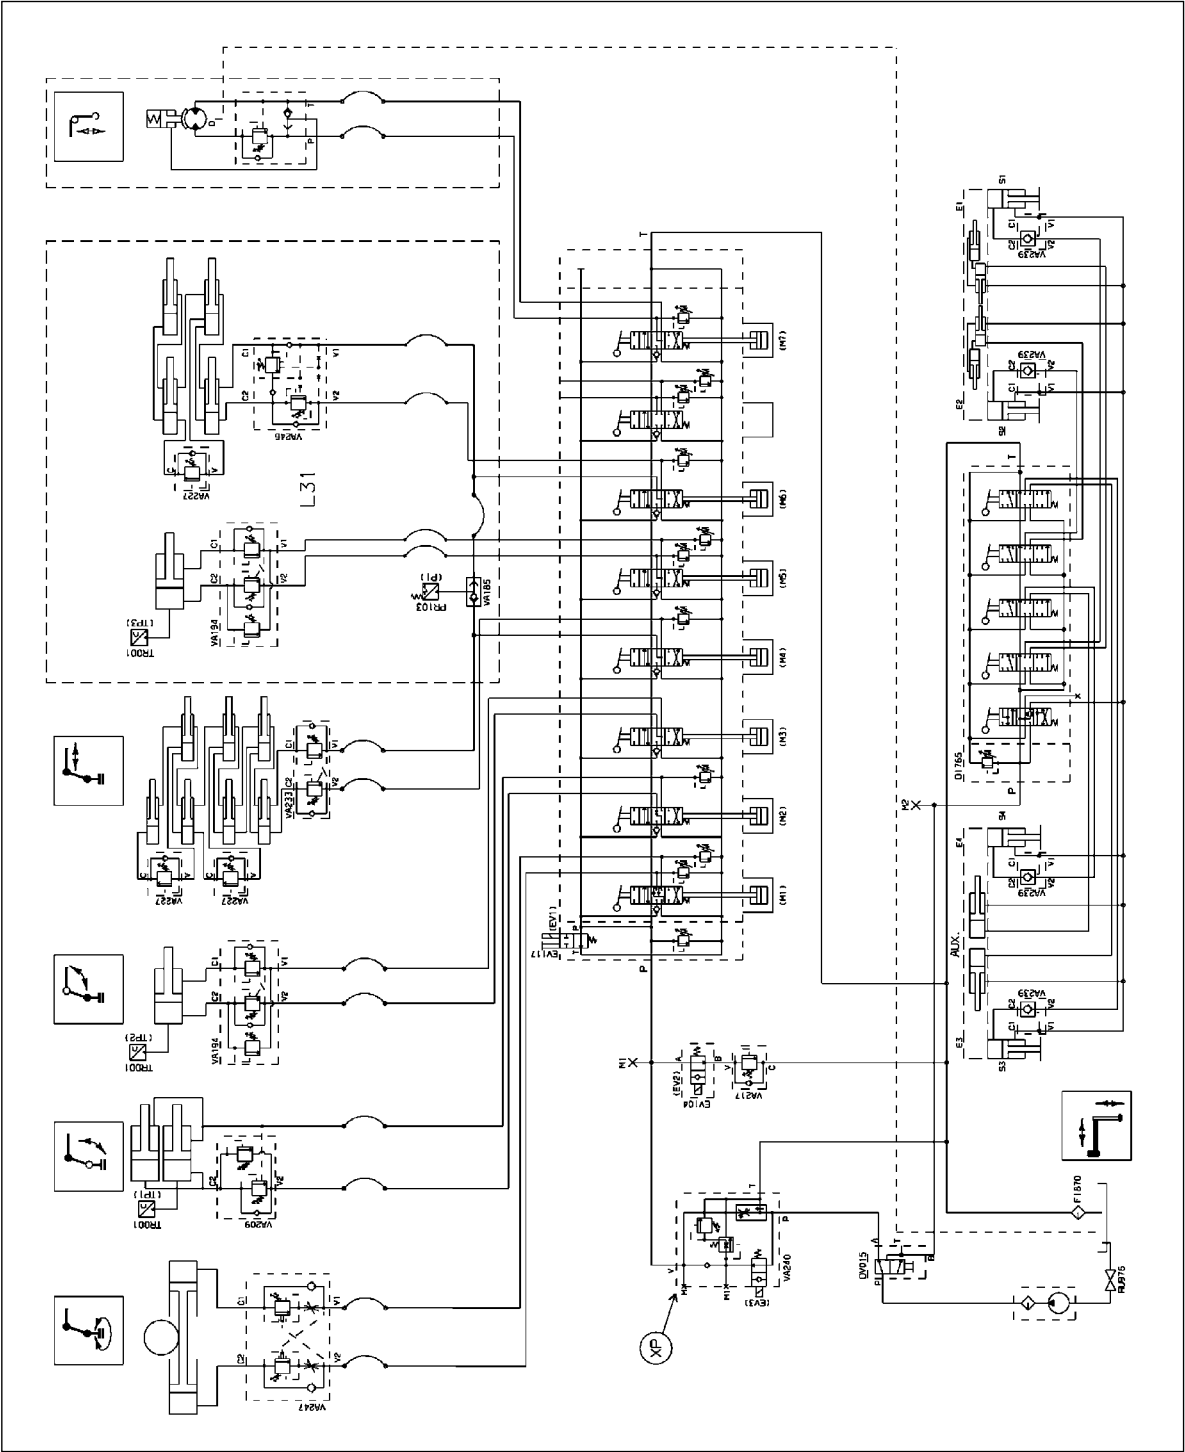


CODE	DESCRIPTION		
DI765	DISTRIBUTOR	VA209	SIMPLE EFFECT BLOCK VALVE
DV015	DEVIATOR	VA217	SEQUENCE VALVE
EV104	ELECTROVALVE	VA227	SEQUENCE VALVE
EV117	ELECTROVALVE	VA233	DOUBLE EFFECT BLOCK VALVE
FI870	FILTER	VA239	SIMPLE EFFECT BLOCK VALVE
M1/M2	GAUGE QUICK CONNECTION	VA246	REGENERATIVE VALVE
PR103	PRESSURE SWITCH	VA247	OIL FLOW REGULATOR VALVE FOR ROTATION CYLINDER
RU976	FAUCET	XP	
TR001	PRESSURE TRANSDUCER	VA240	"XP" VALVE
VA185	SELECTOR VALVE		
VA194	DOUBLE EFFECT BLOCK VALVE		



4 HYDRAULIC
SCHEMATICS
GR4_330

Hydraulic schematic for crane - HCD4 distributor - top seat controls - "electronic" lifting moment limiting device - from serial number *4347*

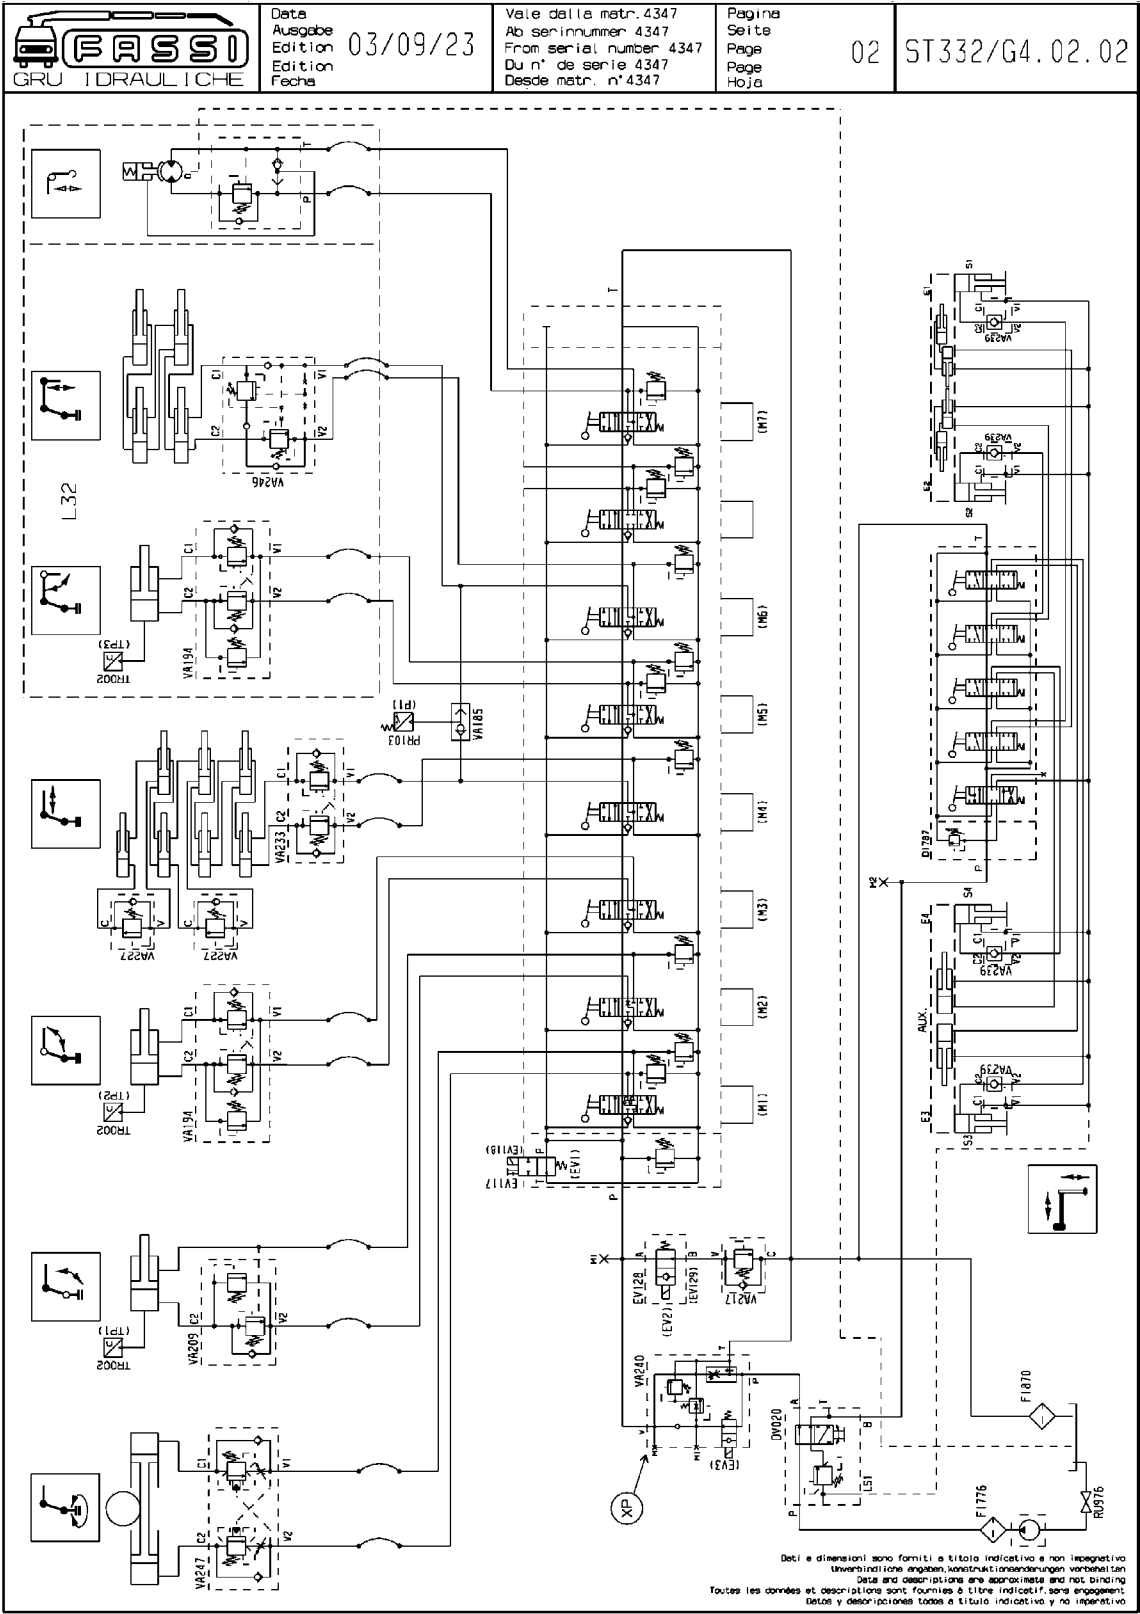


CODE	DESCRIPTION		
DI787	DISTRIBUTOR	VA194	DOUBLE EFFECT BLOCK VALVE
DV020	DEVIATOR	VA209	SIMPLE EFFECT BLOCK VALVE
EV128	ELECTROVALVE	VA217	SEQUENCE VALVE
EV117	ELECTROVALVE	VA227	SEQUENCE VALVE
FI870	FILTER	VA233	DOUBLE EFFECT BLOCK VALVE
M1/M2	GAUGE QUICK CONNECTION	VA239	SIMPLE EFFECT BLOCK VALVE
PR103	PRESSURE SWITCH	VA246	REGENERATIVE VALVE
RU976	FAUCET	VA247	OIL FLOW REGULATOR VALVE FOR ROTATION CYLINDER
TR002	PRESSURE TRANSDUCER	XP	
VA185	SELECTOR VALVE	VA240	"XP" VALVE





Hydraulic schematic for crane - Danfoss distributor - "electronic" lifting moment limiting device - from serial number *4001*

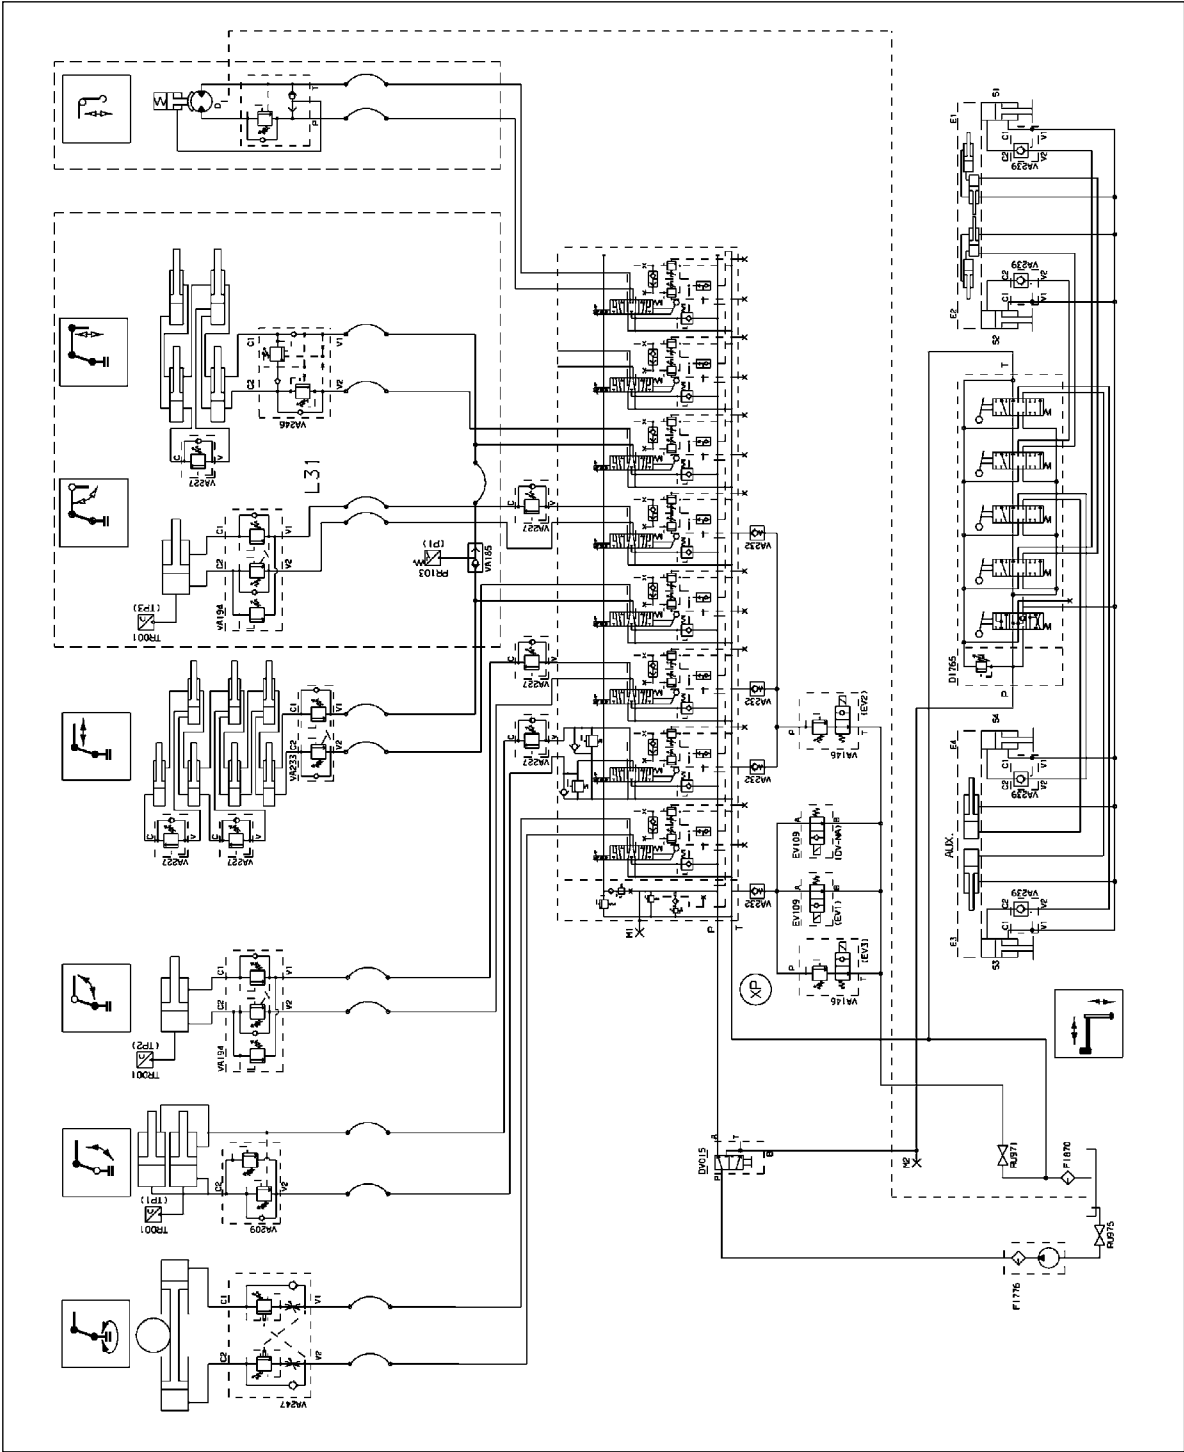


CODE	DESCRIPTION	
DI765	DISTRIBUTOR	VA194 DOUBLE EFFECT BLOCK VALVE
DV015	DEVIATOR	VA209 SIMPLE EFFECT BLOCK VALVE
EV109	ELECTROVALVE	VA227 SEQUENCE VALVE
FI776	FILTER	VA232 UNIDIRECTIONAL VALVE
FI870	FILTER	VA233 DOUBLE EFFECT BLOCK VALVE
M1/M2	GAUGE QUICK CONNECTION	VA239 SIMPLE EFFECT BLOCK VALVE
PR103	PRESSURE SWITCH	VA246 REGENERATIVE VALVE
RU971	FAUCET	VA247 OIL FLOW REGULATOR VALVE FOR ROTATION CYLINDER
RU975	FAUCET	
TR001	PRESSURE TRANSDUCER	XP
VA146	ELECTRIC MAIN WITH BY PASS VALVE	VA146 ELECTRIC MAIN WITH BY PASS VALVE
VA185	SELECTOR VALVE	



4 HYDRAULIC SCHEMATICS
GR4_330

Hydraulic schematic for crane - Danfoss distributor - “electronic” lifting moment limiting device - from serial number *4268*

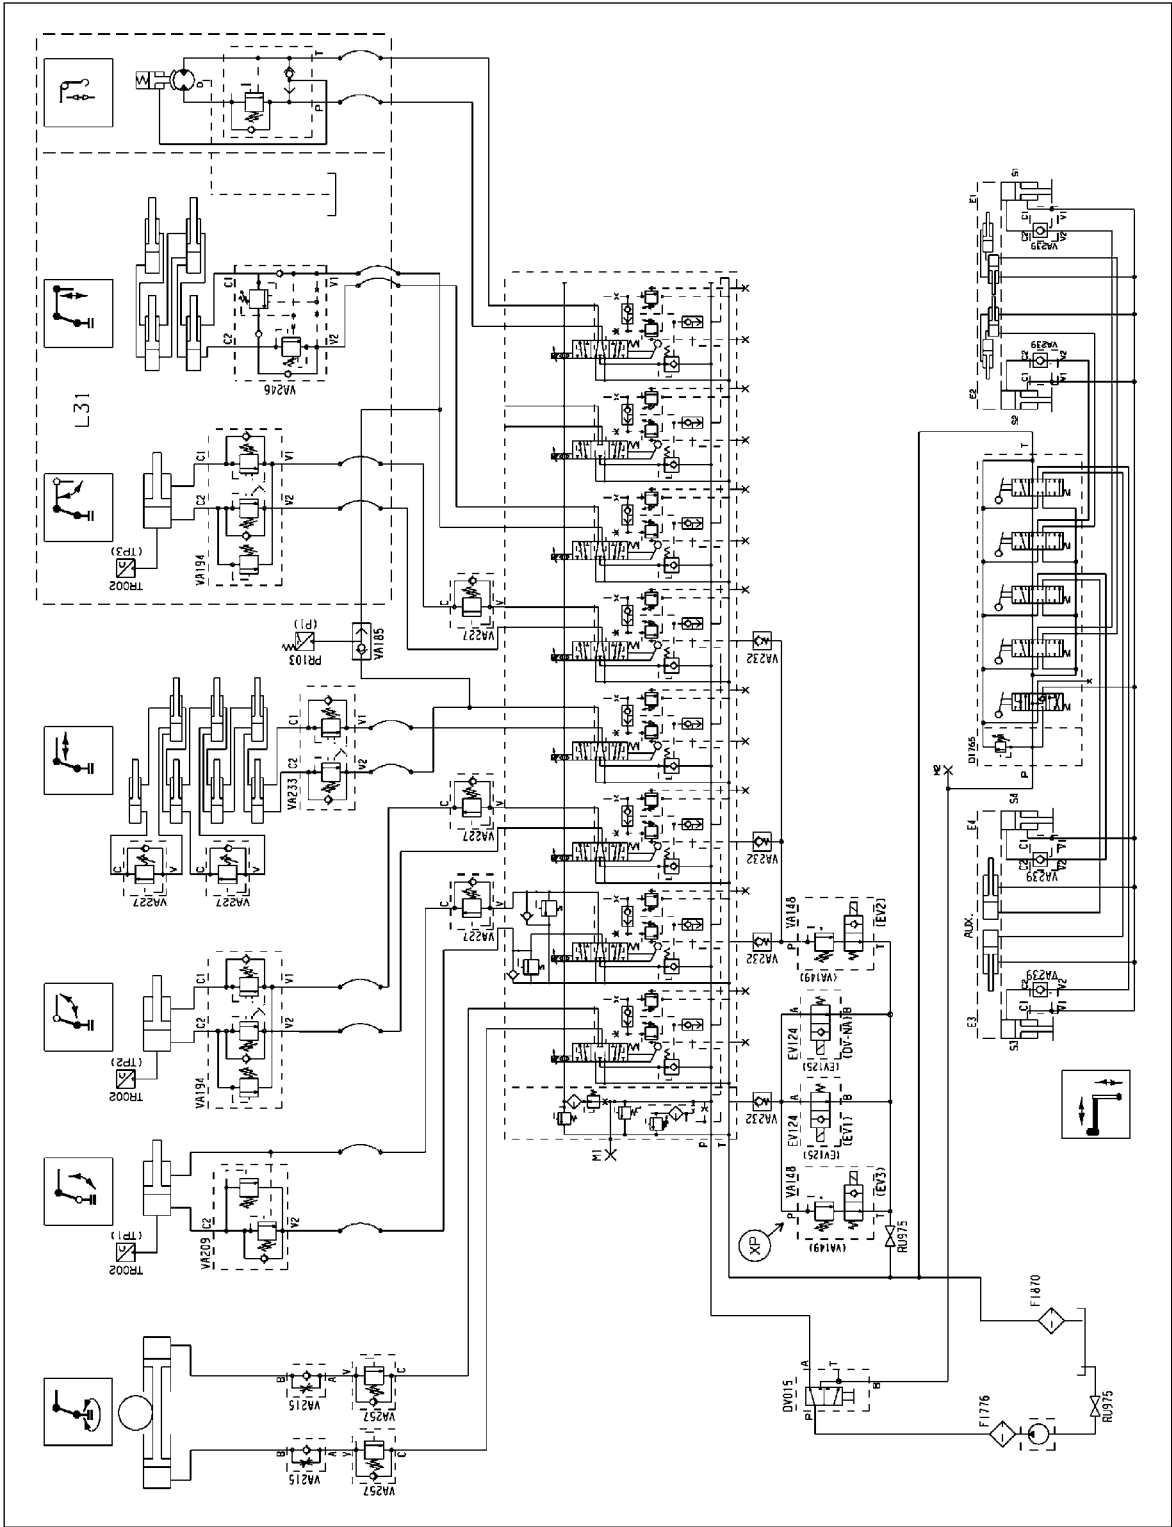


CODE	DESCRIPTION	
DI765	DISTRIBUTOR	VA185
DV015	DEVIATOR	VA194
EV124	ELECTROVALVE	VA209
F1776	FILTER	VA227
F1870	FILTER	VA232
M1/M2	GAUGE QUICK CONNECTION	VA233
PR103	PRESSURE SWITCH	VA239
RU971	FAUCET	VA246
RU975	FAUCET	VA215
TR002	PRESSURE TRANSDUCER	VA257
VA148	ELECTRIC MAIN WITH BY PASS VALVE	

Hydraulic schematic for crane - Danfoss distributor - "electronic" lifting moment limiting device - from serial number *4347*


HYDRAULIC SCHEMATICS **4**
GR4 330

△

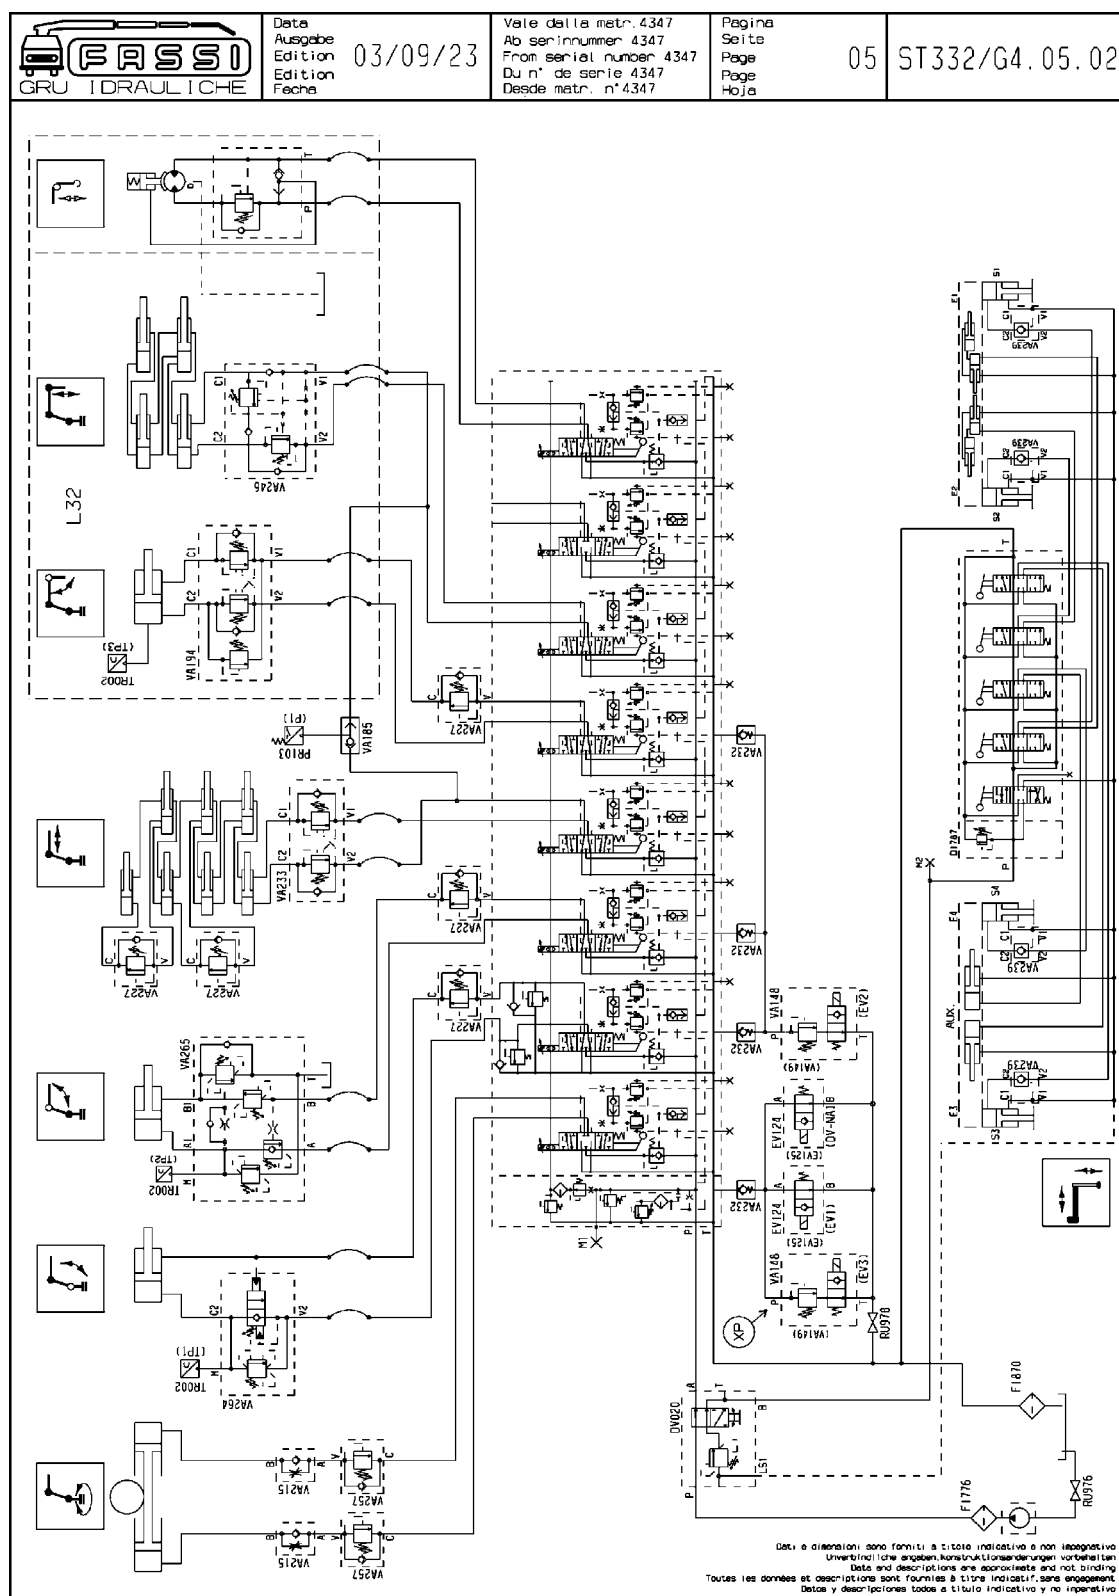

<i>CODE</i>	<i>DESCRIPTION</i>
DI787	DISTRIBUTOR
DV020	DEVIATOR
EV124	ELECTROVALVE
FI776	FILTER
FI870	FILTER
M1/M2	GAUGE QUICK CONNECTION
PR103	PRESSURE SWITCH
RU976	FAUCET
RU978	FAUCET
TR002	PRESSURE TRANSDUCER
VA148	ELECTRIC MAIN WITH BY PASS VALVE

VA185	SELECTOR VALVE
VA215	OIL FLOW CHECK VALVE
VA227	SEQUENCE VALVE
VA232	UNIDIRECTIONAL VALVE
VA233	DOUBLE EFFECT BLOCK VALVE
VA239	SIMPLE EFFECT BLOCK VALVE
VA246	REGENERATIVE VALVE
VA257	SEQUENCE VALVE
VA264	SIMPLE EFFECT BLOCK VALVE
VA265	DOUBLE EFFECT BLOCK VALVE

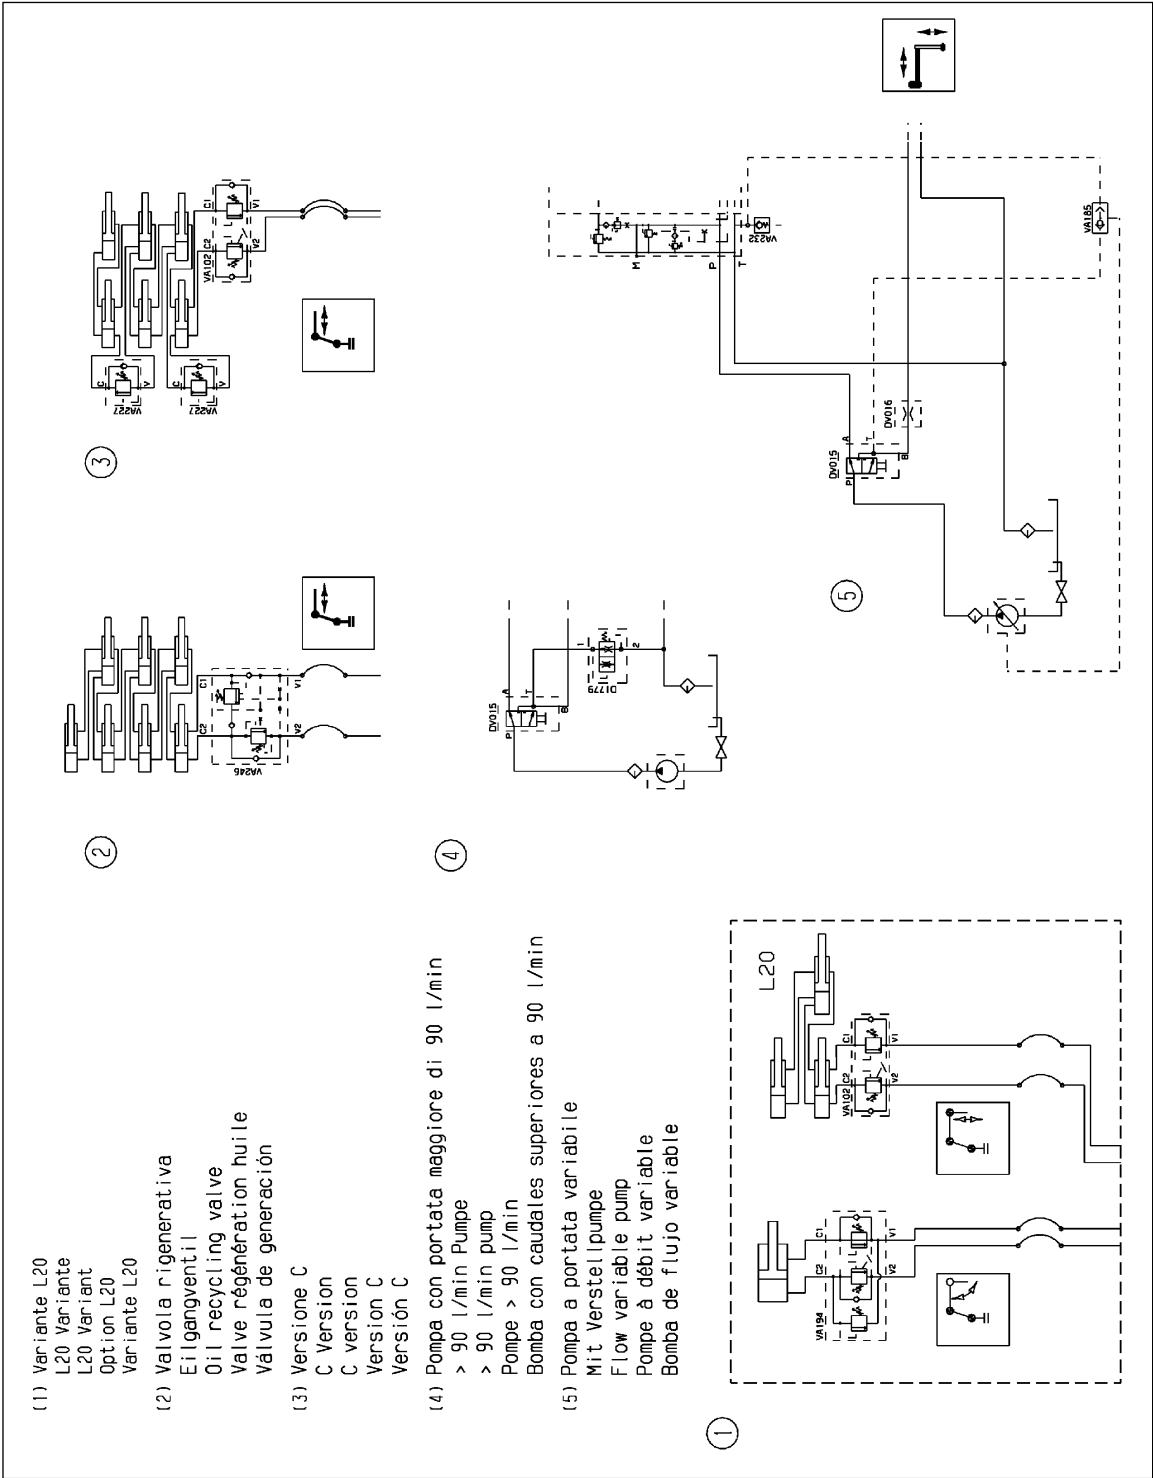


CODE	DESCRIPTION
DI779	COMPENSATED FLOW CONTROL VALVE
DV015	DEVIATOR
DV016	FLOW REGULATOR VALVE
VA102	DOUBLE EFFECT BLOCK VALVE
VA185	SELECTOR VALVE
VA194	DOUBLE EFFECT BLOCK VALVE
VA227	SEQUENCE VALVE
VA232	UNIDIRECTIONAL VALVE
VA246	REGENERATIVE VALVE

Hydraulic schematic for crane - versions - from serial number *4347*

HYDRAULIC SCHEMATICS **4**
GR4 330

△

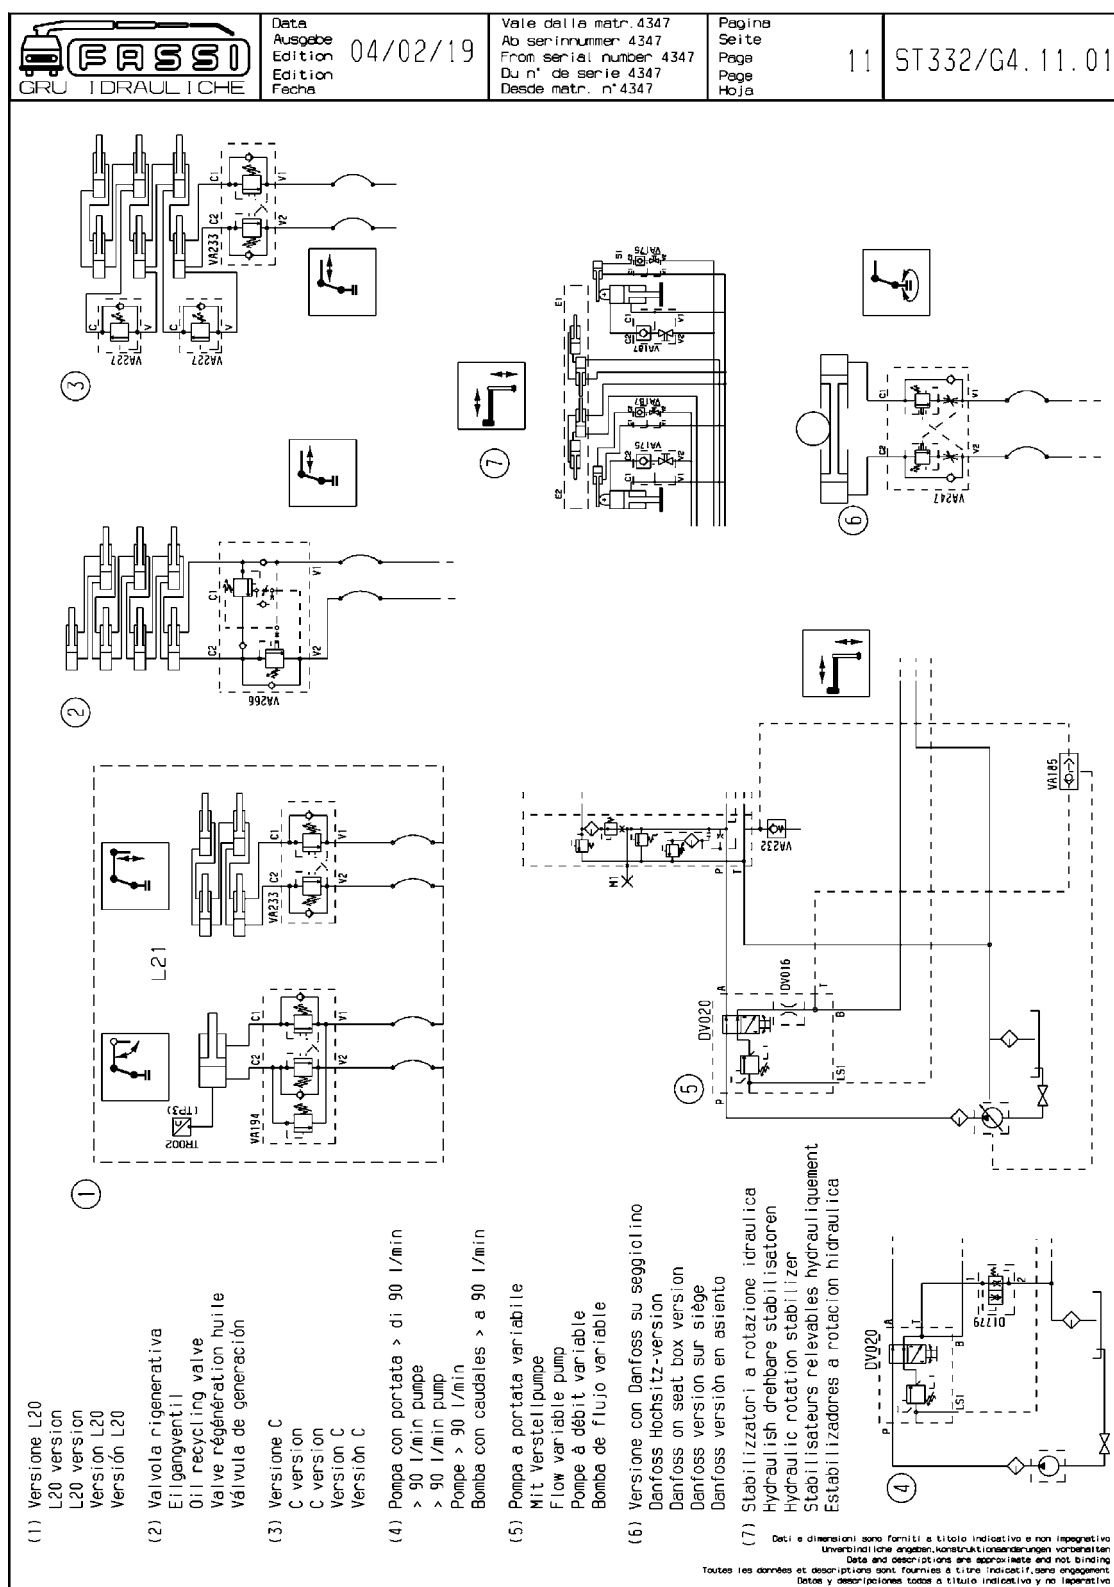


CODE	DESCRIPTION
DI779	COMPENSATED FLOW CONTROL VALVE
DV020	DEVIATOR
DV016	FLOW REGULATOR VALVE
VA102	DOUBLE EFFECT BLOCK VALVE
VA185	SELECTOR VALVE
VA194	DOUBLE EFFECT BLOCK VALVE
VA227	SEQUENCE VALVE
VA232	NON RETURN VALVE
VA247	OIL FLOW REGULATOR VALVE FOR ROTATION CYLINDER
VA266	REGENERATIVE VALVE



4.1 HYDRAULIC SCHEMATICS (version with load limiting device)

HYDRAULIC SCHEMATICS **4.1**
GR4 330

Hydraulic schematic for crane - HCD4 distributor - ground controls - load limiting device - from s.n. *4001*

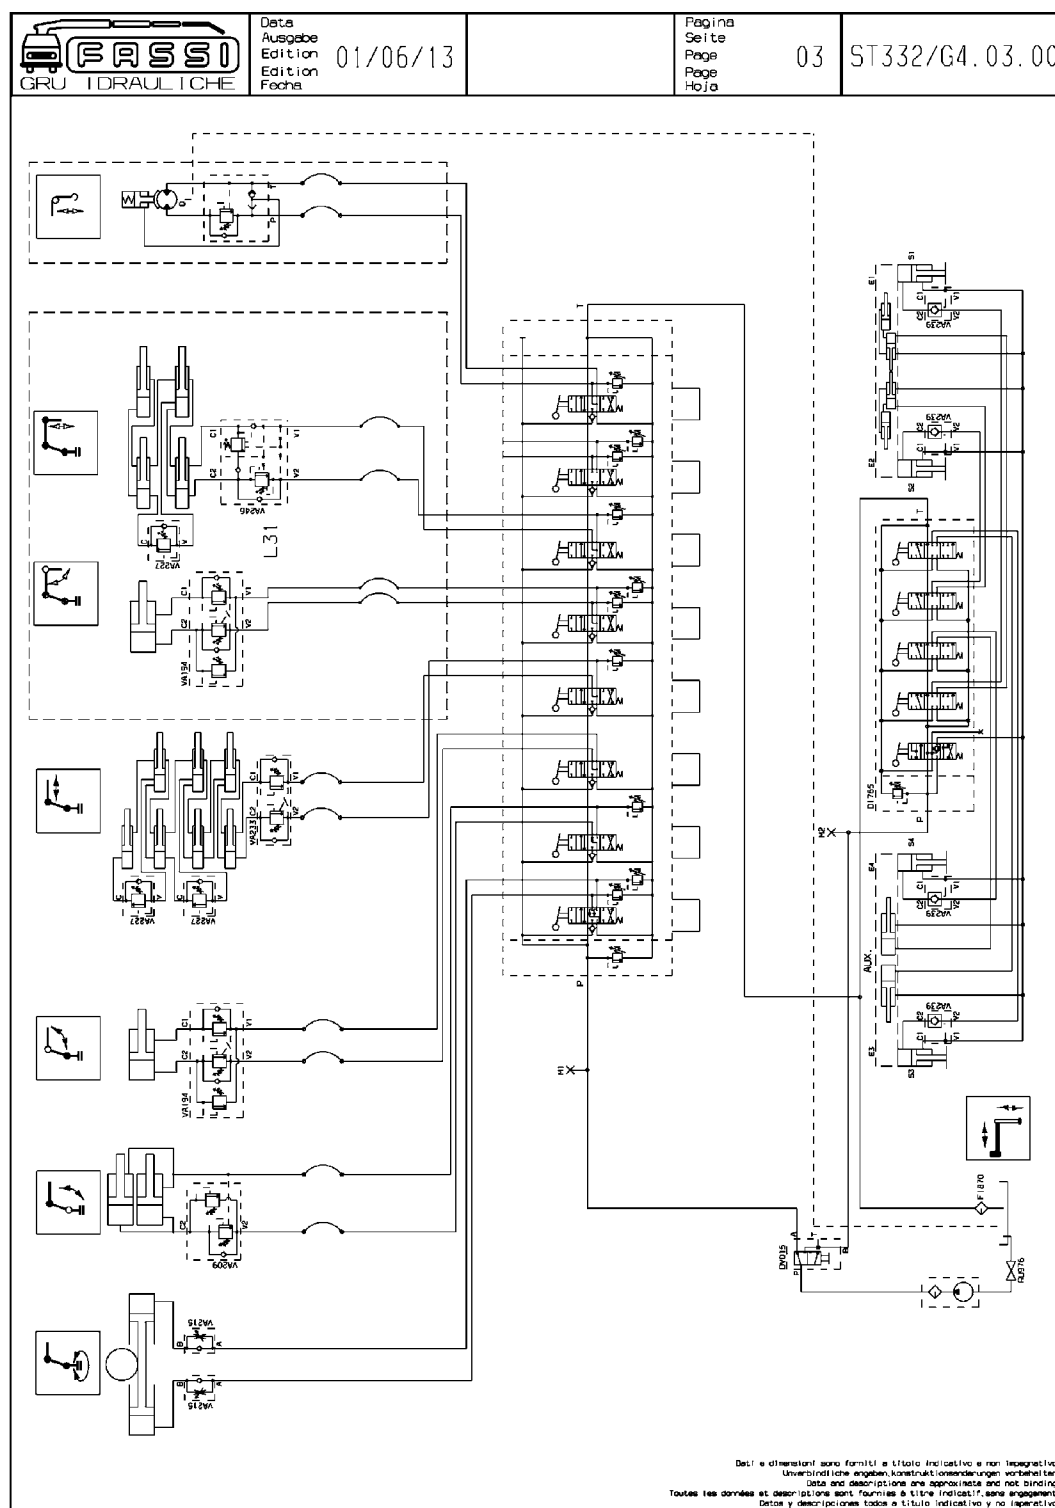


CODE	DESCRIPTION
DI765	DISTRIBUTOR
DV015	DEVIATOR
FI870	OIL FILTER (RETURN)
M1/M2	GAUGE QUICK CONNECTION
RU976	FAUCET
VA194	DOUBLE EFFECT BLOCK VALVE
VA209	SIMPLE EFFECT BLOCK VALVE
VA215	OIL FLOW CHECK VALVE
VA227	SEQUENCE VALVE
VA233	DOUBLE EFFECT BLOCK VALVE
VA239	SIMPLE EFFECT BLOCK VALVE
VA246	REGENERATIVE VALVE




4.1 HYDRAULIC SCHEMATICS GR4_330

Hydraulic schematic for crane - HCD4 distributor - top seat controls - load limiting device - from s.n. *4001*

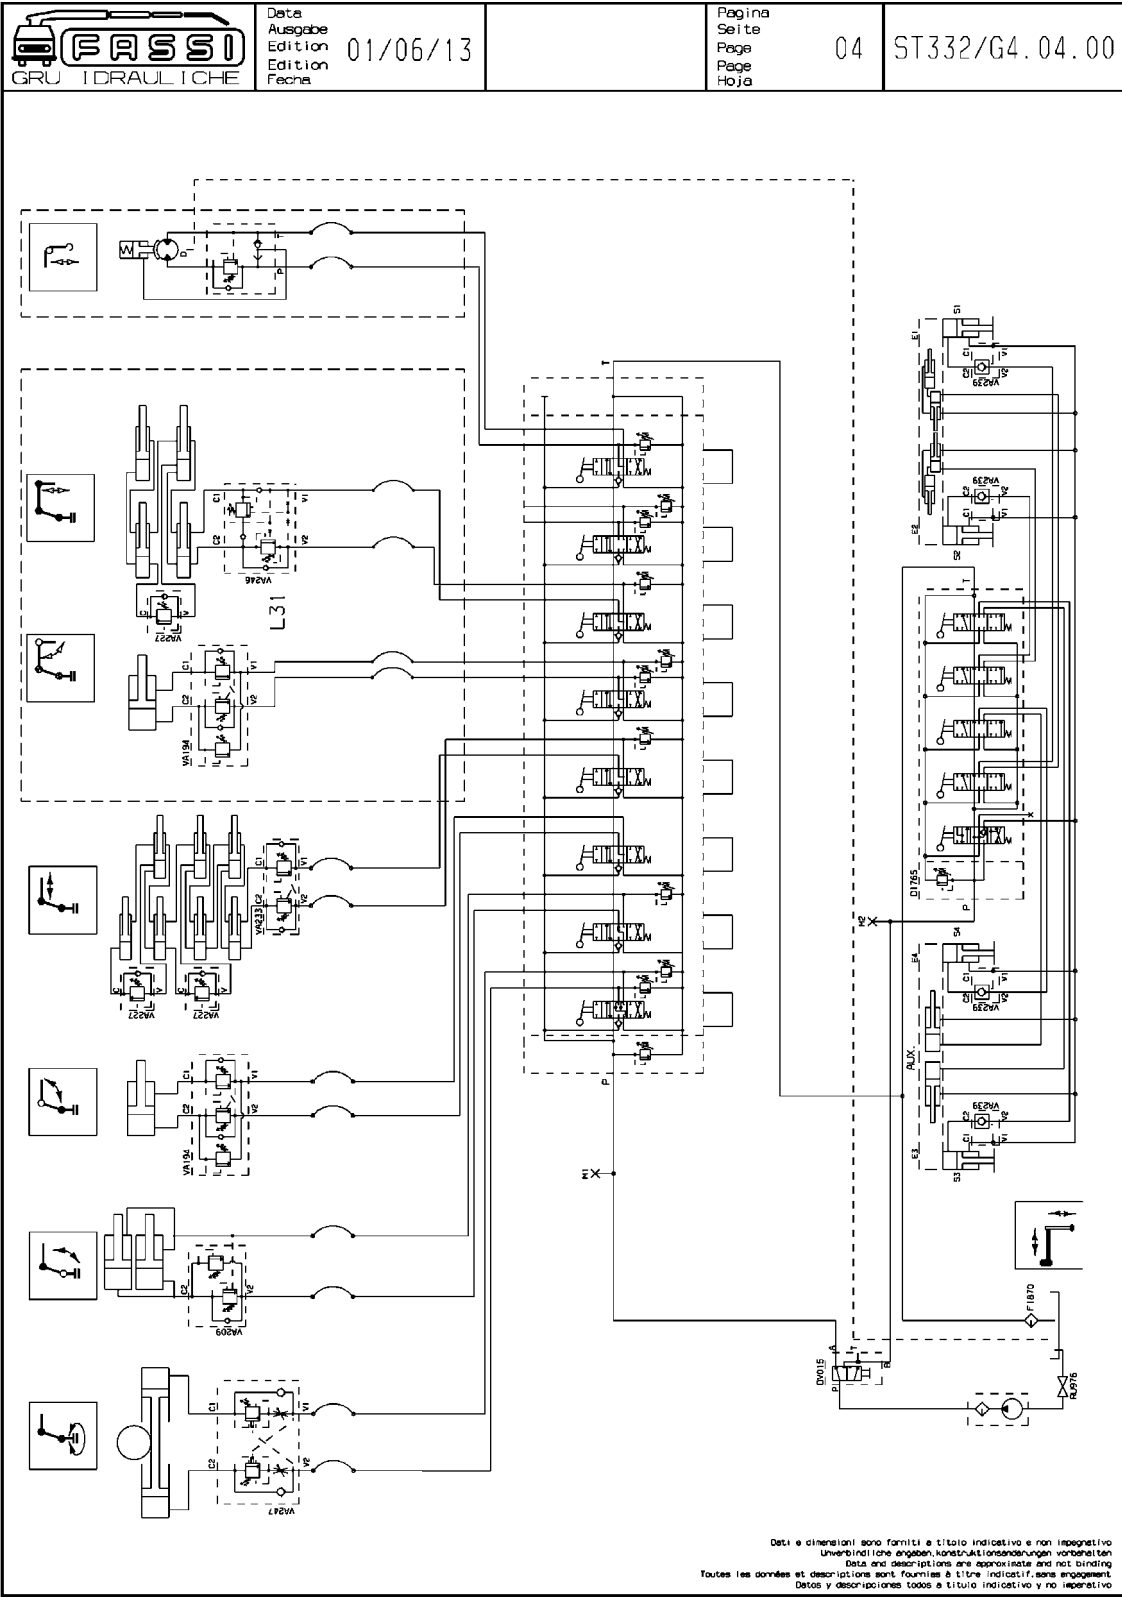


CODE	DESCRIPTION		
DI765	DISTRIBUTOR	VA233	DOUBLE EFFECT BLOCK VALVE
DV015	DEVIATOR	VA239	SIMPLE EFFECT BLOCK VALVE
FI870	OIL FILTER (RETURN)	VA246	REGENERATIVE VALVE
M1/M2	GAUGE QUICK CONNECTION	VA247	OIL FLOW REGULATOR VALVE FOR ROTATION CYLINDER
RU976	FAUCET		
VA194	DOUBLE EFFECT BLOCK VALVE		
VA209	SIMPLE EFFECT BLOCK VALVE		
VA227	SEQUENCE VALVE		

Hydraulic schematic for crane - Danfoss distributor - load limiting device - from s.n. *4001*

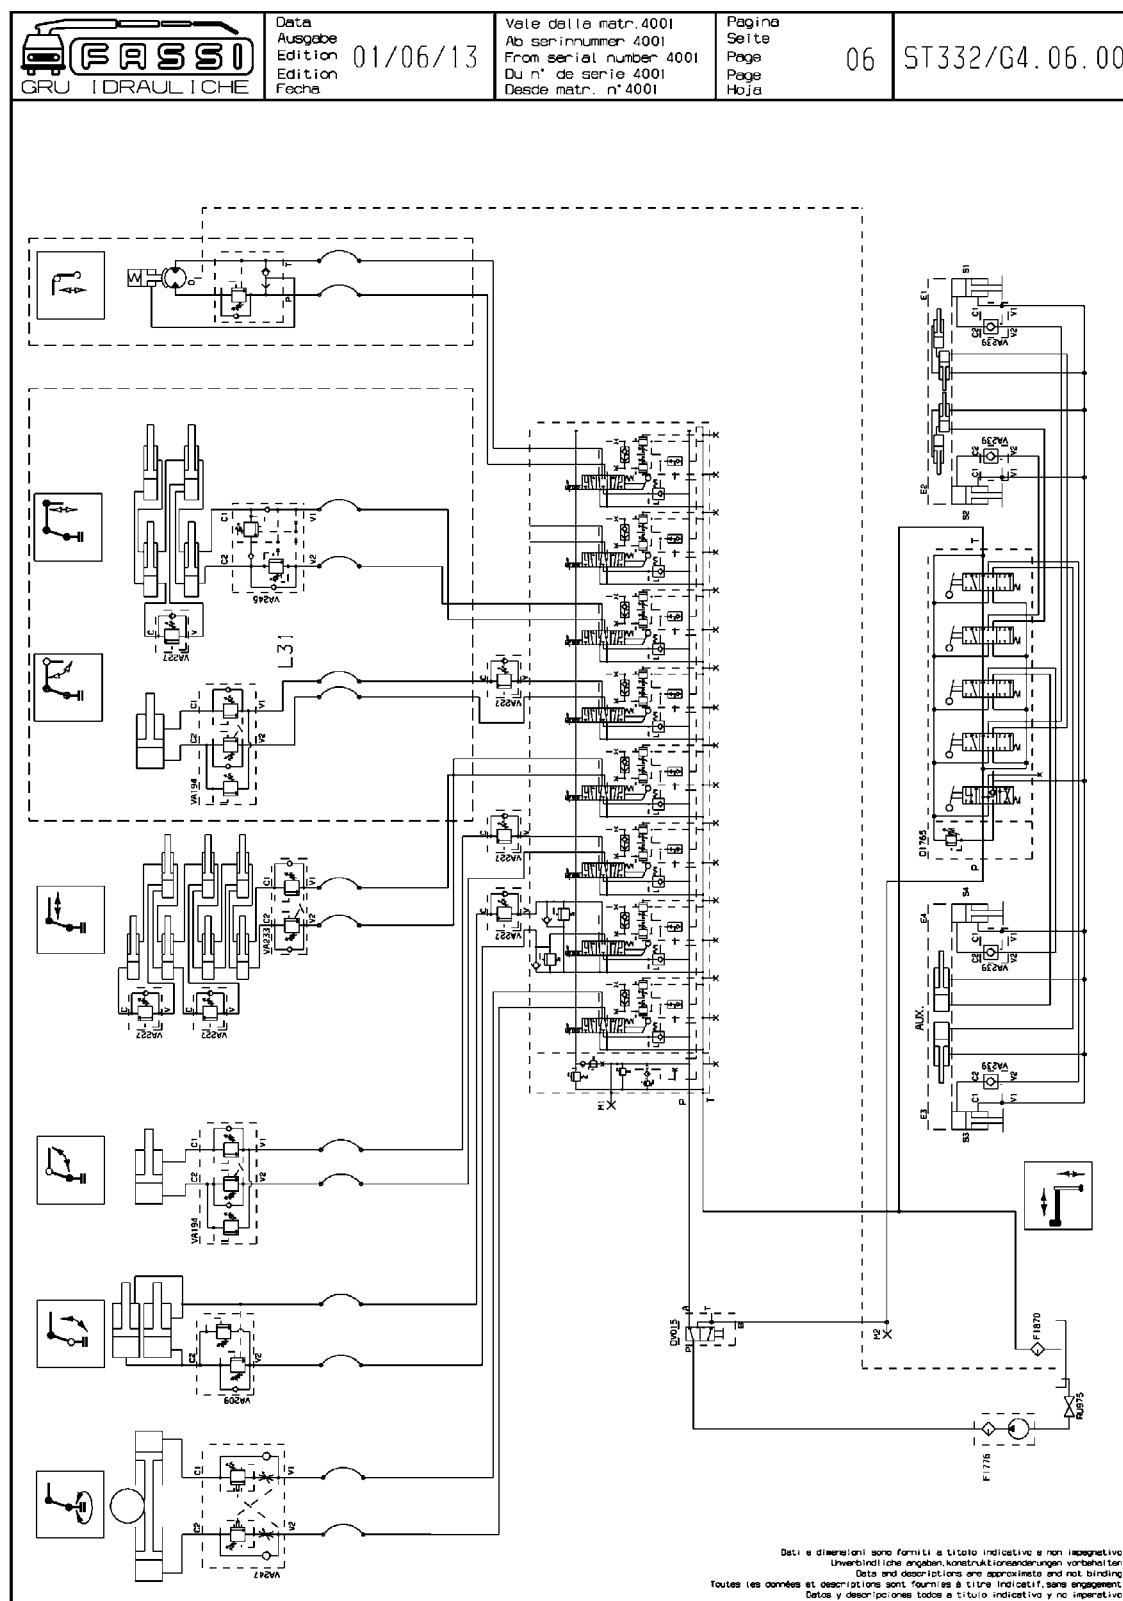HYDRAULIC SCHEMATICS **4.1**
GR4 330

CODE	DESCRIPTION
DI765	DISTRIBUTOR
DV015	DEVIATOR
FI776	OIL FILTER (HIGH PRESSURE)
FI870	OIL FILTER (RETURN)
M1/M2	GAUGE QUICK CONNECTION
RU975	FAUCET
VA246	REGENERATIVE VALVE
VA194	DOUBLE EFFECT BLOCK VALVE
VA209	SIMPLE EFFECT BLOCK VALVE
VA227	SEQUENCE VALVE
VA233	DOUBLE EFFECT BLOCK VALVE
VA239	SIMPLE EFFECT BLOCK VALVE
VA247	OIL FLOW REGULATOR VALVE FOR ROTATION CYLINDER

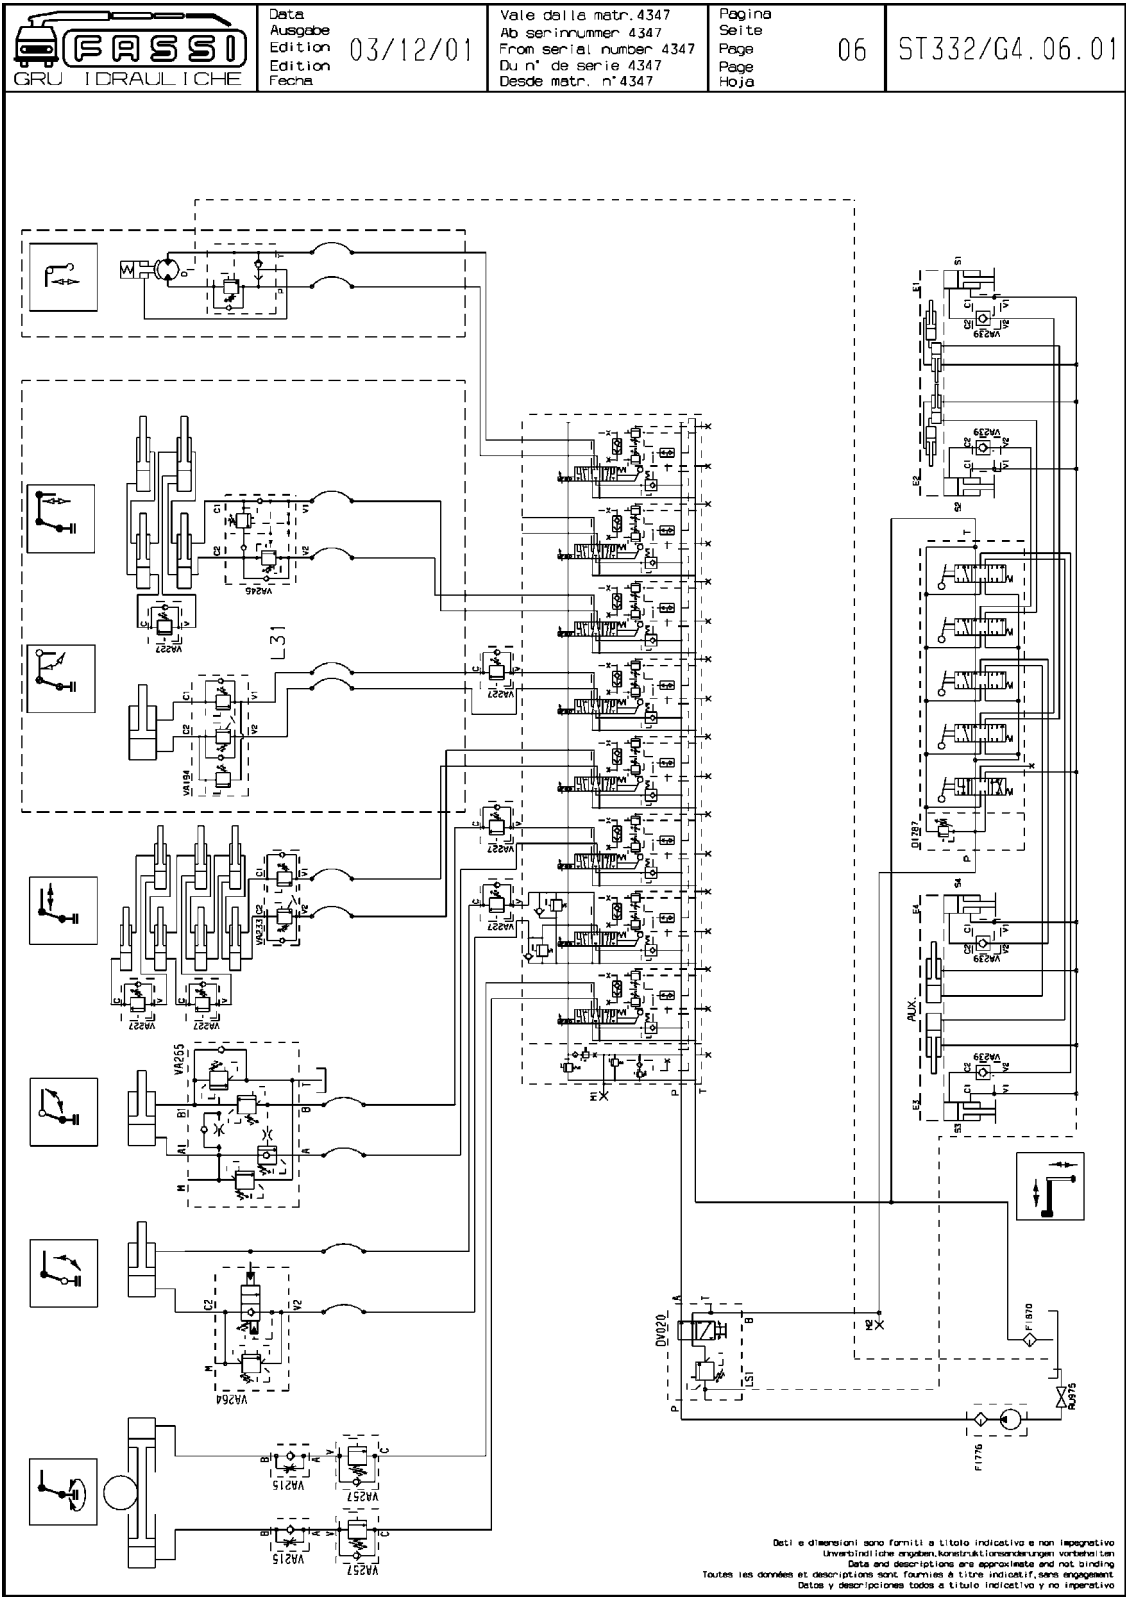

CODE	DESCRIPTION		
DI787	DISTRIBUTOR	VA233	DOUBLE EFFECT BLOCK VALVE
DV020	DEVIATOR	VA239	SIMPLE EFFECT BLOCK VALVE
F1776	OIL FILTER (HIGH PRESSURE)	VA246	REGENERATIVE VALVE
F1870	OIL FILTER (RETURN)	VA257	SEQUENCE VALVE
M1/M2	GAUGE QUICK CONNECTION	VA264	SIMPLE EFFECT BLOCK VALVE
RU975	FAUCET	VA265	DOUBLE EFFECT BLOCK VALVE
VA215	OIL FLOW CHECK VALVE		
VA227	SEQUENCE VALVE		





5 ELECTRIC SCHEMATICS

ELECTRIC SCHEMATICS

GR2_45»60_3_4_SE 5

Electric schematic for crane

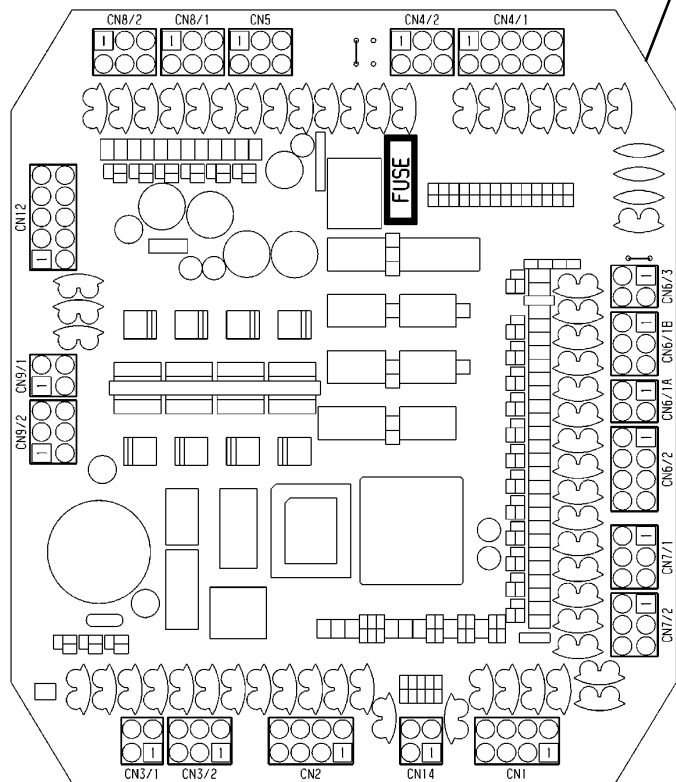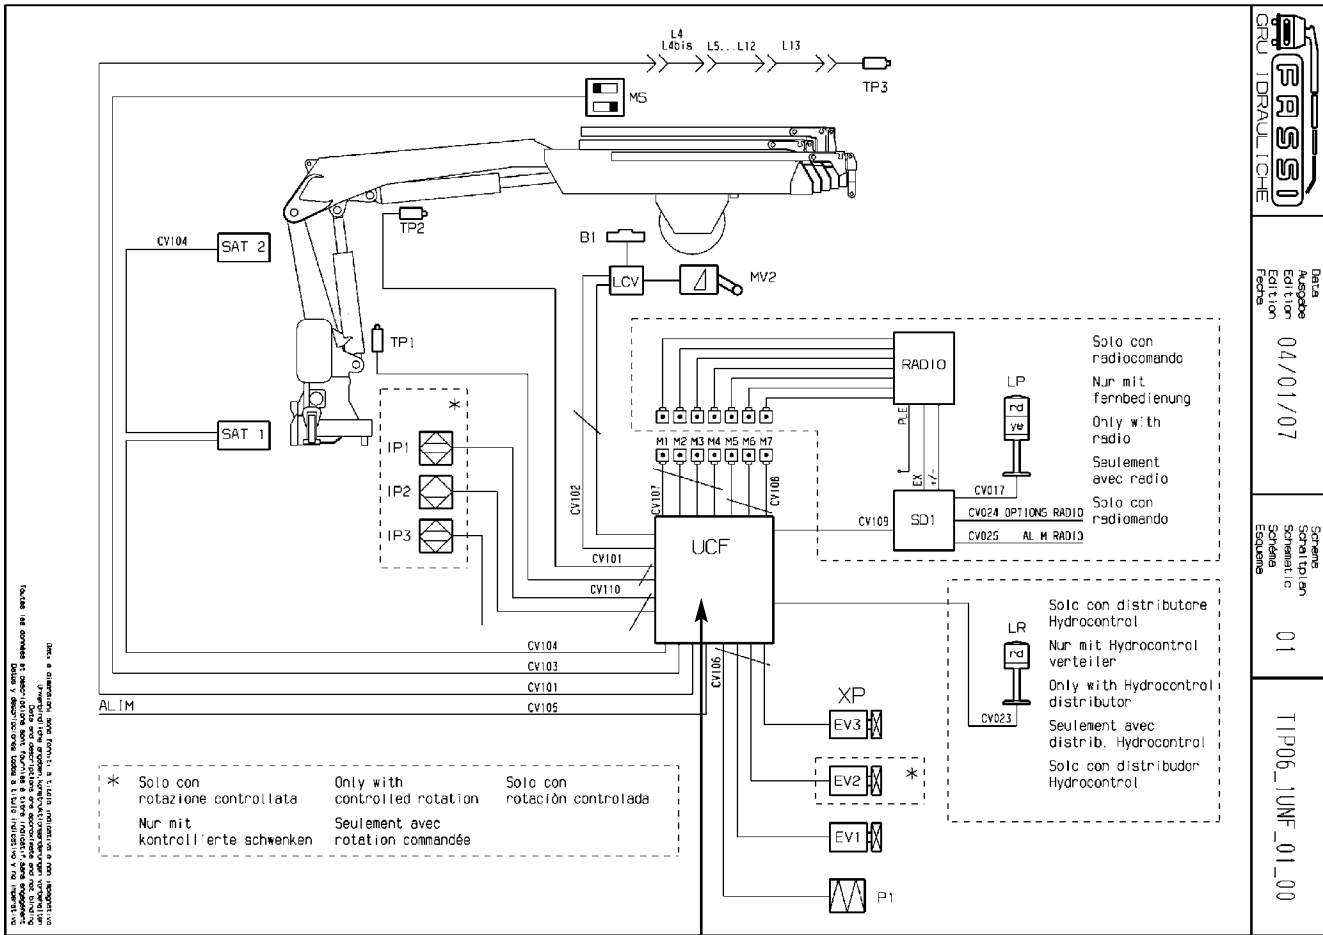

N°	DESCRIPTION
ALIM	ELECTRICAL FEED CABLE MAIN CONTROL PANEL
EV1	ELECTROVALVE FOR CRANE BLOCK
EV2	ELECTROVALVE FOR LIFTING MOMENT LIMITING DEVICE OF THE TWO WORKING ZONES
EV3	XP ELECTROVALVE
LP	FLASHING
IP1/2/3	PROXIMITY MICROSWITCH FOR ROTATION CONTROL
LCV	WINCH LOAD LIMITING DEVICE
LR	ACTIVATION OF OVERLOAD BLOCK RED WARNING LIGHT
M1	MICROSWITCH ON THE DISTRIBUTOR (ROTATION)
M2	MICROSWITCH ON THE DISTRIBUTOR (INNER BOOM)
M3	MICROSWITCH ON THE DISTRIBUTOR (OUTER BOOM)
M4	MICROSWITCH ON THE DISTRIBUTOR (CRANE EXTENSION BOOMS)
M5	MICROSWITCH ON THE DISTRIBUTOR (JIB BOOM)
M6	MICROSWITCH ON THE DISTRIBUTOR (JIB EXTENSION BOOMS)
M7	MICROSWITCH ON THE DISTRIBUTOR (WINCH)
MS	MERCURY LEVEL SENSOR ON THE OUTER BOOM
MV2	DRUM MICROSWITCH WINCH
P1	PRESSURE SWITCH FOR THE RE-ENTRY OF THE EXTENSION BOOMS
UCF	MAIN CONTROL PANEL (FX000)
S1/2/3/...	CONNECTORS
SAT1	DOUBLE CONTROL SIDE SATELLITE
SAT2	SATELLITE FOR 3° CONTROL STATION
SD1	SHUNT BOX 1
TP1	PRESSURE TRANSDUCER FOR INNER RAM
TP2	PRESSURE TRANSDUCER FOR OUTER RAM
TP3	PRESSURE TRANSDUCER FOR THE JIB RAM





6 SAFETY NORMS

Strictly conform to the norms reported by the plates DE2499B (fig. 1) or DE4236 (fig. 1a) placed next to the controls, in order to avoid possible accidents while operating the crane.

Only authorized persons are allowed to operate the crane.

The crane must be used on firm, level ground.

Check that the vehicle hand brake is on and that the wheels are chocked.

Before every operation make sure that:

- no-one is within the working area of the crane;
- the safety devices are in place and operative;
- the minimum safe working distances from power lines are observed;
- the load is correctly slung and hooked.

Stabilize the vehicle by the outrigger rams, making sure that:

- the lateral supports are fully extended;
- the wheels are in contact with the ground and the suspension is not completely unloaded.

Use the crane in accordance with the use and maintenance manual, making sure that:

- the load and radius are within the maximum limits shown on the crane capacity plate;
- the crane is used progressively avoiding sudden load movements
- swinging or dragging of the load is avoided;
- the load is lifted before rotating.


When using implements protect the crane working area with a barrier.

The vehicle/crane are not left unless the power take off is disengaged and the load is on the ground.

Before driving the vehicle make sure that the outriggers are fully retracted and re-entered, the safety taps closed and the crane is in folded position.

VERTICAL VERSION

fig. 1



FASSI GRU IDRAULICHE SpA
24021 ALBINO (BG) ITALIA - Via dei Carmelitani, 2
Tel. + 39 35 77.64.00 - Fax + 39 35 75.50.20

DE2499B

INSTRUCTIONS FOR SAFE
USE OF THE CRANE

1 Only authorized persons are permitted to operate the crane.

2 The crane must be used on firm, level ground.

3 Check that the vehicle hand brake is on and that the wheels are chocked.

4 Before operation make sure that:

- no-one is within the working area of the crane;
- the safety devices are in place and operative;
- the minimum safe working distances from power lines are observed;
- the load is correctly slung and hooked.

5 Stabilize the vehicle with the outriggers, making sure that:

- the lateral supports are fully extended;
- the wheels are in contact with the ground and the suspension is not completely unloaded.

6 Use the crane in accordance with the use and maintenance manual, making sure that:

- the load and radius are within the maximum limits shown on the crane capacity plate;
- the crane is used progressively avoiding sudden load movements;
- swinging or dragging of the load is avoided;
- the load is lifted before rotating.


7 When using implements protect the working area with a barrier.

8 The vehicle/crane are not left unless the power take off is disengaged and the load is on the ground.

9 Before driving the vehicle ensure that the outriggers are fully retracted and re-entered, the safety taps closed and the crane is in the folded position.

HORIZONTAL VERSION

fig. 1a



FASSI GRU IDRAULICHE SpA
24021 ALBINO (BG) ITALIA - Via dei Carmelitani, 2
Tel. + 39 35 77.64.00 - Fax + 39 35 75.50.20

DE4236

INSTRUCTIONS FOR SAFE USE OF THE CRANE

1 Only authorized persons are permitted to operate the crane.

2 The crane must be used on firm, level ground.

3 Check that the vehicle hand brake is on and that the wheels are chocked.

4 Before operation make sure that:

- no-one is within the working area of the crane;
- the safety devices are in place and operative;
- the minimum safe working distances from power lines are observed;
- the load is correctly slung and hooked.

5 Stabilize the vehicle with the outriggers, making sure that:

- the lateral supports are fully extended;
- the wheels are in contact with the ground and the suspension is not completely unloaded.

6 Use the crane in accordance with the use and maintenance manual, making sure that:

- the load and radius are within the maximum limits shown on the crane capacity plate;
- the crane is used progressively avoiding sudden load movements;
- swinging or dragging of the load is avoided;
- the load is lifted before rotating.

7 When using implements protect the working area with a barrier.

8 The vehicle/crane are not left unless the power take off is disengaged and the load is on the ground.

9 Before driving the vehicle ensure that the outriggers are fully retracted and re-entered, the safety taps closed and the crane is in the folded position.





7 WARNING AND INSTRUCTIONS

7.1 Generality

The use of the crane is reserved to authorized personnel, instructed in advance, who has to conform to the safety norms and instructions contained in the use manual supplied with the crane. (See norms ISO 9926-1)

It is absolutely prohibited to walk or stop under a suspended load

It is prohibited for unauthorized persons to be within the working area.

Under no circumstances interfere with the safety and protection devices.

Warning plates, as well as instruction and operation plates must be replaced when no longer readable or missing. See Paragraph 25 Instruction and warning plates.

Do not use the outriggers to raise the vehicle.

To avoid hitting bridges or tunnels check and record the overall height of your crane in the folded position or in laid position in the body or on the load. Always respect and pay proper attention to road signs placed in proximity of such obstacles.

7.2 Before operating

(!) ATTENTION (!)

Check that protections are in their place and that all safety devices are fitted and active. (See norms ISO 9927-1)

Keep the ladder and the control station on the top seat, clean; normally, the seat can tilt forward.

Make sure that control stations are properly lit so as to ensure safety while operating and allow instruction plates to be visible.

Check that the working area is adequate and properly lighted for your crane.

Make sure that the hook is always free to rotate on its pin and that nothing obstructs its vertical positioning.

Check the efficiency of the hook safety catch.

Carefully inspect the condition of ropes or chains (if present)

Make sure that the pallet fork (if present) is connected to the crane hook by means of a chain having at least **three (3)** rings.

7.3 During operation




Take the vehicle fumes away from the working area by fitting an extension tube of a suitable diameter and a right length to the exhaust system.
Do not run the engine in a indoor area without first making sure there is adequate ventilation.

When using the ladder to reach the control station on the top seat, avoid knocking into the controls while going up or down the ladder.
The control station on the top seat is provided with side safety guards; stay within these guards.

Make sure that no one is within the working area of the crane.

SAFETY NORMS

GRU FASSI 7

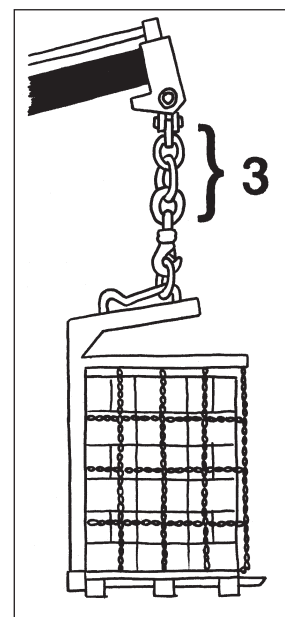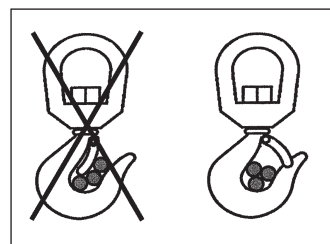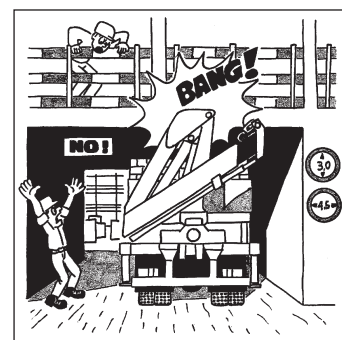

FASSI



(!) ATTENTION (!)

Avoid swinging the load above working and transit areas; any hidden danger situation must be audibly alarmed.
Avoid all those situations which may result in crushing during vehicle stabilization, crane movement and load handling.


(In conformity with EN 349 standard the minimum safe working distances to avoid crushing parts of the body)

Parts of the Body	Minimum safe working distance mm	Figure	Parts of the Body	Minimum safe working distance mm	Figure
Body	500		Head	300	
Leg	180		Foot	120	
Toes	50		Arm	120	
Hand Wrist Fist	100		Finger	25	

The table indicates the minimum safety working distances concerning the various parts of the body.
The figures illustrate circumstances which may turn out to be dangerous if you fail to respect the minimum safe distances and if it is impossible to introduce larger parts of the body.

(!) ATTENTION (!)

For designated areas as: outrigger running towards rest position, leaning and folding points of the booms in rest position, control platform and swinnig column, top seat and running inner boom, where no carter is possible to be placed, please observe the shear and trapping hazard stickers nearly placed.

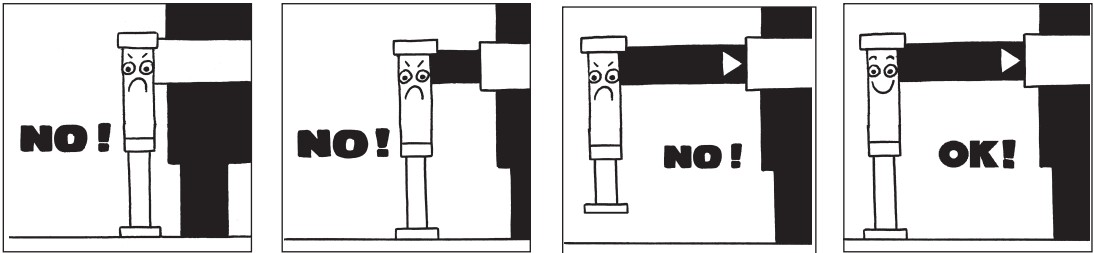


(!) ATTENTION (!)

Failure to respect the minimum safe distances may result in a safety hazard and a deadly risk.

Remember that the stability of the unit (crane-vehicle) is only guaranteed by the complete lateral extension of the outriggers and by the observance of the capacity plates.

Stabilize the vehicle on a horizontal plane with a maximum tolerance of 1,5 degrees. Make sure that the outrigger rams rest on a solid base, if necessary use larger outrigger base plates (available on request) to avoid sinking.

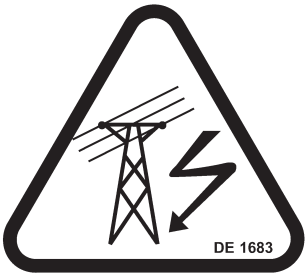




If you adopt other means, make sure that they are suitably sized for the load they must bear.

(!) ATTENTION (!)
Respect the safety distances from electric lines; the minimum distance is, according to CEN norms, five (5) meters, except for otherwise prescribed by national norms.

(!) ATTENTION (!)
Failure to respect the minimum safe distances may result in electrical hazards for the operator and his assistants.

ELECTRICUTION:

General safety precautions for the operator and potential co-workers. If the crane hits an overhead power line, do not touch the crane, the truck or the load.
Carefully evaluate the danger before moving. If you are closer than 10 meters from the crane, the truck, the load or the electric line, move at least 10 meters away, by shuffling away with small steps, in order to minimize the chance of getting a too high voltage difference between the feet.
Warn others to stay away; call for help and contact the power company to de-energize the line: do not attempt to assist someone in direct or indirect contact with the power line before the power has been disabled: you run the risk of being electricuted yourself.
If you are in the truck cabin, stay inside without touching the vehicle body because it's extremely hazardous to go out before the line is de-energised.
Help the electricuted person if you know the first-aid procedures, otherwise wait for the paramedics to arrive.

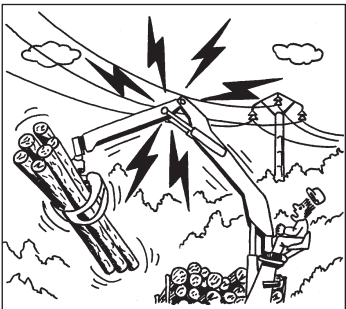

(!) ATTENTION (!)
Do not utilize the crane during thunderstorms and with wind speed exceeding 13,8 m/s (50 km/h), maximum value of the Beaufort scale degree 6.

Indications about wind speed


Force of the wind Beaufort scale	Wind speed m/s	Classification	Characteristics
0	0,0 - 0,2	Calm	Calm wind, smoke goes up quite vertically
1 2	0,3 - 1,5 1,6 - 3,3	Light breeze	Smoke reveals the direction of the wind, one can feel the wind blowing, leaves start fluttering.
3 4	3,4 - 5,4 5,5 - 7,9	Moderate breeze	Leaves and branches are in constant motion, small branches start fluttering. Dust and papers dance on the ground.
5	8,0 - 10,7	Fresh breeze	Small green branches bend, the surface of waterways and lakes are wavy.
6	10,8 - 13,8	Near gale	Big branches bend, wind whistles through high-tension cables, it's difficult to walk keeping the umbrella open.
7	13,9 - 17,1	Moderate gale	Trees sway, it's hard to walk
8	17,2 - 20,7	Storm wind	Branches get broken, it's hard to walk.
9	20,8 - 24,4	Storm	It damages houses(antennas and roof tiles fall down)

(!) ATTENTION (!)
Carefully inspect the load rigging.

Hook up the load, checking that it does not exceed the capacity indicated on the lifting diagram specific to each load configuration.


Make sure that the lifted load is balanced.

Avoid swinging the load above the control station; in cases where the load is too close, the crane must be operated from the opposite side or with the radio-remote control.

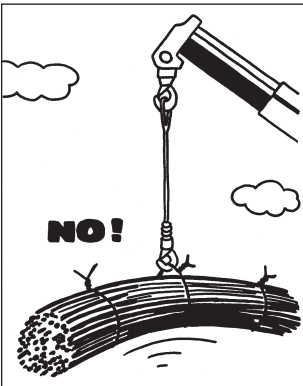




7.4

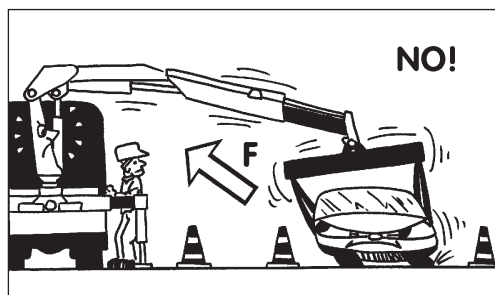WARNING AND
INSTRUCTIONS
GRU FASSI

When operating through a winch, lift the load vertically using the cable and not the booms in order to avoid swinging the load. Do not rotate the crane before the load is lifted.

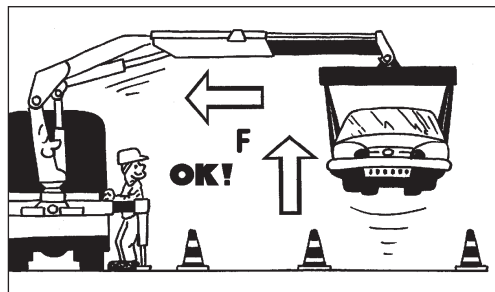


Do not operate with sudden movements, activate the controls with slow and progressive movements; rotate slowly and with care paying attention to the stability of the vehicle.

With vertical lift, on hydraulic and mechanical extension, rotate slowly in order to avoid side-skidding.

(!) ATTENTION (!)

Do not utilize the crane for pushpull (F), lateral (F) or sideways (F) operations.

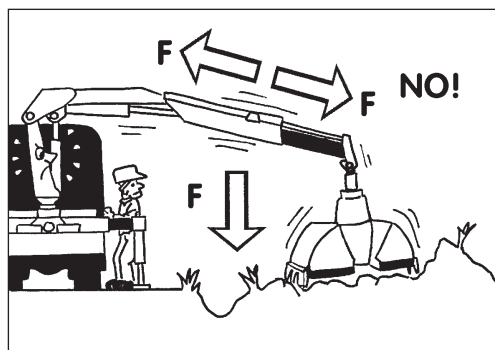**(!) ATTENTION (!)**

Crushing (F) or push (F) manoeuvres are not permitted.

(!) Never operate the outriggers when the crane is loaded.

(!) ATTENTION (!)

The vehicle/crane must not be left unless the load is on the ground, the booms of the crane (and of the hydraulic jib), are folded and laid on

a solid base and the power take-off is disengaged.

Do not move the vehicle with the crane not in transport position and not with a load suspended on the crane.

7.4 At the end of the operation (Prior to driving the vehicle)

Fold the crane.

If the booms of the crane (or of the hydraulic jib) are to be laid on the body or on the load, they must be suitably blocked to prevent possible sideways movements.

Make sure that the indications about the overall dimensions are respected.


NOTE

Implements can be left mounted on the booms of the crane (or of the hydraulic jib) only if the overall dimensions are respected; they must be suitably blocked to prevent possible sideways movements.

If an accessory (fork, ...) is mounted, it must be tied down at all times during transport.

Make sure that the outrigger supports and rams are re-entered within the overall width of the truck and locked by the safety devices.

Disengage the power take off.

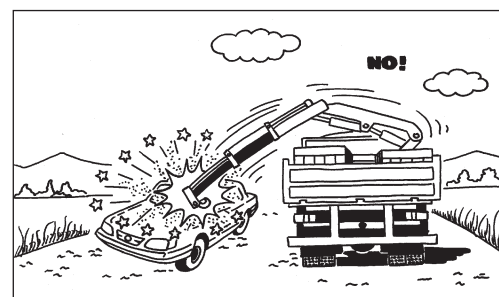



7.5 Residual risks

Note: This reasoned list does not carry the complete list of the residual risks, which are examined more in detail paragraph by paragraph in the manual under "**(!) ATTENTION (!)**"; it is instead a way to exemplify to the operator the types of hazards linked to the use of the crane, which basically involves a lifted load in movement. Therefore we confirm you the following

It is absolutely forbidden to use the crane without having read and understood the manual for use and maintenance and without having being previously instructed by experienced personnel on all aspects of safe crane operation.

Risk evaluation shall be followed by adequate provisions in order to avoid risks and damages to people and things.

The crane operator shall be held directly responsible for the correct operation of the crane also according to the jobsite conditions.

Overturn: the crane can overturn, thus hurting people and damaging things specially in following conditions:

- if it is not correctly stabilized
- if the moment limiting device is disabled
- if the ground conditions at the jobsite are not stable enough with respect to the dimensions of the outrigger base and/or of the additional base plate
- if you increase the design dynamic increasing the pump oil flow.

Moment limiting device: never try to bypass nor tamper with the moment limiting device and the various safety systems installed on the crane. In such case the operator shall be held responsible for the subsequent crane performance. It is also important to understand the alarm messages generated by the "moment limiting device" and act consequently.

Control seat: before operating from the control seat the operator shall make sure that he's safe from hazards (i.e. he stands clear of the load, there is a way of escape,...). Otherwise he shall manoeuvre from a different control seat; if there is none available, the crane should be equipped with a radio control or remote control in order to allow the operator to operate the crane in absolute safety.

From the control seat the operator shall be able to visually inspect the whole working area at all times. If it is not possible he shall team up with a co-worker able to control the whole area; otherwise the crane shall be equipped with a radio control in order to ensure the operator with the perfect position to see all potential hazards clearly at all times. Naturally the operator shall also teach this eventually co-worker with the scope of not harm each other with control commands.

Load rigging: carefully inspect the load rigging; the operator shall make sure that the load is properly attached and balanced and that all unexpected movements are not allowed. Be careful not to hit any potential impediments during the crane movements.

Jobsite conditions: prior to use always ascertain that the working area is free and clear of potential obstacles to crane operations (people, building walls, balconies, eaves, scaffoldings, tree branches, other lifting means or machines, electric lines,...). This may hurt people, damage both the impediments and the crane, and provoke also the crane overturn.

Make sure that there is no risk of elements falling on the operator or on the crane and take the right precautions to prevent it.

Overload and/or fatigue: the crane can break down due to fatigue or overload:

- If it is misused (with cycles, loads or pump oil flow not pertinent to the crane class)
- If it is used for improper tasks (side, oblique or reversal pull)
- If it is used in poor jobsites (corrosive environment, too high or too low temperature, foundry,... [see conditions of use])
- If the load exceeds the rated capacity indicated on the relevant plates



Wrong manoeuvring: the crane can fall break or overturn if the operator performs a wrong manoeuvre due to the lack of familiarity with the operation procedures (see manual of use and maintenance) or due to inadequate psychophysical conditions: we remind you that the directives in force impose a suitable training of the personnel before using these types of machines and require an adequate psychophysical condition to operate safely a lifting device that always implies the intrinsic danger of a lifted load.

Weather conditions: too high or too low temperatures may damage the components of the oleodynamic and electric circuits (See max and min conditions of use); it is forbidden to operate the crane during a storm with lightning hazards, so we recommend to fold it and put it to rest. Furthermore when the wind is too strong the crane can overturn or break down.

Shearing, entrapment: the crane has a lot of parts in movement that it is impossible to cover; therefore the operator shall always be aware of this residual risk and keep clear from the parts in movement, particularly from the load; the operator is held responsible not only for himself but also for those working in proximity of the crane and for those who may draw closer even if not authorized.

Electricution: the crane is not insulated from electric contacts and therefore it is not equipped to work under tension, even if the contact is accidental. Therefore be compliant with the min clearance prescribed by the national directives in force. Generally speaking the clearance from electric lines with a max tension of 38.000 volts should be at least 5 meters: Higher tensions require higher clearance to be verified case by case together with competent technicians and with respect to the environment conditions.

Manual extension overload: manual extensions are controlled by the moment limiting device only under the conditions described in the relative chapter; the control system of the manual extension overload must be activated by the operator as described.

Accessories: be careful when assembling and disassembling the accessories (extensions, buckets, baskets,...); first verify the weight, the securing systems and the instructions for assembly and dismantlement; then appraise their barycentre and provide for adequate provisional blocking systems in order to avoid sudden movements.

(!) ATTENTION (!)

If in the folding condition the hook is out of truck size, it must be taken away before travelling.

Breakdown of some sensors

The system "moment limiting device - intelligent type" is always monitored during ignition (the system, after having activated the various circuits, checks the presence of all the inputs for around 4 seconds) and then continuously monitors the operation and the efficiency of the limiting device (approx. every 25 milliseconds).

For most of the components the system checks also the congruence of the incoming signal with the one the system expects.

Maintenance: maintenance is particularly important; the lack of it may damage things or hurt people.

Particular operations: if you are required to operate under particular conditions not illustrated in the manual of use and maintenance, analyse carefully the situation and always refer to an authorised Fassi shop or to the Fassi technical support service or to experienced operators before starting working.



8 IDENTIFICATION OF THE CRANE MODEL

8.1 Generality

The exact **crane model**, **serial number** and description of **implements** will enable **FASSI Service Department** to give a rapid and efficient response.

8.2 Crane mark

Identification data are marked on the plate DE5892, rivetted on the base with personalized rivets FASSI. (fig. 2)

- 1 - Crane model
- 2 - Serial Number
- 3 - Year of manufacturing

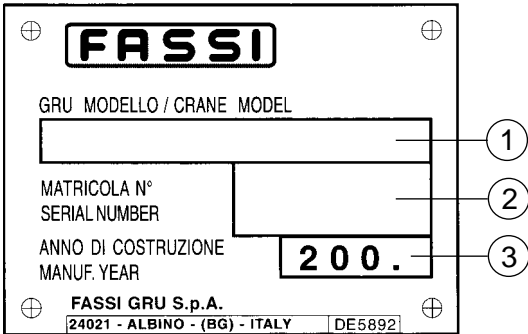


fig. 2

(!) **UNDER NO CIRCUMSTANCES SHOULD THE DATA MARKED ON THE PLATES BE ALTERED.**






9 CRANE NOMENCLATURE


9.1 Crane with ground controls on both sides.
(fig. 4).

Pos.	Description
1.	Outrigger rams
2.	Outrigger supports
3.	Base
4.	Rotation cylinders
5.	Deviator crane-outriggers
6.	Dual control for deviator crane-outriggers
7.	Outrigger distributor
8.	Outrigger double control
9.	Distributor bank
10.	Double control
11.	Column
12.	Inner ram
13.	Inner boom
14.	Outer ram
15.	Outer boom
16.	Booms extension rams
17.	Extension boom sections
18.	Lifting hook
19.	Oil tank
20.	Manual extensions (optional)
21.	Seat (optional)
22.	Hand-cables for crane (optional)

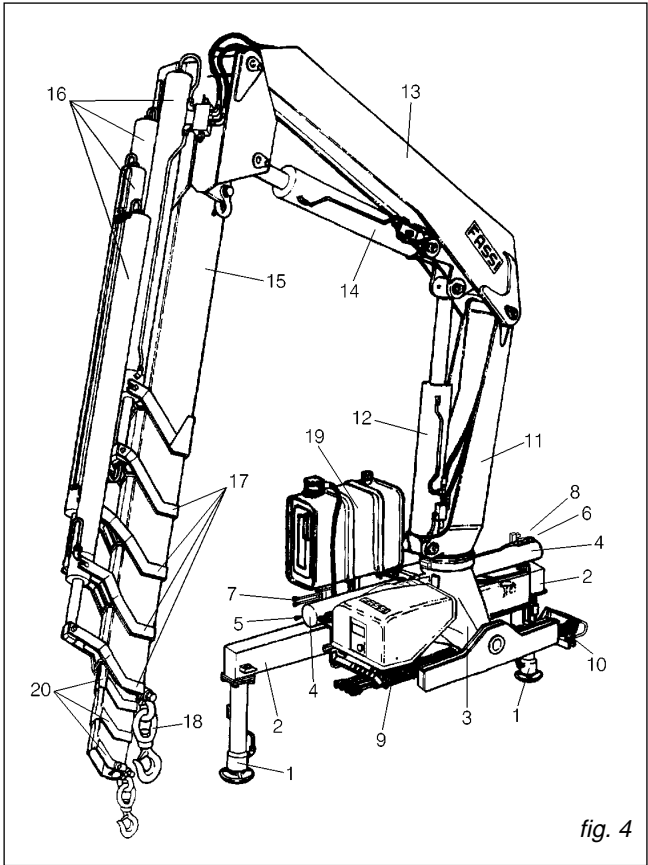

9.2 Crane with top seat controls and with
ground controls for outriggers. (fig. 5)

Pos.	Description
1.	Outrigger rams
2.	Outrigger supports
3.	Base
4.	Rotation cylinders
5.	Deviator crane-outriggers
6.	Dual control for deviator crane-outriggers
7.	Outrigger distributor
8.	Outrigger double control
9.	Column
10.	Seat
11.	Distributor bank
12.	Inner ram
13.	Inner boom
14.	Outer ram
15.	Outer boom
16.	Booms extension rams
17.	Extension boom sections
18.	Lifting hook
19.	Oil tank
20.	Manual extensions (optional)

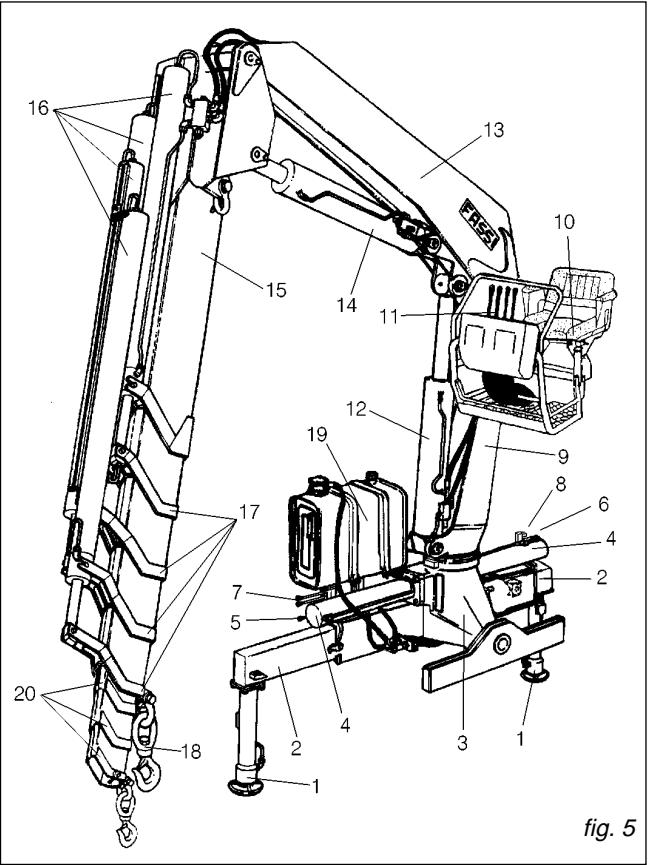

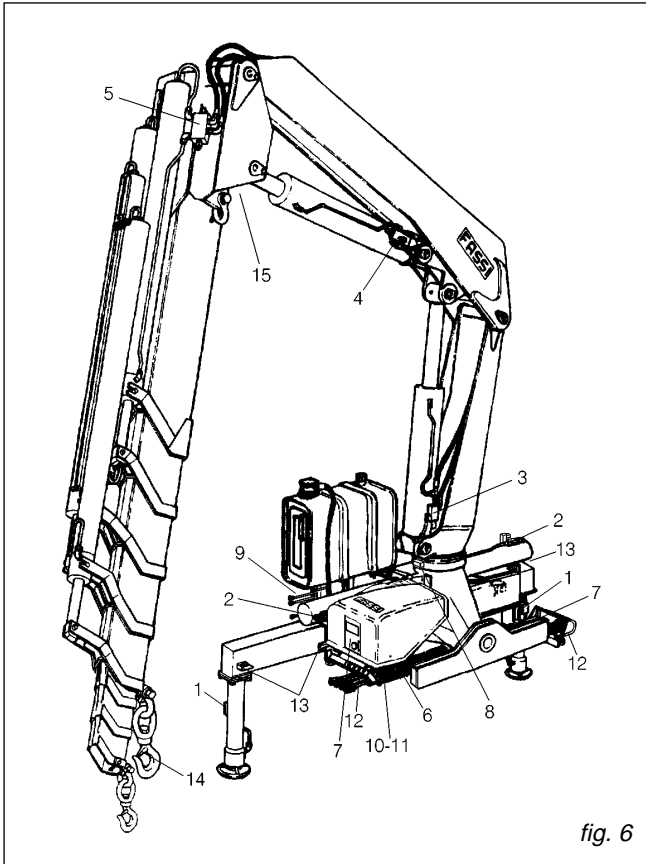


fig. 6

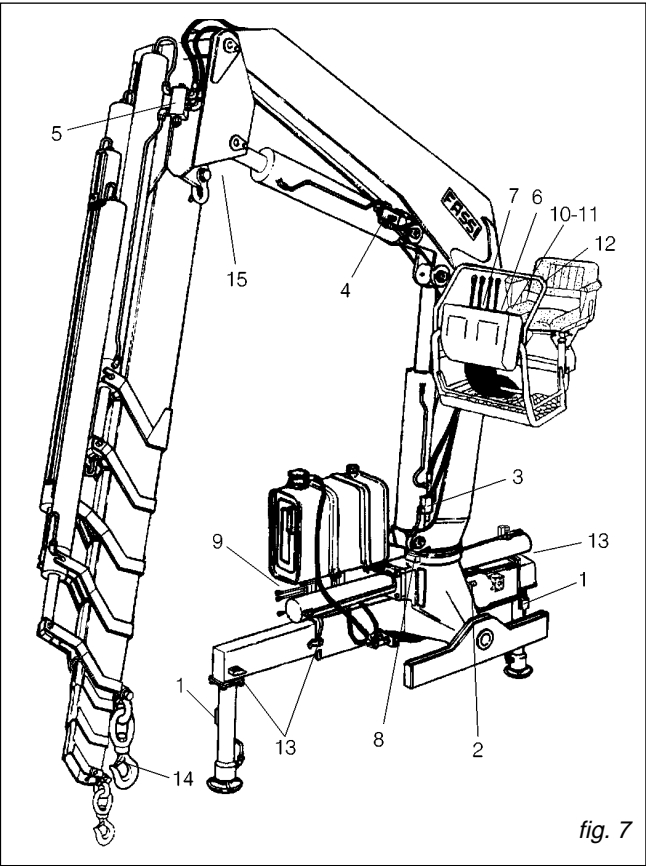


fig. 7

10.1 Crane with ground controls on both sides. (fig. 6).

Pos.	Description
1.	Check valves for outrigger rams
2.	Check valves for rotation control (flow regulators)
3.	Check valve for inner ram
4.	Check valve for outer ram
5.	Check valve for booms extension rams
6.	Lifting moment limiting device assembly (optional)
7.	Control panels (optional)
8.	Rotation limiting device (optional)
9.	Main pressure valve (outriggers)
10.	Main pressure valve (crane)
11.	Auxiliary valves (crane)
12.	Levers guard
13.	Safety device for outriggers supports
14.	Hook safety device
15.	Safety device for extension booms (only for the crane version "C")

10.2 Crane with top seat controls and with ground controls for outriggers. (fig. 7)

Pos.	Description
1.	Check valves for outrigger rams
2.	Check valve for rotation control
3.	Check valve for inner ram
4.	Check valve for outer ram
5.	Check valve for booms extension rams
6.	Lifting moment limiting device assembly (optional)
7.	Control panel (optional)
8.	Rotation limiting device (optional)
9.	Main pressure valve (outriggers)
10.	Main pressure valve (crane)
11.	Auxiliary valves (crane)
12.	Levers guard
13.	Safety device for outriggers supports
14.	Hook safety device
15.	Safety device for extension booms (only for the crane version "C")

Before crane use check that safety and protection devices are fitted and active.

Under no circumstances interfere with the safety and protection devices.

Interference with the check valves and removal of the lead seal remove the Manufacturer and invalidate the warranty.

Use the ladder for the access to the top seat.

11 SUPPLEMENTARY BEAMS

11.1 Generality

Supplementary beams are used in conjunction with the crane outriggers to ensure the vehicle stability during load handling.

Code	outrigger ram stroke mm	outrigger interaxis mm	extension type	Weight kg
52185	550	2132	Fixed	115
42049	550	3098	Manual	220
56681	550	3558	Manual	250
115B073	450	3098	Manual	190
115B076	450	3098	Manual-Rotating-"H"	190
145B068	650	4142	Hydraulic-"H" variable	340
145B070	340	4142	Hydraulic-"H" variable	310
330B054	520	4984	Hydraulic-"H" variable	520
330B055	340	4984	Hydraulic-"H" variable	490

11.2 Identification of the supplementary beams

Identification data of the supplementary beam is punched on the beam (fig. 8) in the following sequence:

Ex. ***145B070*0001**
 | serial no.
 | identification code

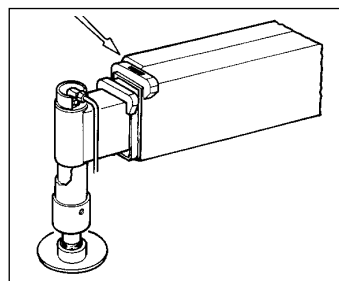


fig. 8

12 TILTABLE OUTRIGGER RAMS

12.1 Manually tiltable outrigger rams

Outrigger rams are allowed to be stored in an inclined position, when obstructions on the vehicle chassis prevent their vertical stowability. These hinged supports are placed between the outrigger supports and the rams; the fixed part is screwed to the supports while the mobile part is screwed to the rams. (fig. 9-9a)

To place the rams in a working condition. (fig. 9)

- Supporting the ram, remove the check pin and the locking pin from their positions.
- Position, carefully, the ram in working condition, insert the locking pin in its new position and secure it with the check pin (fig. 9a)

To re-position the rams to the folded position.

- Remove the check pin and the locking pin.
- Position, the ram in a upward direction and supporting the ram, insert
- the locking pin in its new position and secure it with the check pin

(!) The locking pin is constructed from special material - do not replace it with a non original part - your security depends on it



fig. 9



fig. 9a

VERSION 2

fig. 9



fig. 9a





13 MANOEUVRES AND CONTROLS TO STABILIZE THE VEHICLE

SUPPLEMENTARY
BEAMS
GRU FASSI

13

13.1 Generality

The outriggers rams prevent damaging stresses both to the frame and to the vehicle suspensions on which the crane is mounted to and assure the stability of the unit during load handling.

Be very careful when stabilizing the vehicle; make sure that no one is or transits in close proximity of the working area of the outriggers.

(!) ATTENTION (!)

The crane stability is maintained by the maximum extension of the outrigger supports, by the solidity of the base underneath the plates of the outrigger rams and by the observance of the capacity plates. To check the maximum working pressure see Paragraph 2.3 Technical data

Check that the outrigger rams are applied on a solid base; if necessary use larger outrigger base plates (available on request) to avoid sinking.

When stabilization is complete the wheels of the vehicle must still be in contact with the ground and the suspensions must not be fully unloaded.

Stabilize the crane so as to operate on a horizontal plane with a maximum tolerance of 1,5 degrees.

While loading, it may be necessary to vertically adjust the outrigger rams to prevent an overload on the outriggers, then stabilize again.

While unloading, the outrigger rams may not be perfectly in contact with the ground because of a rise in the suspension; it is therefore recommended to stabilize the vehicle during operation to avoid an overturn.



DE 6409





13.4 Functions of control levers for stabilization

The controls to stabilize the vehicle are activated only from ground level and on both sides of the crane base.


NOTE

The graphic symbols illustrated hereunder are marked on the plates (DE4486-DE4487-DE4489) affixed next to the control stations and indicate with the following symbolism.


They indicate the position of the operator in relation to the vehicle and the crane.




Lever CD for selecting
outrigger ram
or
outrigger support

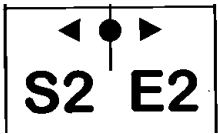

Lever C to control
outrigger support
or
outrigger ram

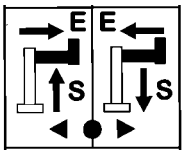

Levers D
Deviator ⚙ -E/S

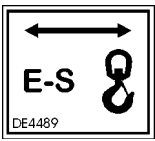

See Paragraph 25 Instruction and warning plates.

Lever function D - CD - C

- Levers **D** Control for deviator (⚙ - E/S).
- Levers **CD** Control for selecting the supports or the outrigger rams.
- Levers **C** Control for the support or the outrigger ram selected

The "multifunction" control group adopted allows to select and manoeuvre the outrigger support or the ram, through simultaneous operation of the selecting lever **CD** and the control lever **C**.

Example



To select the support **E2** or the outrigger ram **S2**

- Position the lever **CD** (corresponding to outrigger support **E2** and to outrigger ram **S2**) on **E2** or **S2** and keep it in position.

To carry out the operation

- Operate lever **C** to activate the exit/re-entry of outrigger support **E2** or the descent/lift of outrigger ram **S2**

fig. 10-10a

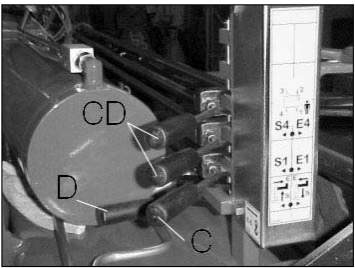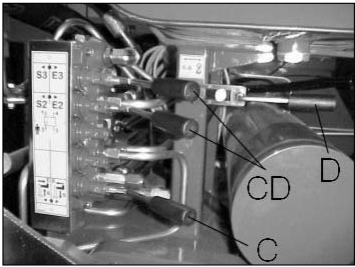



13.5 SUPPLEMENTARY BEAMS GR4_330

13.5 Controls to stabilize the vehicle

(!) ATTENTION (!)

When controlling from the opposite side of the vehicle (it is not possible visually to check the operation) it is compulsory make sure that no one is or transits in close proximity to the outriggers.

Controls for positioning the outriggers of the crane and the supplementary beam.

Disengage the locking devices of the outrigger supports by putting the levers **A** from the position of the fig. 11 to the one of the fig. 11a.

Position lever **D** of oil diverter (☺ -E/S) on **E/S**.

Controls workable both from the distributor side of the crane (fig. 12 DE4485) and from the double control side (fig. 13 DE4497)

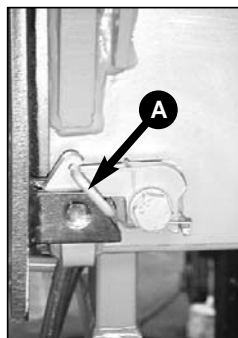


fig. 11



fig. 11a

How to exit the outrigger support **E2** (crane)

- Operate the corresponding lever **CD** towards right (**E2**) and keep it in position.
- Operate the lever **C** towards right to exit the outrigger support.

How to descent the outrigger ram **S2** (crane)

- Operate the corresponding lever **CD** towards left (**S2**) and keep it in position.
- Operate the lever **C** towards right to descent the outrigger ram.

How to exit the outrigger support **E3** (supplementary outriggers)

- Operate the corresponding lever **CD** towards right (**E3**) and keep it in position.
- Operate the lever **C** towards right to exit the outrigger support.

How to descent the outrigger ram **S3** (supplementary outriggers)

- Operate the corresponding lever **CD** towards left (**S3**) and keep it in position.
- Operate the lever **C** to descent the outrigger ram.

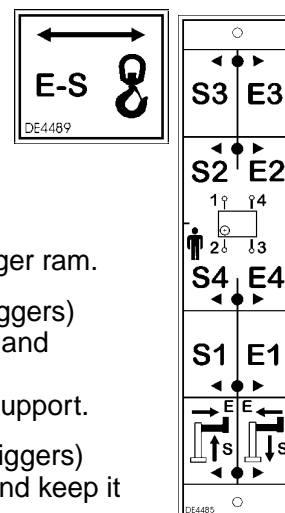


fig. 12



(!) ATTENTION (!)

Operation of the crane outrigger supports must be from the control station on that side; it is not allowed to operate outriggers on the opposite side of the vehicle due to unseen dangers. DE4491

How to exit the outrigger support **E1** (crane)

- Operate the corresponding lever **CD** towards right (**E1**) and keep it in position.
- Operate the lever **C** towards right to exit the outrigger support.

How to descent the outrigger ram **S1** (crane)

- Operate the corresponding lever **CD** towards left (**S1**) and keep it in position.
- Operate the lever **C** towards right to descent the outrigger ram.

How to exit the outrigger support **E4** (supplementary outriggers)

- Operate the corresponding lever **CD** towards right (**E4**) and keep it in position.
- Operate the lever **C** to exit the outrigger support.

How to descent the outrigger ram **S4** (supplementary outriggers)

- Operate the corresponding lever **CD** towards left (**S4**) and keep it in position.
- Operate the lever **C** to descent the outrigger ram.

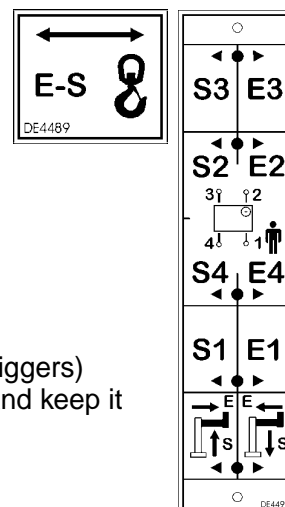


fig. 13



(!) ATTENTION (!)



The complete extension of the outrigger supports is visually indicated by the yellow triangles which are found at the end of the beam (and of the support if it's supplied with extra double extension beams). (Fig. 10b).

The stabilization has to be carried out with care and gradually keeping the vehicle in horizontal levelled condition to prevent springs overloads and chassis torsions.

(!) ATTENTION (!)

During the stabilising operations, for each outrigger ram, it is recommended to DESCENT the outrigger as the last manoeuvre.

To operate the crane controls, after having completed the descent and stabilisation manoeuvres,

- Position lever **D** of oil diverter ( - **E/S**) on  .

Manoeuvres for re-entry of the crane outriggers and supplementary outriggers within the overall vehicle width after crane use.

Position lever **D** of oil diverter ( - **E/S**) on **E/S**.

How to lift the outrigger ram **S**

- Operate the corresponding lever **CD** towards left (**S**) and keep it in position.
- Operate the lever **C** towards left to lift the outrigger ram.

How to re-enter the outrigger support **E**

- Operate the corresponding lever **CD** towards right (**E**) and keep it in position.
- Operate the lever **C** towards left to re-enter the support.

(!) WARNING (!)

Keep hands clear of automatic stop device of the outrigger supports. (Fig. 11).

- (!) Always check that the outrigger supports, once in their rest position, are locked in their seat by the safety devices, so as to assure the impossibility of accidental movement. (fig. 11).



fig. 10b





13.5.1 Crane with hydraulic tiltable supports (WITH RACK) for outrigger rams:

SUPPLEMENTARY BEAMS
GR4_170_190_210_330 **13.5.1**

(!) ATTENTION (!)

During the extension and re-entry operations of the outrigger supports, beware of the prominence of the rotation mechanism of the outrigger ram (located at the end of the support) since it can be extremely dangerous. Therefore keep away from this area during the aforesaid manoeuvres.

(!) ATTENTION (!)

During the rotation and extension of the outrigger rams, beware of the overall dimensions of the outrigger in motion, since it can be extremely dangerous. Therefore keep away from the area occupied by the outrigger in motion.

- Disengage the locking devices of the outrigger supports by putting the levers **A** from the position of the fig. 11 to the one of the fig. 11a.
- Position lever **D** of oil diverter (☺ - E/S) on E/S. DE4489 fig. 11b

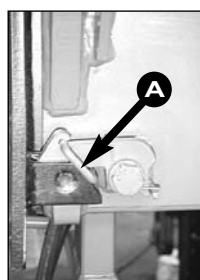


fig. 11



fig. 11a

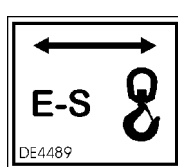


fig. 11b

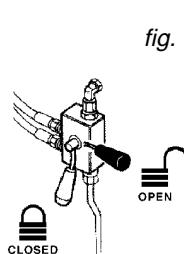


fig. 12




fig. 13




fig. 14

DOUBLE CONTROL SIDE

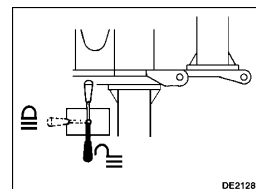


fig. 17

DISTRIBUTOR SIDE

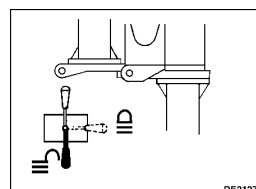


fig. 18

Controls workable from the distributor side of the crane fig. 13 DE5265

Controls workable from the double control side of the crane fig. 14 DE5266

- By using the levers **CD**, the lever **C** and the valve taps, operate in chronological sequence:
 - a) extend the outrigger supports,
 - b) rotate the outrigger rams putting in a working condition and lower them till the complete stabilisation of the vehicle.

(!) ATTENTION (!)

The complete extension of the outrigger supports is visually indicated by the yellow triangles which are found at the end of the beam (and of the support if it's supplied with extra double extension beams). (Fig. 10b).

Example of using the levers **CD**, the lever **C** and the valve tap on the outrigger and the valve tap on the control ram for the tiltable support:

- **extension of the outrigger support n°1**
 - activate the lever **CD** n°1 in the direction of **E**;
 - by keeping activated the lever **CD** n°1 activate the lever **C** in the opposite direction.
- **rotation of the outrigger ram n°1 from the rest position (fig. 15) to the working condition (fig. 16)**
 - make sure that the tap **R1** of the valve of the outrigger ram **S1** is closed (for the closed or opened position see fig. 12);
 - open the tap **R1C** of the valve of the control ram for the tiltable support (for the closed or opened position see fig. 17);
 - to remove the pin **1** proceed as follows:
 - activate the lever **CD** n°1 in the direction of **S**;
 - by keeping activated the lever **CD** n°1 activate the lever **C** in the opposite direction to control the rotation and take the ram **S1** to its rest position so that the pin **1** is extractable;
 - remove the security pin and the locking pin **1** from its seat;
 - to rotate the outrigger ram **S1** proceed as follows:
 - activate the lever **CD** n°1 in the direction of **S**;
 - by keeping activated the lever **CD** n°1 activate the lever **C** in the opposite direction to control the rotation and take the ram **S1** to its working condition.

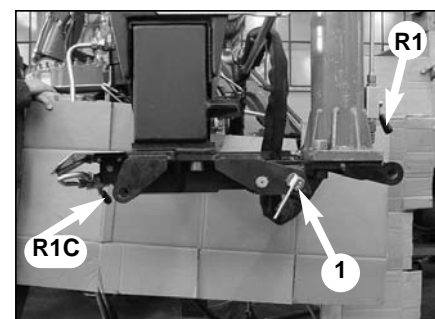


fig. 15

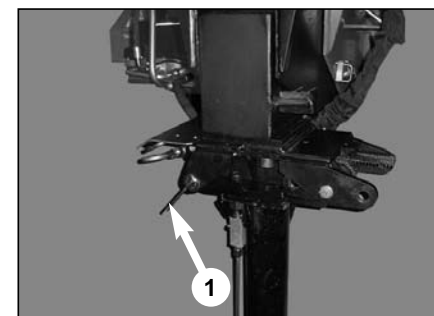


fig. 16



13.5.1

SUPPLEMENTARY BEAMS
GR4_170_190_210_330

- insert the pin **1** in its new seat and lock it with the security pin;
- close the tap **R1C** of the valve tap on the control ram for the tiltable support;

(!) **The locking pin 1 is constructed from special material**

- **do not replace it with a non original part**
- **your security depends on it**

- **descent of the outrigger ram n°1**

- open the tap **R1** of the valve of the outrigger ram **S1**;
- activate the lever **CD** n°1 in the direction of **S**;
- by keeping activated the lever **CD** n°1 activate the lever **C** in the opposite direction till the requested extension of the outrigger ram **S1**;
- close the tap **R1** of the valve of the outrigger ram **S1**.



(!) **ATTENTION (!)**

The complete extension of the outrigger supports is visually indicated by the yellow triangles which are found at the end of the beam (and of the support if it's supplied with extra double extension beams). (Fig. 11).

The stabilization has to be carried out with care and gradually keeping the vehicle in horizontal levelled condition to prevent springs overloads and chassis torsions.

(!) **ATTENTION (!)**

During the stabilising operations, for each outrigger ram, it is recommended to DESCENT the outrigger as the last manoeuvre.

To operate the crane controls, after having completed the stabilisation manoeuvres,
- Position lever **D** of oil diverter ( - **E/S**) on  .

Manoeuvres for re-entry of the crane outriggers and supplementary outriggers within the overall vehicle width after crane use.


- Repeat by inverting the sequence of the operations effected for the stabilization of the vehicle.

(!) **ATTENTION (!)**


Keep hands clear of automatic stop device of the outrigger supports. (Fig. 11).

(!) **Always check that the outrigger supports, once in their rest position, are locked in their seat by the safety devices, so as to assure the impossibility of accidental movement. (Fig. 11).**

DISTRIBUTOR SIDE

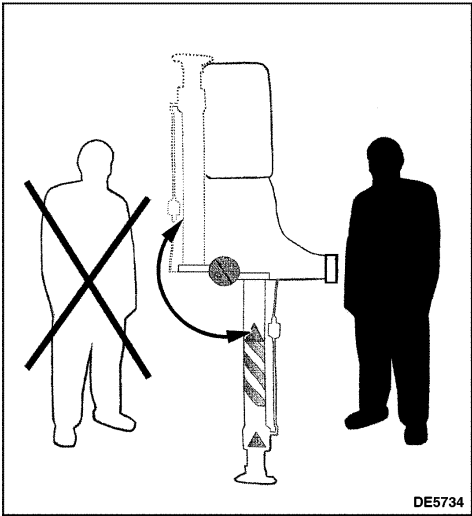

DOUBLE CONTROL SIDE

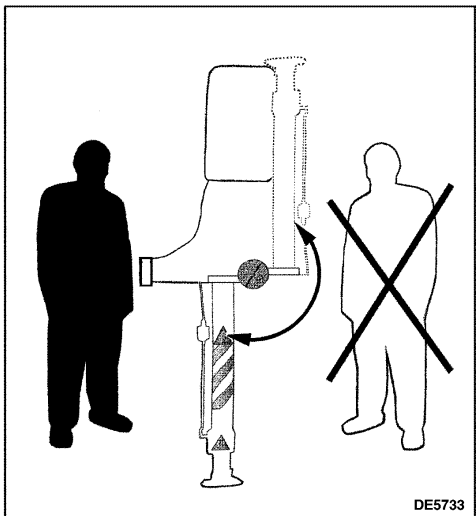



14 CONTROLS TO OPERATE THE CRANE

14.1 Generality

(!) WARNING (!)

Before operating the crane it is compulsory to set the outriggers. (Plate DE2327 fig. 14)

The crane and hydraulic implements can be manually operated with:

- ground controls on both sides or, on request
ground controls on both sides and
top seat controls by hand-cables;
- top seat controls.

The plates reported over each lever define their function in relation to their movement.

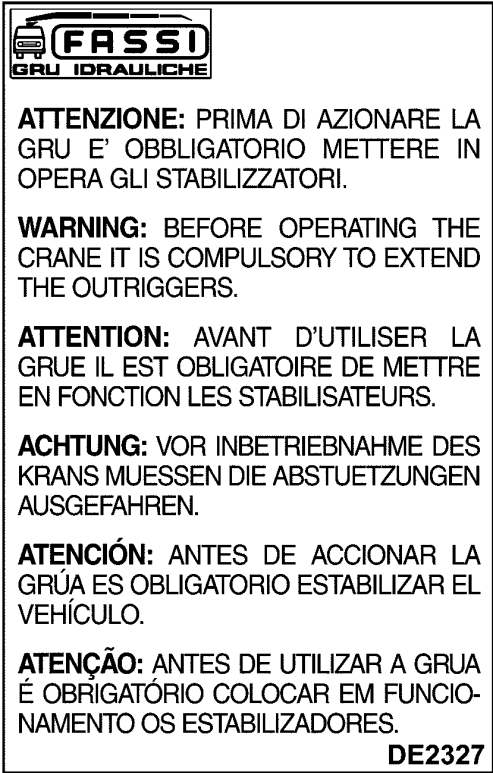


fig. 14





VERSION WITH VERTICAL CONTROLS






(!) ATTENTION (!)

The sequence of the plates placed on the crane controls may be different.

Make sure that the lever you are going to operate correspond to the control you selected.

CONTROLS TO
OPERATE THE CRANE
GR3_4_130»410

14.1

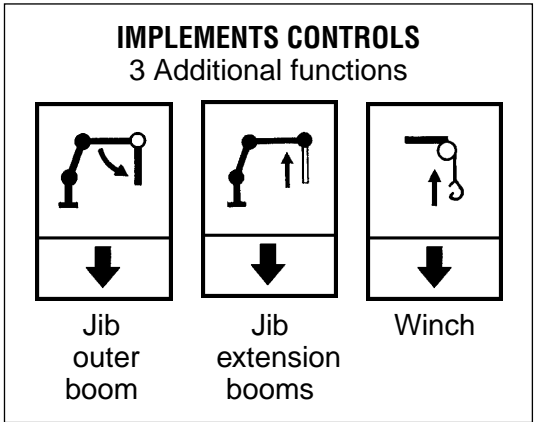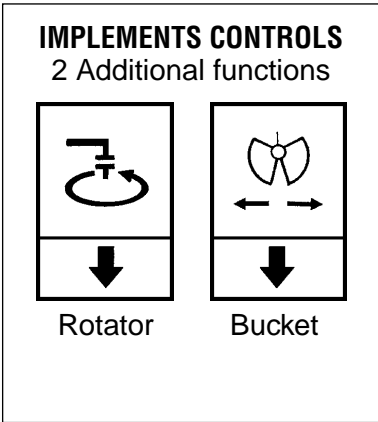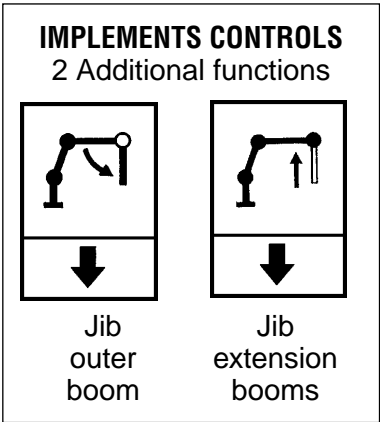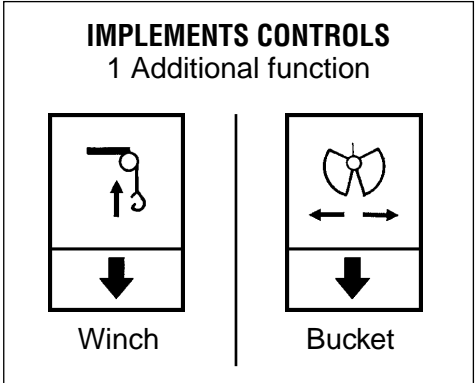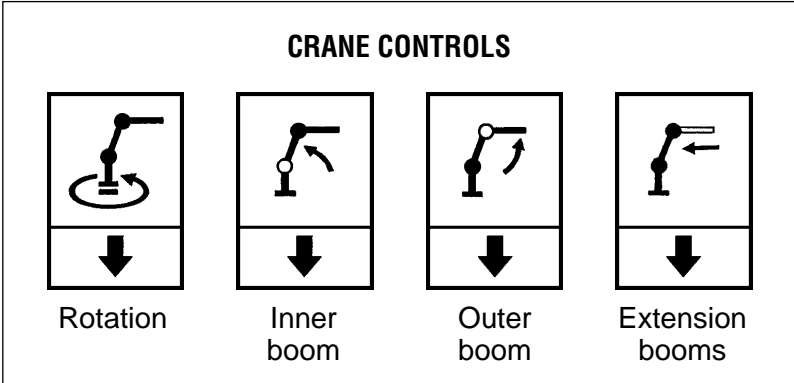


(!) **Operate the levers smoothly and gradually** (!)

When carrying out simultaneous movements of two or more functions, also related to pump flow and lever travel, it is possible that on reaching the stroke end of a particular function, an increase in speed of the other functions will occur.

(!) ATTENTION (!)


While exiting and folding the crane, you must operate from the distributor side; it is forbidden to operate from the double control side because of the overall dimensions of the booms. (DE1684A fig. 15)

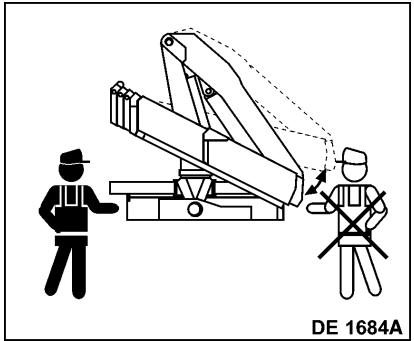

DE 1684A

fig. 15

VERSION WITH HORIZONTAL CONTROLS

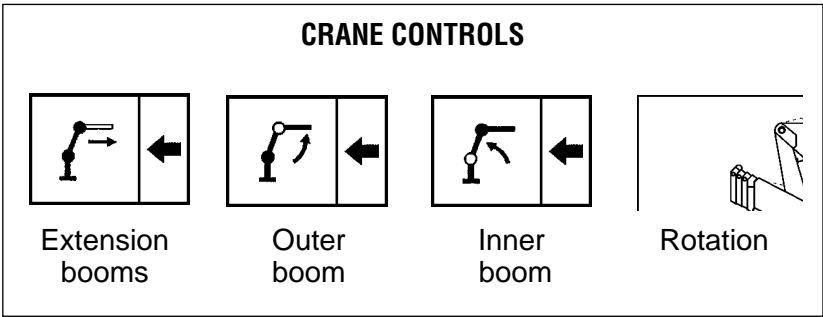





14.2 Manoeuvres to unfold the crane into a working condition

The plate DE4452A indicates the sequence of the manoeuvres to be carried out to unfold and to fold the crane.


- Engage the power take off.
- Stabilize the vehicle (see details on Paragraph 13 "Manoeuvres and controls to stabilize the vehicle").

**(!) IT IS FORBIDDEN TO OPERATE FROM (!)
THE DOUBLE CONTROL SIDE**

(!) Operate from ground control distributor side (!)

By operating the corresponding levers:

- make sure that the extension booms and the outer ram are closed;
- lift the inner boom over the horizontal line;
- open the outer boom to the "horizontal" position;
- position the hook on the vertical line above the load.

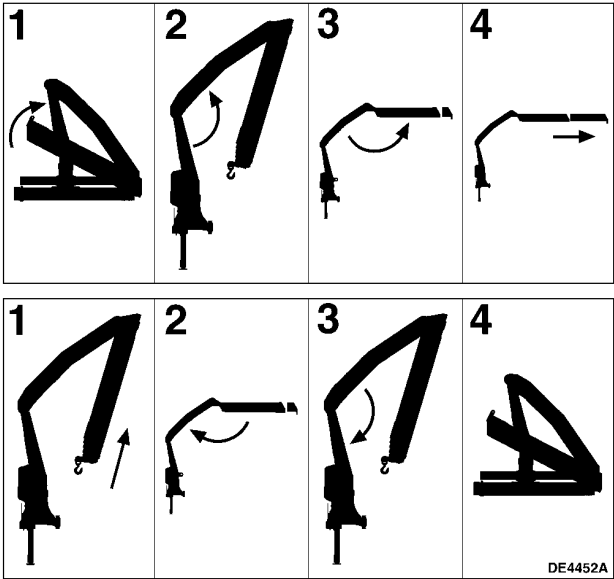

14.3 Manoeuvres to fold the crane into the rest condition (see Plate DE4452A)


**(!) IT IS FORBIDDEN TO OPERATE FROM (!)
THE DOUBLE CONTROL SIDE**

(!) Operate from ground control distributor side (!)

By operating the corresponding levers:

- fold the extension booms to their stroke end;
- lift the inner boom to its stroke end;
- fold the outer boom to its stroke end;
- rotate the crane until the reference arrows coincide (on the column and on the base);
- fold the inner boom to its stroke end; the rest locating pin locates into its seat;
- re-position the outriggers to within the overall vehicle width as described on Paragraph 13.

NOTE A safety device is installed on the outer boom of the crane version "C" preventing the exit of the extension boom sections when the crane is in rest position.

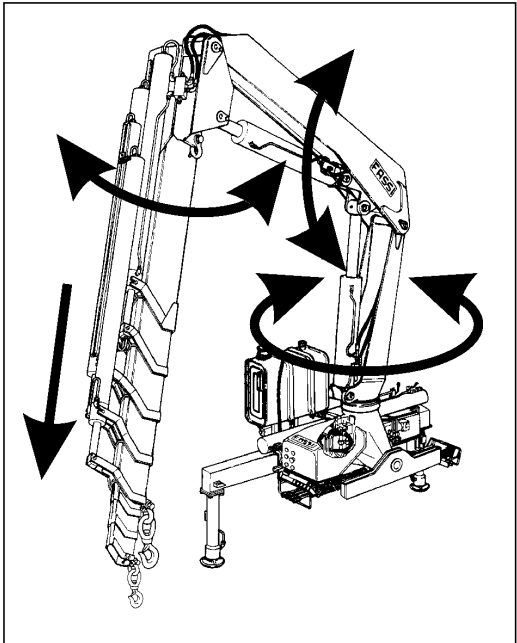

14.4 Manoeuvres to unfold the crane "C" into a working condition (only for the crane version C")

**(!) IT IS FORBIDDEN TO OPERATE FROM (!)
THE DOUBLE CONTROL SIDE**

(!) Operate from ground control distributor side (!)

By operating the corresponding levers:

- Lift the inner boom over the horizontal line.
- Open the outer boom to the "horizontal" position.
- Extend the extension boom sections; the hook of the safety device is free.
- Position the hook on the vertical line above the load.



14.5

CONTROLS TO
OPERATE THE CRANE
GR2_3_4

14.5 Manoeuvres to fold the crane "C" into the rest condition (only for the crane version "C")

**(!) IT IS FORBIDDEN TO OPERATE FROM (!)
THE DOUBLE CONTROL SIDE**

(!) Operate from ground control distributor side (!)

By operating the corresponding levers:

- completely reenter the extension boom sections;
- lift the inner boom close to its stroke end;
- fold the outer boom to its stroke end;
- lower the inner boom until the hook of the safety device rests on the extension boom sections;
- extend the extension boom sections until the hook is correctly positioned to be attached;
- do not insist on the control!
- rotate the crane until the reference arrows coincide (on the column and on the base);
- fold the inner boom to its stroke end; the rest locating pin locates into its seat;
- re-position the outriggers to within the overall vehicle width as described on Paragraph 13.



14.6 Indicator of inner boom horizontal position (on request)

CONTROLS TO
OPERATE THE CRANE
GR2_60_3_4 **14.6**

The column is fitted with a device that informs the driver through a sound/light signal in the cab, that the inner boom max position allowed during transport on road has been exceeded.

14.7 Stand-up control station

This special fitting allows the operator to use the crane controls whilst standing in a higher position, in order to have good vision of the working area.

The stand-up control station is constructed with a platform fixed on to the base of the crane and with a control panel. The control point allows the manual operation of the crane controls through remote control cables or rigid rods.

On the control panel, further to the control levers and to the plates, we can find the supplementary electric control panel (fig. 15 pos. 1).

Controls to operate the crane.

See paragraph 14 of the USE AND MAINTENANCE MANUAL for details of "Controls to operate the crane"

See paragraphs 16 of the USE AND MAINTENANCE MANUAL for details of "Lifting moment limiting device"

The operator's presence in the stand-up control station activates photocell L (fig. 15) that automatically prevents the crane from rotating above the station and activates the flashing of the green light in the different control panels near the plate DE5775 (fig. 16b).

(!) ATENTION (!)

Before accessing the stand-up control station make sure that the photocell L pilot-light (fig. 15) is turned on and green; then check its correct functioning: if put your hand in front of the photocell the pilot-light shall turn yellow (thus enabling the limitation of the rotation path). Besides, when entering the stand-up control station, before starting the crane operation, check that the limitation of the rotation path is active, see the flashing of the green light.

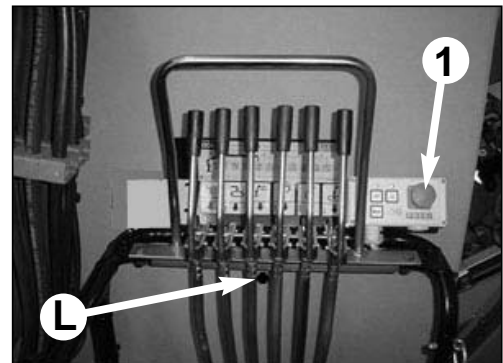


fig. 15

Always use the ladder fitted by the installer to gain access to the control station; the side of the access to the platform is protected by chain link, always replace the chain onto the structure of the platform after climbing up.

The instruction plate **DE5643** reported on the selector, identifies the intervention sectors of the device (fig. 16).

The operator's presence in the stand-up control station allows only a reduced rotation of the crane, since it is not enabled to pass on the station.

When the operator is not present in the stand-up control station, the crane is allowed to operate at its max rotation arc (which may differ from 180° indicated on plate DE5643). In case the operator is not in the stand-up control station and the rotation arc at the beginning reaches the position above the station, a red light starts flashing and a buzzer starts ringing until the aforesaid rotation arc is maintained.



14.7

CONTROLS TO
OPERATE THE CRANE
GR2_60_3_4

If you operate from the crane dual controls (maximum rotation arc allowed), take extreme care when lowering the inner boom or while rotating the crane near the stand-up control station, in order to prevent the crane booms from clashing against the structure of the stand-up control station.

The column is fitted with a device that informs the driver through a sound/light signal in the cab, that the inner boom max position allowed during lifting has been exceeded.

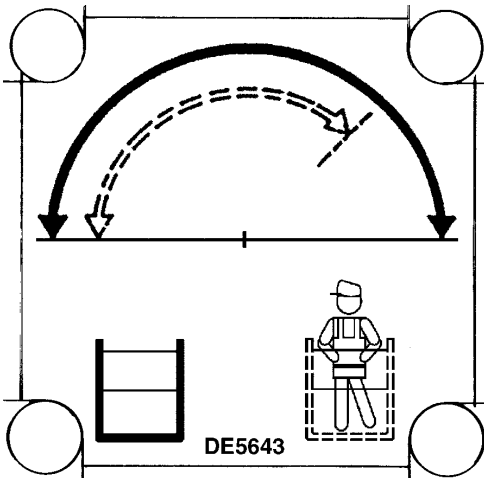


fig. 16



fig. 16b



15 MANOEUVRES OF THE CRANE LOADS
(version with load limiting device)

15.1 Generality

- (!) Before manoeuvring the load, verify that the working area is suitable for your crane.

The lifting curves of the capacity plate indicate the maximum load that the crane can lift at a certain radius and at a certain height. To utilize the maximum capacity of the crane, it is necessary to position the inner boom as indicated on the capacity plate. A characteristic which permits the classification of cranes is their lifting capacity or maximum lifting moment. The moment is defined by the value obtained from the weight of the load to be lifted (**kg**) by its distance (**meters**) from the centerline of the crane rotation.

Crane with load limiting device

During load handling, do not exceed the reach limits given, or the load indicated on the above mentioned charts. If the limits are exceeded, the load limiting device, permitting the slow descent of one of the two, or both, lifting rams (or if the jib is fitted: the jib outer ram) will be immediately activated





16 MANOEUVRES OF THE CRANE LOADS (version with lifting moment limiting device)

16.1 Generality

- (!) Before manoeuvring the load, verify that the working area is suitable for your crane.

The lifting curves of the capacity plate indicate the maximum load that the crane can lift at a certain radius and at a certain height. To utilize the maximum capacity of the crane, it is necessary to position the inner boom as indicated on the capacity plate. During load handling, do not exceed the reach limits given, or the load indicated on the above mentioned charts. If the limits are exceeded, the limiting device, allowing all manoeuvres, which reduce the lifted load within the permitted reach limits and forbid all other manoeuvres, will be immediately activated.

Lifting moment limiting device

A characteristic which permits the classification of cranes is their lifting capacity or maximum lifting moment. The moment is defined by the value obtained from the weight of the load to be lifted (**kg**) by its distance (**meters**) from the centerline of the crane rotation.

The device called "lifting moment limiting device" preserves the crane structure from overloads, as it prevents any movement which increases the value of the moment up to the maximum established value.





16.2 "Electronic" lifting moment limiting device

This device utilises an electro-hydraulic system managed by an electronic logic that prevents any operation tending to cause an increase in the pressure induced by the load in the lifting rams (inner, outer rams of the crane and of the hydraulic extension, if fitted), up to the critical values. These values, which are not exceedable, determine the intervention levels and provide the data for setting the device.

The pressure values detected in the lifting rams are turned into electric signals by the transducers, and sent to the electronic logic of the device which determines the locking or unlocking of the controls concerned, according to the horizontal position of the crane outer boom (mercury level switch); only the controls allowing a reduction of the overload are enabled, while those increasing it are disabled.

The device features an electro-hydraulic control that does not allow the set value to be exceed, by deactivating the controls (levers in neutral position) commanded by the limiting device. When the controls are released (levers in neutral position) it's this electronic logic that handles which manoeuvres are disabled, according to the position of the crane outer boom and in overload condition, by sending electric signals to special micro-switches placed on the elements of the distributor.

(!) ATTENTION (!)

The presence of the lifting moment limiting device does not release the user from the obligation to respect what is indicated on capacity plates and lifting curves.

16.3 Control panels

Layout of the control panel (fig. 17), placed next to the distributor of the crane

A - green, yellow and red led band signalling the load percentage as compared to the capacity plate

Green light load between 0 and 90%
Yellow light load between 90 and 100%
Red light load higher than 100%

B - Display

C - Control buttons (4 control buttons)

D - "STOP" button

E - Audible alarm push button (danger)

F - Green warning light (electric on)

G - Control button for XP

H - Control button for the temporary exclusion of the lifting moment limiting device

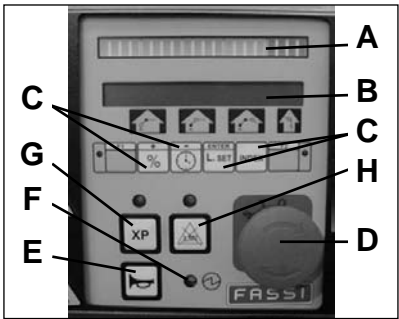


fig. 17

Layout of the control panel (fig. 18) placed on the double control side and on top seat (version with hand-cable controls)

D - "STOP" button

E - Audible alarm push button (danger)

F - Green warning light (electric on)

G - Control button for XP

H - Control button for the temporary exclusion of the lifting moment limiting device

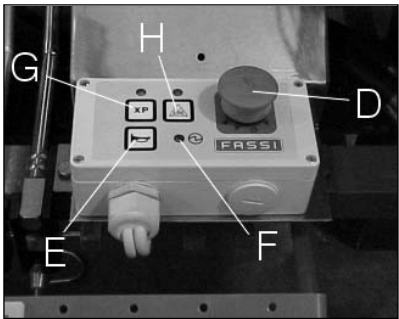


fig. 18

If the **green warning light F** comes on, it confirms that the electric circuit is active.

!NOTE! **In the absence of electric power all crane functions will be desactivated.**

If the **yellow led A** comes on during load handling, 90% of the capacity (lifting moment) has been reached.



16.3

CONTROLS TO OPERATE THE CRANE GR2_45»60_3_4

If during operation the **red led B** comes on, the activation value of the lifting moment limiting device has been reached.






Any hidden danger situation for persons must be audibly alarmed by pressing the push button **E**.

When there are serious, imminent and dangerous conditions for persons and things during load handling, operate on the **STOP** button, which isolates all crane functions.

Display on the control panel

When the electric feeding has been activated (after the version's number of the software) the pressure in the inner, outer ram and the jib and the percentage of load on the winch are displayed.

In relation to the view chosen like standard, when you start the radio remote control the pressure values are displayed in:

- "bar" if on the display, on the left of the values, no symbol is present.
- "daPsi" if on the display, on the left of the values, the symbol * is present.
- By pushing the button  the percentage values of pressure in the inner, outer ram and the jib and the percentage of load on the winch are displayed. By pushing a second time the button  the pressure values in the inner, outer and jib rams movement in the measurement unit non standard and the percentage of load on the winch are displayed. By pushing again the button  you return to the initial display.
- For the use of the control button  see Par. 22.2.
- By pushing the button  one or more times you return to the initial display (view of the pressure values).
- For the meaning of other messages see Par. 16.7.1 "Diagnostic"



16.4 Load handling

Manoeuvres of the crane

Fig. 20a-b e 20c-d illustrate the configurations of the crane (and of the eventual hydraulic extension) with the manoeuvres allowed and not allowed by the device, in connection with the horizontal position of the crane and extension outer booms.

(!) ATTENTION (!)

In the overload condition, if you simultaneously effect one permitted and one non permitted manoeuvre you haven't movement. In the overload condition, before effecting a permitted manoeuvre, it is necessary to return all the levers to the neutral position.

(!) ATTENTION (!)

During load handling with the crane and with the crane and hydraulic jib, in vertical configuration or close, the operator must strictly refer to the loads indicated on the capacity plates since the limiting device shows to be not particularly sensitive with vertical lifts.

Crane with activated limiting device by the intervention of the crane or the hydraulic jib (overload condition) and with outer boom of the crane above the horizontal line fig. 20a-20b

Manoeuvres not allowed:

- Inner boom descent
- Outer boom descent
- Extension of the crane extension boom sections (*)
- Lift and descent of the hydraulic jib
- Extension of the extension booms section of the jib
- Winch rope lift
- Movement of the hydraulic accessories (**)

NOTES: (*) If the overload condition has been activated by the hydraulic extension, the extension of the crane boom sections is permitted.

(**) It is permitted only when coupled with permitted manoeuvres.

Manoeuvres allowed: all the manoeuvres that bring the load closer to the column and therefore the overload

- Rotation in both directions
- Inner boom lift
- Outer boom lift
- Re-entry of the crane extension boom sections
- Re-entry of the jib extension boom sections
- Winch rope descent

Crane with activated limiting device by the intervention of the crane or the hydraulic jib (overload condition) and with outer boom of the crane under the horizontal line fig. 20c-20d

Manoeuvres not allowed:





- Inner boom lift
- Outer boom lift
- Extension of the crane extension boom sections (*)
- Lift of the hydraulic jib
- Extension of the extension booms section of the jib
- Winch rope lift
- Movement of the hydraulic accessories (**)

NOTES: (*) If the overload condition has been activated by the hydraulic extension, the extension of the crane boom sections is permitted.

(**) It is permitted only when coupled with permitted manoeuvres.

Manoeuvres allowed: all the manoeuvres that bring the load closer to the column and therefore the overload

- Rotation in both directions
- Inner boom descent
- Outer boom descent
- Re-entry of the crane extension boom sections

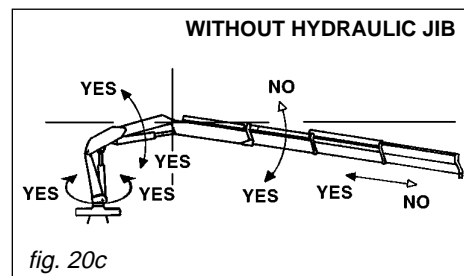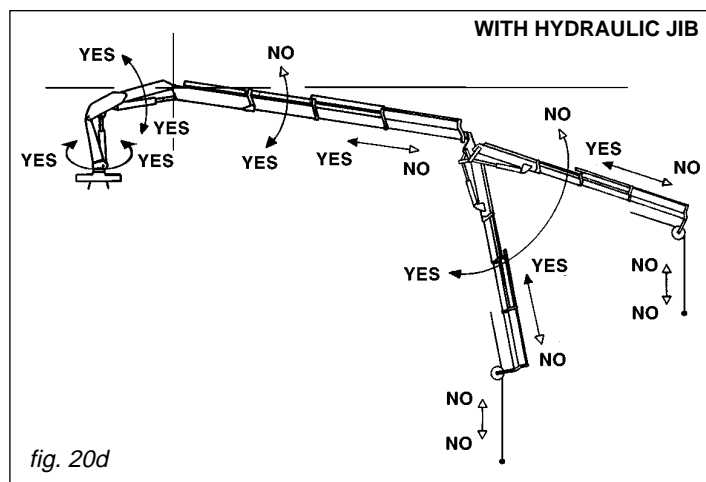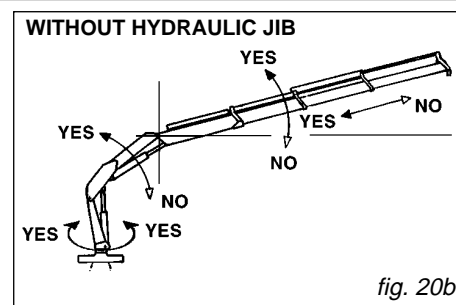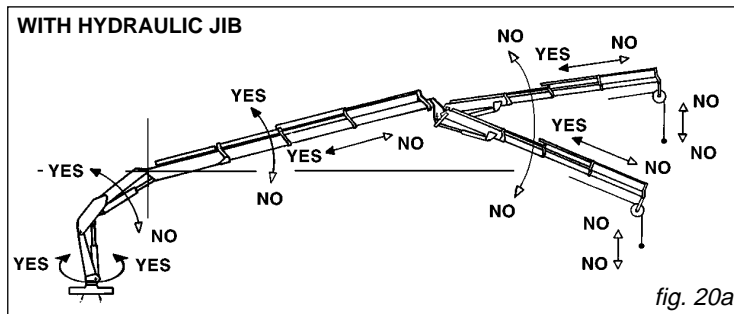



- Descent of the hydraulic jib
- Re-entry of the extension booms section of the jib
- Winch rope descent

Crane with activated limiting device (overload condition) by the intervention of the load limiter of the winch

Manoeuvres allowed:

- Rotation in both directions
- Re-entry of the crane extension boom sections
- Re-entry of the jib extension boom sections
- Winch rope descent

Manoeuvres not allowed:

- all other movements

Crane without load applied and activated limiting device

The limiting device may intervene also during loadless crane operation following a pressure peak provoked by the attainment of the stroke end of the lifting ram at high speed. In this condition, reactivation of the crane commands by performing one of the manoeuvres is allowed by the system. If the limiting device intervenes when both the lifting rams are open and at stroke end, and the crane extension booms are fully folded, it is not possible to reactivate the commands, since the permitted manoeuvres (arm lifting and extension fully retracted) cannot be carried out, because of the actual configuration of the crane (outer boom above the horizontal). The device, in this case, allows the descent manoeuvres since it verifies that it was a peak pressure inside the lifting rams; the crane being loadless, thus these manoeuvres will be allowed.

Temporised exclusion device of the lifting moment limiting device

The activation of the exclusion device is permitted when the limiting device is activated and only in the case when it is impossible to carry out any of the allowed manoeuvres. This generally occurs when handling heavy and bulky loads, with the outer boom above the horizontal and the extension boom sections almost retracted.

(!) ATTENTION (!)

The activation of the exclusion system for the lifting moment limiting device can ONLY be operated when the extension booms of the crane and of the hydraulic jib (when fitted) are fully retracted.

The activation button of the excluding device, **only in the case of the crane**, are to be activated as follows:

- retracted the crane extension booms until stroke end and momentarily pressurise;
- maintain the command for the extensions boom until the red led of the button LMI placed on the control panel begins to flash;
- continue to keep the command for the extensions boom and press the exclusion device button, the flashing red light becomes fixed;
- release the lever commanding the extensions booms.

The permitted manoeuvre is the descent of the outer boom in order to bring it under the horizontal; remember that you have at your disposal **five (5)** seconds from the command operation to carry out the descent. After such period of time, wait at least **one (1)** minute in order to be allowed to carry out the manoeuvre once again.

The activation button of the excluding device, **only in the case of the hydraulic jib**, are to be activated as follows:

- retracted the extensions booms of the hydraulic jib until stroke end and momentarily pressurise;
- maintain the command for the extensions of the hydraulic jib boom until the red led of the button LMI placed on the control panel begins to flash;
- release the lever commanding the extensions booms of the hydraulic jib;
- within 3 seconds from releasing the lever commanding the extensions booms of the jib, retracted the extensions booms of the hydraulic jib until stroke end and momentarily pressurise (the red led turns off as soon as the re-entry begins);
- maintain the command for the extensions boom until the red led of the button LMI placed on the control panel begins to flash;
- continuous to keep the command for the crane extensions boom press the exclusion device button, the flashing red light becomes fixed;
- release the lever commanding the crane extensions booms.

The permitted manoeuvre is the descent of the outer boom in order to bring it under the horizontal; remember that you have at your disposal **five (5)** seconds from the command operation to carry out the descent. After such period of time, wait at least **one (1)** minute in order to be allowed to carry out the manoeuvre once again.

**(!) ATTENTION (!)**

Activation of the exclusion device of the lifting moment limiting device.

When the operator uses this device, it means that he wishes to override the lifting moment limiting device in order to make some manoeuvres (which would be impossible with the device active) that bring the moment to within the maximum level, but involve an overload condition. In such an emergency condition (where the lifting moment limiting device has been disabled), the operator, who is the main responsible for the machine safety, must:

- carefully consider the manoeuvres required to return to normal working conditions: it is however compulsory to effect the re-entry of the extension booms at first,
- calmly and carefully assess the type and scale of the hazards arising from these manoeuvres and the possible reaction of the crane (tipping over, frame overload, uncontrolled fall of the load due to a hydraulic system overload etc.);
- make all movements as slowly as possible to reduce the dynamic overload to the minimum.

16.5 Lifting moment limiting device for two working sectors

In case of one sector of the working area with reduced stability of the vehicle (e.g. sector in front of vehicle cab) the limiting device can be provided with a special function which allows to operate with a reduction of the intervention level. The reduction of the intervention level reduces the crane capacity values and this reduction value is defined in the vehicle stability calculation. Consequently the working area is divided in one sector (e.g. body side) where the crane works according to the capacity plate values and another sector (e.g. cab side) where it works with reduced capacity values. The device has consequently two intervention levels which are activated in relation to the sector of the crane working area always securing the vehicle stability.

(!) ATTENTION (!)

If the rotation stops by going through the working zone where the crane can operate according to the capacity plate values to the one where it can operate according to the reduced values, it means that one of the following conditions is reached:

- rotation of a load bigger than the one admitted in the reduced sector defined in the vehicle stability calculation;
- rotation without load applied but with (at least) one of the inner, outer rams of the crane or the jib (if fitted) extended and pressurised at the stroke end.

The following manoeuvres are allowed:

- the opposite rotation
- the manoeuvres allowed by the limiting device in relation to the position of the outer boom (positioned over or under the horizontal line).

16.6 Rotation limiting device

When a sector of the working area exists in which the stability is insufficient (for example in the area in front of the cab) the permitted arc of rotation is limited by means of an adjustable electro-hydraulic device which only allows operation within the safe area. (Warning: persist in the operation!)

When exceeding the "safe area" the rotation limiting device only allowing:

- the opposite rotation
- the manoeuvres allowed by the limiting device in relation to the position of the outer boom (positioned over or under the horizontal line).



16.7

CONTROLS TO
OPERATE THE CRANE
GRU FASSI

If a reduction of capacity is necessary because of insufficient stability of the complete unit, new capacity plates must be fixed giving the derated capacity in accordance with the final stability test.

(!) ATTENTION (!)

Always check carefully that the vehicle is perfectly stable, paying special attention to the area immediately in front of the driver's cabin as this is usually less stable.

16.7 In the case of the appearance of the signal “ALARM” on the display of the control panel or of the radioremote control or in case of an electrical failure.

In these cases, because of a fault, shown in the system, the crane is not functional any more. The checks that the operator can effect to reactivate the crane functions are the following:

- in case of an electrical failure check the connection of the feeding cables to the battery;
- in case of the appearance of the signal “ALARM” on the display of the push-button panel see Par. 15.7.1 and check if the fault can be resolved by the operator.

If the fault cannot be resolved, you must immediately go to a **FASSI authorised Center** after bringing the crane to its rest position in relation to the conditions explained in the paragraphs 15.7.2, 15.7.3.

16.7.1 Diagnostic (Alarms/Input/Output) LME vers. 4-5 UC 01-7

It is possible to install on the machine some operation improvements of the limiting device not yet described here. For this purpose compare the released version of the software installed on the machine (you can read it on the display when switching on) with the one in this paragraph's heading. For further explanations please refer to Fassi service network.

All the eventual problems that the electronic device can have are shown on the display of the control panel and they create the stop of all crane functions. The visualisation of the alarm must be reset pushing the button I.m.l.d. exclusion on the main box control panel, which bring again the display in the original screen showing the pressures only if the problem has been solved. As consequence of this, when appear an alarm signal it is necessary to solve the problem because only in this case will be possible to reset the display and reactivate the crane working.



ALARM CODES:

- 01 - electronic card alarm
- 02 - inner ram transducer alarm
- 04 - outer ram transducer alarm
- 06 - jib articulating ram transducer alarm
- 08 - proximity sensor alarm (central one off)
- 09 - proximity (lateral one off)
- 10 - mercury sensor level alarm (connector disconnected)
- 11 - mercury sensor level alarm (sensor defect)
- 12 - winch alarm
- 14 - microswitch on the inner ram distributor segment alarm
- 15 - microswitch on the outer ram distributor segment alarm
- 16 - microswitch on the jib articulating ram distributor segment alarm
- 17 - microswitch on the extension rams distributor segment alarm
- 18 - microswitch on the jib extension rams distributor segment alarm
- 19 - microswitch on the winch distributor segment alarm
- 20 - microswitch on the rotation distributor segment alarm
- 21 - 10A fuse alarm (fuse inside the main control panel protecting the emergency circuit)
- 22 - winch stroke end device alarm

Only for crane with slew ring:

- 30 - inconsistency of the rotation lever movement alarm
- 31 - inconsistency of the inner ram lever movement alarm
- 32 - inconsistency of the outer ram lever movement alarm
- 33 - inconsistency of the crane extension ram lever movement alarm
- 34 - inconsistency of the jib articulating ram lever movement alarm
- 35 - inconsistency of the jib extension ram lever movement alarm
- 36 - inconsistency of the winch lever movement alarm
- 40 - CAN-BUS reading alarm on unit FX003
- 41 - CAN-BUS reading alarm on unit FX004
- 42 - CAN-BUS reading alarm on radio remote receiver unit

MESSAGES	EXPLANATION
"WINCH OFF"	- information for the activation of the winch up or down.
"WINCH CAL.ERROR"	- flashing warning (10 seconds each minute); it appears when the maximum detection of the winch adjustment with load is exceeded.
"STOP BOOM OUT"	- warning for the interruption of the extension boom exit because of a sudden variation of the cable tension.
"STOP JIB 25°"	- warning of not permitted activation of the lifting functions because of the activation of the maximum vertical operativity of the jib when it is complete with the 25° angle increasing.
"PLE"	- activation of the speed reduction for the use of the access platform.



16.7.1

CONTROLS TO
OPERATE THE CRANE
GRU FASSI

What to do in case of alarm

CODE	REMEDY
01	Take off the tension to the system and take on again the tension. If the problem remains, take off the tension to the system again, take on the tension and wait 12 minutes (12 minutes waiting time is a compulsory condition and needs to be checked with a watch), take off the tension to the system again, take on again the tension. If the problem remains, you must immediately go to a FASSI authorised Center .
02	Check the connector of the pressure transducer. If the problem remains, you must immediately go to a FASSI authorised Center .
04	See code 02.
06	See code 02.
08	Check if the red light on the proximity sensor is off and verify if the metallic band is rightly positioned.
09	See code 08.
10	Check that the connector of the mercury sensor level is not damage. If the problem remains, you must immediately go to a FASSI authorised Center .
11	You must immediately go to a FASSI authorised Center .
12	See code 11.
14	See code 11.
15	See code 11.
16	See code 11.
17	See code 11.
18	See code 11.
19	See code 11.
20	See code 11.
21	Replace the 10A fuse at the nearest workshop after removing the carter and the cover of the main panel FX000. (See electric schematic Par. 5)
22	See code 11.

Only for crane with slew ring:

30	See code 11.
31	See code 11.
32	See code 11.
33	See code 11.
34	See code 11.
35	See code 11.
36	See code 11.
40	See code 11.
41	See code 11.
42	See code 11.

MESSAGES	REMEDY
"WINCH OFF"	Place the distributor bank lever controlling the winch in neutral position.
"WINCH CAL.ERROR"	See code 11.
"STOP BOOM OUT"	Place the distributor bank lever controlling the extension booms in neutral position. If the warning appears when the winch cable lifting stroke end is not reached, place in any case the lever in neutral position and then restart to operate.
"STOP BOOM UP"	Lifting functions not available; are authorized only descent functions.

To verify the right working of the differents input it is possible to use the display in the "INPUT" menu.



16.7.2 Temporary OVERRIDE-REACTIVATION for the crane functions with standard distributor

- In case of an electrical failure or of the appearance of the signal "ALARM" on the display **B** of the control panel of the lifting moment limiting device:

Firstly remove the protection guard. Then unscrew the fixing screws (13 mm hexagonal spanner).

On the distributor it has been installed an electro-valve with a manual locking function (fig. 22) which allows to reactivate all the crane functions in case of absence of the electric power. Only in these conditions it is permitted to remove the lead seal which protects the device. Push the button and turn it into the clockwise sense (fig. 22a pos. 1-2); the button stays in stable and closed position.

- (!) **When the electric power is reestablished, remember to put the button in its original position, turning it into the anti-clockwise sense.**
(fig. 22a pos. 3-4)

(!) ATTENTION (!)

Activation of the reactivation button.

This activation prevents the operation of the lifting moment limiting device, consequently, the operation under such conditions can involve an overload condition. In such an emergency condition (where the lifting moment limiting device has been disabled), the operator, who is responsible for the machine safety, must:

- **carefully consider the manoeuvres required to return to normal working conditions: it is however compulsory to effect the re-entry of the extension booms at first,**
- **calmly and carefully assess the type and scale of the hazards arising from these manoeuvres and the possible reaction of the crane (tipping over, frame overload, uncontrolled fall of the load due to a hydraulic system overload etc.);**
- **make all movements as slowly as possible to reduce the dynamic overload to the minimum.**

After such emergency operations and prior to re-use of the crane, you must immediately go to **FASSI authorised Center** for testing the structure and re-sealing of the device.

16.7.3 OVERRIDE - REACTIVATION lever for the crane functions (with Danfoss distributor)

- In case of an electrical failure or of the appearance of the signal "ALARM" on the display **B** of the control panel of the lifting moment limiting device:

Firstly remove the protection guard. Then unscrew the fixing screws (13 mm hexagonal spanner).

On the distributor it has been installed an emergency tap lever (fig. 23) to be used in the event of a black-out, electrical or hydraulic malfunctions.

Only In these situations it is permitted to remove the lead seal placed on the tap lever and place it in the closed position.

- (!) **When the electric power is reestablished, remember to put the button in the opened position.**

CONTROLS TO
OPERATE THE CRANE
GR2_45»60_3_4

16.7.2



fig. 22

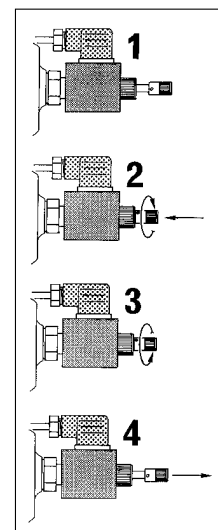


fig. 22a



fig. 23



16.7.3

CONTROLS TO
OPERATE THE CRANE
GR2_45»60_3_4

(!) ATTENTION (!)

Activation of the emergency lever.

This activation prevents the operation of the lifting moment limiting device, consequently, the operation under such conditions can involve an overload condition. In such an emergency condition (where the lifting moment limiting device has been disabled), the operator, who is responsible for the machine safety, must:

- carefully consider the manoeuvres required to return to normal working conditions: it is however compulsory to effect the re-entry of the extension booms at first,
- calmly and carefully assess the type and scale of the hazards arising from these manoeuvres and the possible reaction of the crane (tipping over, frame overload, uncontrolled fall of the load due to a hydraulic system overload etc.);
- make all movements as slowly as possible to reduce the dynamic overload to the minimum.

After such emergency operations and prior to re-use of the crane, you must immediately go to **FASSI authorised Center** for testing the structure and re-sealing of the device.


(!) Interferences with the valves or removal of the lead seal release the **FASSI GRU IDRAULICHE** from any responsibility and invalidate the warranty.

(!) ATTENTION (!)

The presence of the lifting moment limiting device does not release the user from the obligation to respect what is indicated on capacity plates and lifting curves.

(!) CAUTION DANGER (!)

On the outer boom there is a mercury capsule (mercury level switch) duly protected and provided with the following warning stickers.

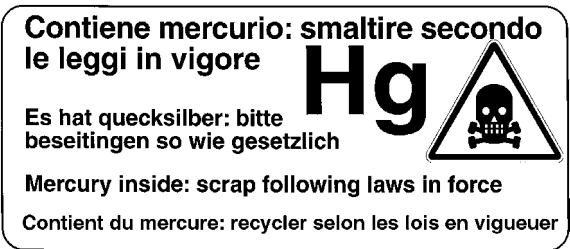

Mercury is extremely toxic. In case of replacement and/or scrapping, dispose of or recycle the capsule containing mercury with maximum care, and in accordance with the national regulations in force.

(!) ATTENTION (!)

Do not walk on the lever guards of the lifting moment limiting device positioned on the distributors or electric control panels. DE1679

Do not use water to extinguish fire! DE1680



DE1679



DE1680



16.9 Use of the radio remote control

A proportional radio remote control subjugate to the distributore can be installed.

Tele-radio remote control

The radio remote control, in the case of a discharged battery or in the presence of interference in the radio transmission, or use of the crane in situations where the transmission by radio is forbidden, it is easily transformed to cable remote control using a connecting cable between the remote control unit and the receiver radio control placed on the base (fig. 17)

(!) WARNING (!)

First read the instructions given in the User's Manual supplied by the Manufacturer before using the remote control to avoid improper use.

The plates shown on the side of each push-button panel lever of the radio remote control and on each lever on the emergency control, determine the operation of the levers in relation to the movement of the crane.

(!) ATTENTION (!)

The sequence of the plates placed on the crane controls may be different.
Make sure that the lever you are going to operate correspond to the control you selected.

(!) Operate the levers smoothly and gradually (!)

When carrying out simultaneous movements of two or more functions, also related to pump flow and lever travel, it is possible that on reaching the stroke end of a particular function, an increase in speed of the other functions will occur.



fig. 17



16.9.1


CONTROLS TO
OPERATE THE CRANE
GR4

16.9.1 Scanreco control unit with linear levers


ACCESSORY CONTROLS



CRANE CONTROLS



socket for
serial cable

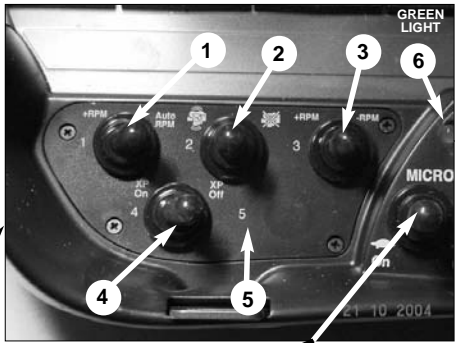

it slows down all the
manoeuvres ()
and it returns them to
100% speed ().

Note It work also
with XP by
slowing down
furtherly

(5 flashing levels of the
green light up fast
(0=off) to slow (4) at 3
second intervals)

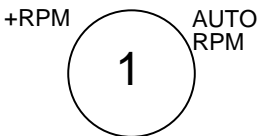


fig. 10

radio turning off
and stop button
"STOP"

red light:
- discharged battery and
change of frequency
(flashing light)
- starting (fixed)

radio starting
and audible alarm




GAS+ and AUTO RPM


or




ELECTRIC REGENERATIVE VALVE

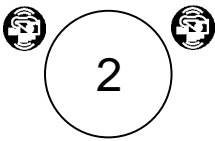

button for starting and
turning off the engine

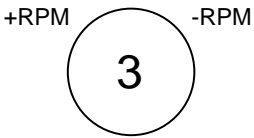

GAS+ and GAS-

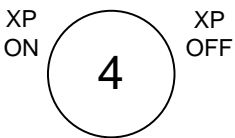

selector for the use of the crane standard or XP



available if further options are required



17 USE OF IMPLEMENTS

USE OF IMPLEMENTS

GRU FASSI

17

17.1 Generality

The crane, in load condition H1B3, can be provided with implements such as:

- Manual extensions
- Winches
- Hydraulic extensions
- Personnel baskets
- Clam 'shell buckets
- Augers

- (!) When using an implement it is always necessary to check that its weight, dimension and capacity is matched to the crane performances.
For further information please refer to **FASSI GRU IDRAULICHE**

Warning and norms for crane use also apply for hydraulic implement use.


Before using a personnel basket it is necessary to provide the crane with the safety devices requested by the local norms in force, EN280 in Europe, and prior to use of the crane it has to be tested and inspected in accordance with the local legal requirements.

- (!) When the crane is fitted with implements or laid on the truck body it is necessary to check they are locked to assure the impossibility of accidental movements and that the led signalling maximum obstruction in height (if fitted) confirms the correct positioning of the crane.
- (!) The crane can operate, intermittently and not continuously, with lifting devices other than the hook, only on loose and light materials (not on scrap iron).

(!) ATTENTION (!)

In case of using the crane with lifting devices other than the hook, the access to the working area at the persons must be prevented.

The dimensions and the capacity of the implements must be proportioned with crane performances.

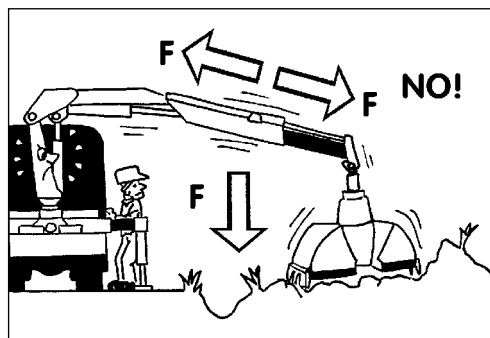

(!) WARNING (!)

CRUSHING (F) OR PUSH (F) MANOEUVRES ARE NOT PERMITTED.



17.2

USE OF IMPLEMENTS GRU FASSI

17.2 Hydraulic connections for implements - supplementary hoses.

(!) WARNING (!)

To ensure that the control corresponds to the implement movement, hydraulic connections are symmetrically fitted with coupling unions. Never invert such positions: movements inversion as well as operating difficulties or unusual overload with implement itself could occur.

NOTE

When using coupling unions it is necessary to verify that there is no trace of soil, dirt etc. on the unions and inside the seats so as to avoid the oil contamination and consequently wear the tightening " surface of unions or ram seals.

17.3 Oil cooler (heat exchanger)

The crane is equipped with an oil cooler (air-oil heat exchanger) to prevent damage caused by an excessive increase of the oil temperature.

NOTE

When working in a low temperature climate, we recommend to bring the hydraulic oil up to working temperature prior to starting work, This is best done by operating the crane thru all its functions ram stroke end.

(!) WARNING (!)

The heat exchanger openings must be kept clear and clean. At no time should it be covered.



18 MANUAL EXTENSIONS

18.1 Generality

These are additional extensions, which are placed in the hydraulic extensions of the crane and of the hydraulic jib and secured by locking pins.

Manual extensions have a maximum capacity independent from the crane configuration as shown on the capacity plates.

(!) ATTENTION (!)

Manual extensions can be extracted from the rest position and be operative, once the security pins have been removed, with the outer boom in sliding position.

(!) ATTENTION (!)

- Do not stand in front of stabilisers during operation!
Operate from a lateral position in respect of the extension movement of the manual extensions; operation from the frontal position is dangerous.
- Verify that the area is suitable for this operation and there are no unauthorized persons in the working area.
- Do not permit the extension to slide out at speed as this will damage the stroke end stops.
- Do not try to align the holes (slots) for the locking pins with your fingers; always use a suitable tool.
- When manual extensions are in place, fit the locking pins and secure them with the check pins to prevent accidental escape.

(!) Always remember that when operating with implements, their tare weight must be deducted from the capacity of the crane.

18.2 Lifting moment limiting device “ELECTRONIC” for the manual extensions (valid starting from the version 3.0 of the software)

HOW TO CONTROL THE LOAD HOOKED ON MANUAL EXTENSIONS.

This procedure aims to calculate the weight applied on the manual extensions. It is necessary to apply the same procedure EVERY TIME you use the manual extensions.

For its correct execution, follow meticulously the instructions reported HERE.

The extension limiting device IS NOT ALWAYS ACTIVE; on the contrary of the crane limiting device, it responds about lifting a load only if QUESTIONED, therefore only if you enable the procedure. Remember that the procedure is manual. In any case always refer to the capacity plates of the crane.

The limiting device for manual extensions, when interrogated, compares the real weight applied on the lifting hook (inclusive of all the accessories attached) with the value reported on the capacity plates. Such evaluation is effective only during the execution of the procedure, therefore it is prohibited to add weight or replace loads after the procedure is completed; in such case the procedure shall be executed again from the start.

In the case one or more manual extensions are added or removed with respect to the initial installation, it is COMPULSORY to have the crane initial configuration file modified accordingly (See Authorised Shops).

Before activating the procedure, extend and lock by a pin not only the manual extension you intend to use but also the preceding ones.




18.2 USE OF IMPLEMENTS
GR2_45»60_3_4_5

PANELS OF THE RADIO-REMOTE CONTROL

Figure A (left side)



Figure B (right side)

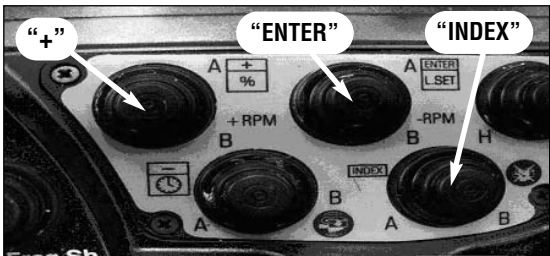

HOW TO PREDISPOSE THE USE OF MECHANICAL EXTENSIONS ON CRANE OR ON JIB

Note: In case of crane with slew ring and top seat, all the procedures mentioned below can be executed from both the control panel and the radio-remote control.

1. **Initial display (Fig. 1)**
Starting from the standard menu of the electronic lifting moment limiting device displaying the pressures of the lifting rams (fig. 1), keep the “F1” key (control panel), or the “+” and “ENTER” key (radio-remote control with the selector on “A”, fig. A and B) pressed for some seconds.

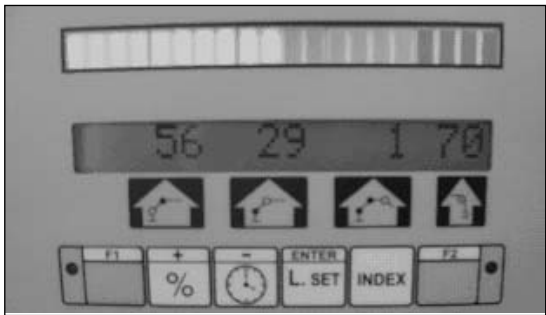


fig. 1



fig. 1

2. **Choice the installation of the manual extensions on Crane or on Jib.(Fig. 2)**
If the crane features the installation of the manual extensions both on the crane and on the jib, after the initial display, when you keep the “F1” (control panel) or “+” and “ENTER” key pressed (radio-remote control), the program displays the message illustrated in Figure 2.



fig. 2



fig. 2

Use the “+” button to select JIB if in the actual configuration the manual extensions are mounted on JIB or CRANE if the manual extensions are mounted on the crane.



3. **Message “M1 - M2 - M3” (fig. 3)**

After having pressed the above mentioned keys, the message illustrated in Fig. 3 will be displayed.

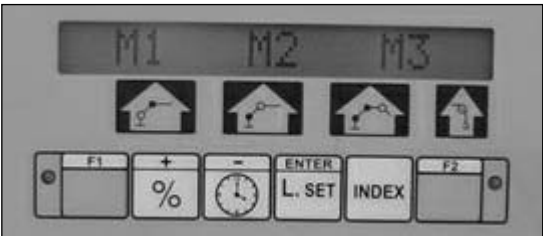


fig. 3

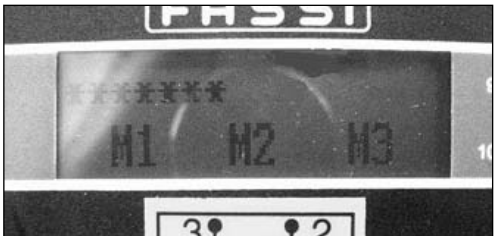


fig. 3

At this point, through the "+" button, select the correct number of the manual extension at the moment in use (M stands for manual and 1, 2 and 3 indicate the number of the manual extensions). Select the number of the manual extension you want; that number starts blinking. You can select only the manual extensions that have been installed: i.e. if only one manual extension is installed, by pressing the "+" key, only the M1 extension will start flashing. To confirm your choice, press once the "F1" key (control panel) or "ENTER" (radio-remote control); you'll access the section dedicated to the system configuration

4. **Message “K1 - K2 - K3 - K4” (fig. 4)**

[paragraph to read only in case of manual extensions installed on Jib and not on Crane]

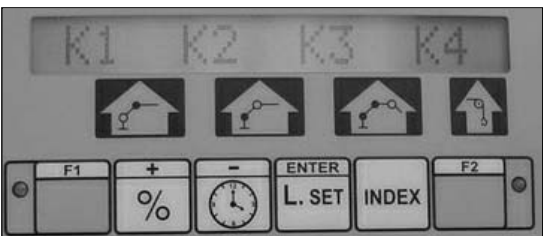


fig. 4



fig. 4

If you press the "ENTER" key with the manual extensions mounted on the jib, the screen of Fig. 4 will be displayed.

Therefore we can choose the most convenient configuration among the following:

- K1 Outer booms of the crane totally re-entered and jib extensions as you like
- K2 Outer booms of the crane as you like and jib extensions totally re-entered
- K3 Outer booms of the crane totally extended and jib extensions as you like
- K4 Outer booms of the crane as you like and jib extensions totally extended

Select the desired configuration using the * button to move among the various options. Confirm your selection by pressing the "F1" (control panel) or "ENTER" (radio-remote control) key. If the hydraulic jib boom is not at its stroke end, the message at point 3 will be displayed; otherwise the message "F1 TO START" is visualised.

5. **Message “FC P2” (fig. 5)**

Note: do not hang any load on the hook.

This means that the outer ram must be positioned at its stroke end (if it is already in that position this message won't appear), using the lever until the next screen is displayed.



fig. 5



fig. 5



6. **Message “FC P3” (fig. 6)**
[paragraph to read only in case of manual extensions installed on Jib and not on Crane]
Note: do not hang any load on the hook.
This means that the jib outrigger must be positioned at its stroke end (if it is already in that position this message won't appear), using the lever until the next screen is displayed.

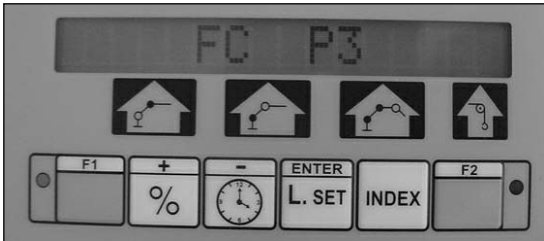


fig. 6



fig. 6

7. **Message “F1 TO START” or “F1 / ENTER START” (Fig. 7)**
At this point the display will visualize the message "F1 TO START" (control panel) or "F1/ENTER START" (radio-remote control). Press the "F1" (control panel) key or "ENTER" (radio-remote control) to continue.



fig. 7



fig. 7

8. **Message “UP P1” (see fig. 8)**
Note: do not hang any load on the hook.
It requires the activation of the inner boom lifting to eliminate an overpressure at the lifting ram bottom (the manoeuvre is activated but the crane does not move since all the movements are disabled).
Note: set the lever of the inner ram at its stroke end to simulate the lifting and keep it like this for at least three seconds.

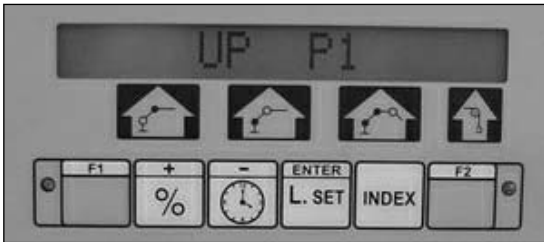


fig. 8



fig. 8

9. **Message “START LOAD P1” (vedere Fig. 9)**
Releasing the lever in neutral position the display visualises the message START LOAD P1.
It requires the slow lifting of the load using the inner ram. This allows to haul it up from the ground in order to calculate the weight which will be pointed out releasing the lever in neutral position.

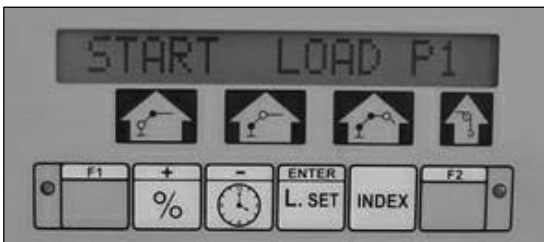


fig. 9



fig. 9



10. Message “LOAD OK” (fig. 10)

This message confirms that the load does not exceed the lifting limits of the crane and of the manual extension selected.



fig. 10



fig. 10

CLOSING OF THE PROCEDURE

All the crane functions will still be kept disabled. To start operating press the “INDEX” key (control panel fig. 10, or radio-remote control fig. D always with the selector in position “A” fig. C).



Figure C

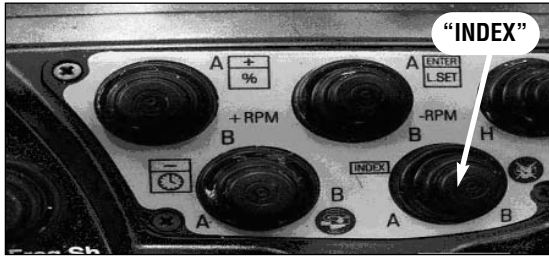


Figure D

For an overall view of the procedure, we attach the diagrams showing all the passages and messages that can be displayed during the procedure according to the various situations that may take place.

The script "EXIT" in the block diagram allows to exit the procedure.

FURTHER MESSAGES

After releasing the lever in neutral position you can find the following messages

If you keep pressed the "F2" key "F2" on the control panel or "LMI" on the push-button panel, it is possible to have an indicative evaluation of the weight applied on the hook (fig. 11).

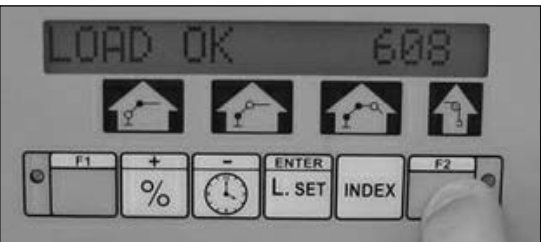


fig. 11



fig. 11

a. “PRESSURE ERROR” (see fig. 12)

It warns you that the system found an error in the pressures of the lifting booms. The whole procedure must be restarted.



fig. 12



fig. 12



18.2

USE OF IMPLEMENTS
GR2_45»60_3_4_5

b. “NO LOAD” (fig. 13)

In this case the load exceeds the max lifting value of the selected manual extension (it could still be on the ground). Unhook the load since it cannot be lifted using the selected manual extension. As in the preceding case, if you keep pressed the "F2" key, it is possible to have an indicative evaluation of the weight applied on the hook (fig. 11).

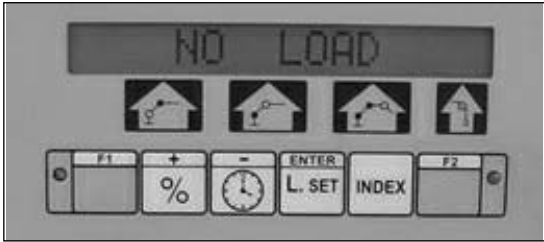


fig. 13



fig. 13

c. “NO SPEED” (fig. 14)

The load has been lifted too quickly; the whole procedure must be repeated from the beginning. The "LMI" key on the push-button panel or "F2" key on the control panel is disabled because it has not been possible to calculate the applied weight. Press INDEX on the push-button panel or "F1" key on the control panel to exit the procedure and go back to the standard operation. Put down the load on the ground and repeat the whole procedure from the beginning.



fig. 13



fig. 13

d. “NO LOAD CRANE!” (Fig. 15)

This message informs that the lifted load exceeds the max limit value of the crane/jib, irrespective of the manual extensions, so that the load cannot be lifted in this configuration due to the crane/jib overload. Also in this case the load must be either removed or approached to the crane, and handled in a different way without using the selected manual extension. Moreover the whole procedure must be repeated from the beginning.

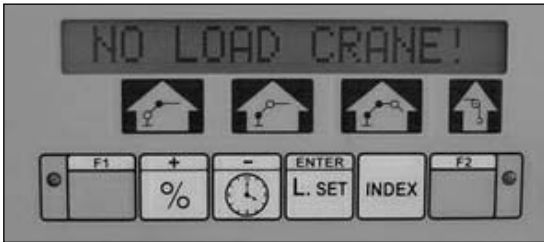



fig. 13



fig. 13




Electric schematic - crane with manual extensions

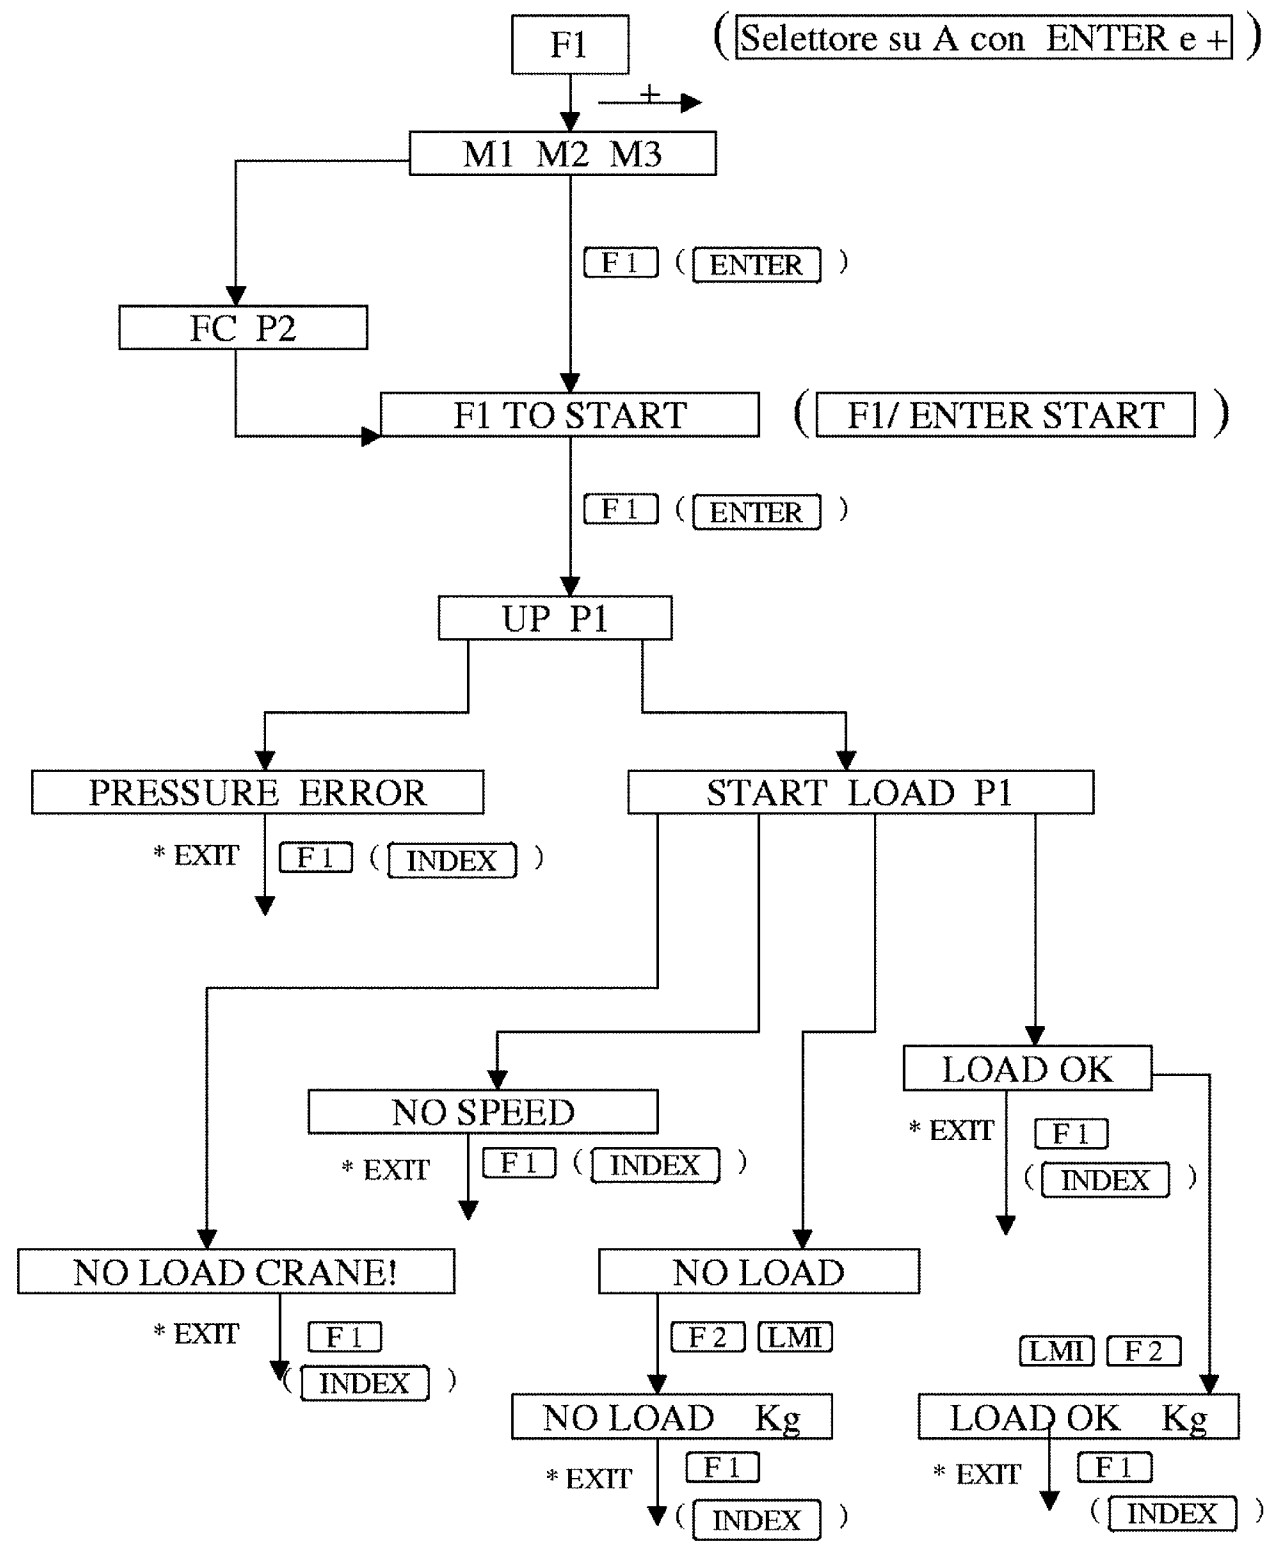







Electric schematic - crane with jib and manual extensions on jib

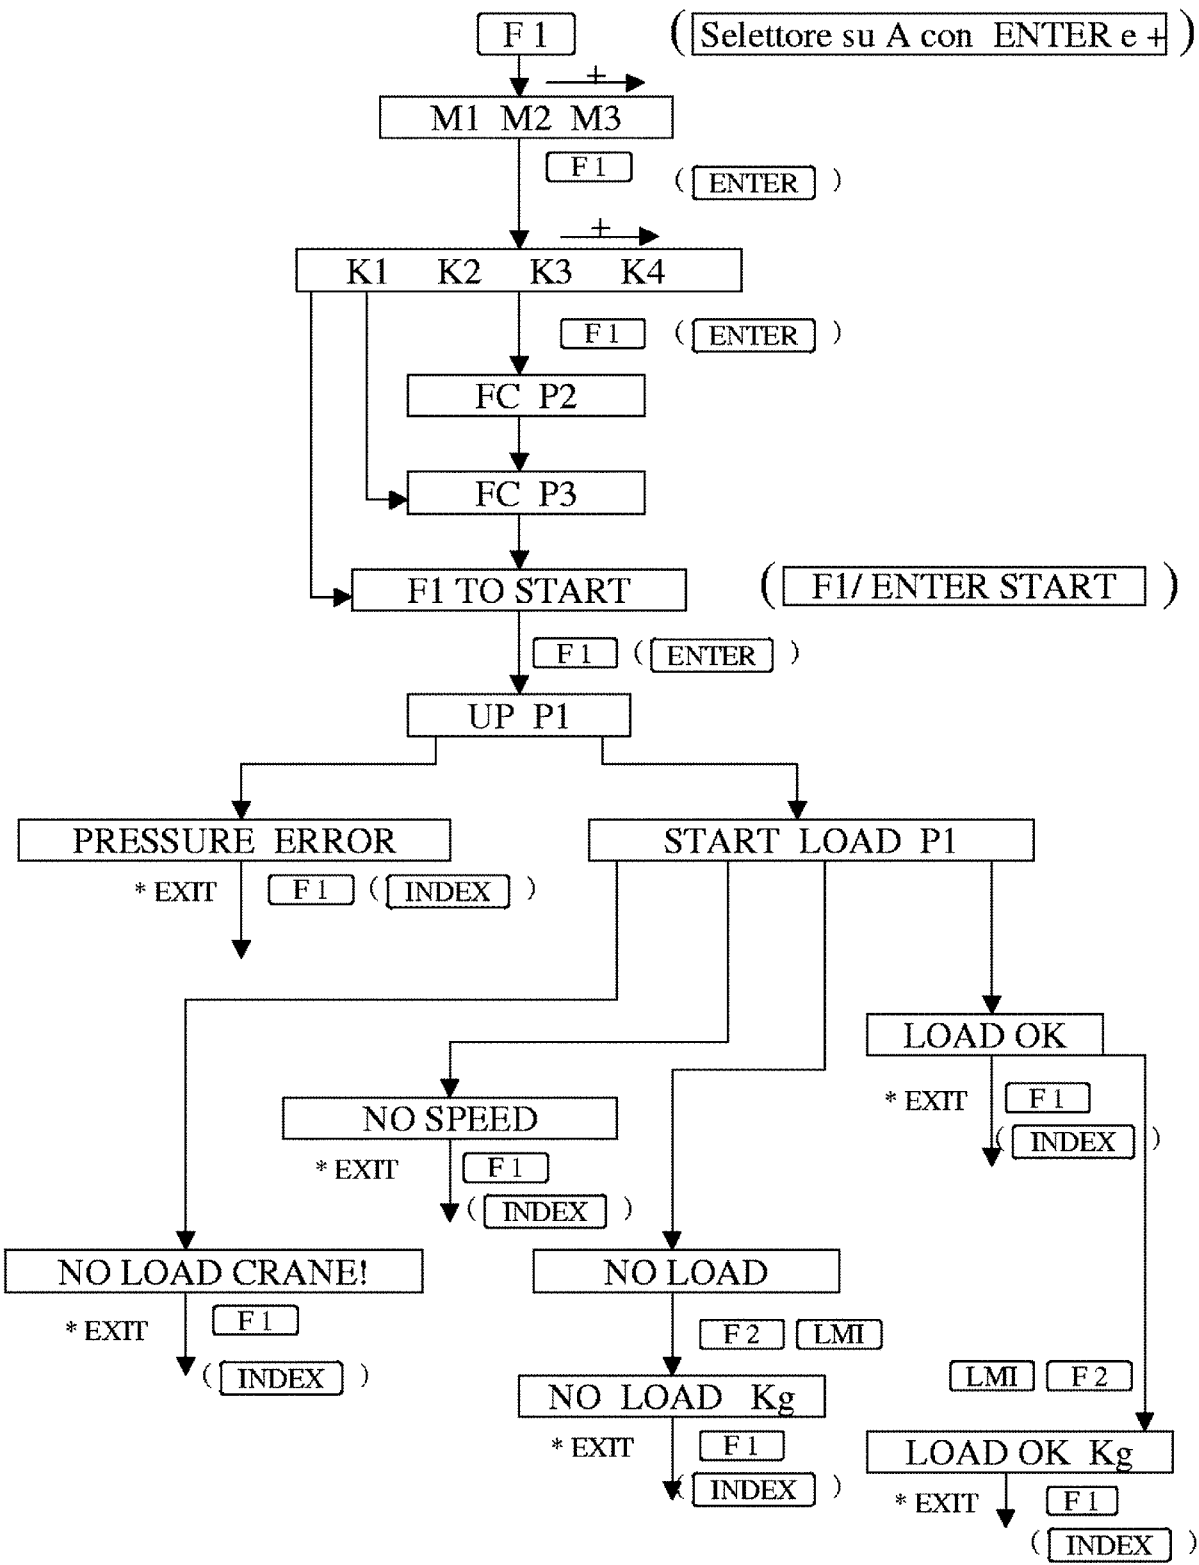



19 **CONTROLS TO OPERATE THE HYDRAULIC
IMPLEMENTS OF THE CRANE**

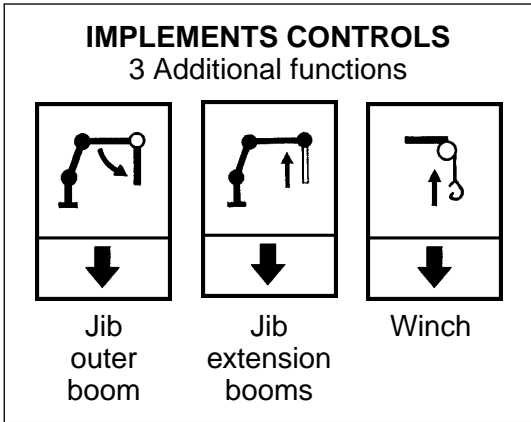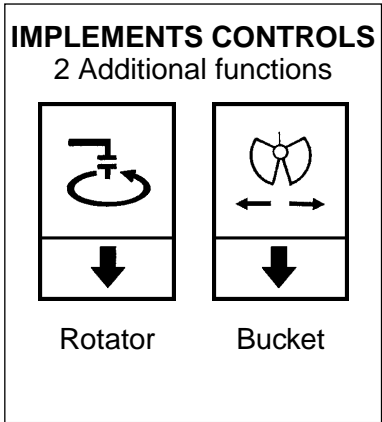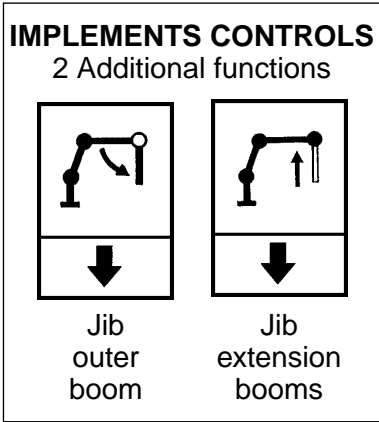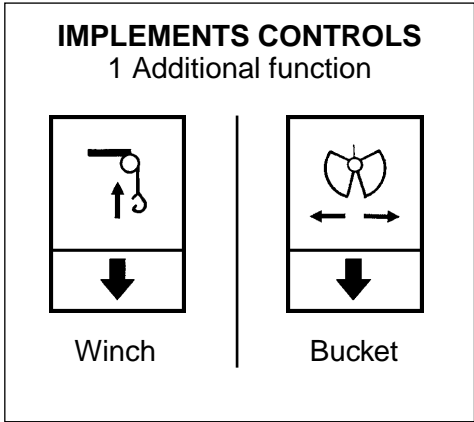

The plates placed over each lever define their function in relation to their movement.

(!) ATTENTION (!)

The sequence of the plates placed on the crane controls may be different.

Make sure that the lever you are going to operate correspond to the control you selected.





20 HYDRAULIC JIBS

20.1 Generality

The hydraulic jibs, foldable behind the cab, are additional booms, with articulation and with one or more extension booms to be fitted to the last extension boom of the crane; on request the manual extensions can be installed on the extension booms of the jib.

NOTE

The weights reported in the table are indicative and can vary in relation to the fittings.

The jibs are fitted by means of the insertion of the extension connecting boom into the crane extension boom; the fixing to the crane is obtained through locking pins. The hydraulic connection to the supplementary functions of the crane, is through quick couplings.

(!) Warnings and norms for crane utilisation apply also for hydraulic jibs use.

(!) ATTENTION (!)

The loads shown on the capacity plates which concern the configuration of the crane with hydraulic jib, refer to the hydraulic jib and consequently they are the same whether the crane has its extension booms retracted or extended.

(!) Warnings and norms for manual extensions are indicated at Paragraph 18.

(!) ATTENTION (!)

It is recommended to employ lifting means adequate to the weight of the load and radius of the extensions; during this operation the operator is responsible for the machine safety. The slings or the cables used for handling the load should have the adequate capacity and length; try to avoid the load overturning by having one length passed through itself and the other one through the hook.

20.2 Identification of the hydraulic jib

The model, the version of the crane, the year of construction and the serial number are stamped on the hydraulic jib (fig. 28) in the following sequence:


L102*03*001
| | |
A B C

A = model
B = year of construction
C = serial number

20.3 Nomenclature of the hydraulic jib

Pos. Description

1. Connecting boom
2. Locking pins
3. Jib outer ram
4. Jib outer boom
5. Boom extension rams
6. Extension booms
7. Manual extension (on request)
8. Lifting hook

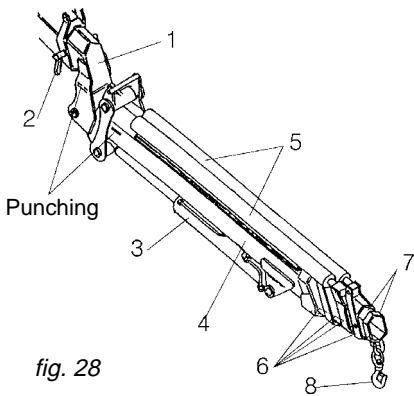



20.4 Manoeuvres to unfold the jib in working condition

- Operate as described to put the crane in working condition (paragraph 14.2).

By operating the corresponding levers:

- open the outer boom of the jib;
- extend the jib outer boom sliding sections;
- position the hook on the centerline of the load.

20.5 Manoeuvres to fold the jib in rest condition

By operating the corresponding levers:

- re-enter the hydraulic sections of the jib and of the crane;
- lift the inner boom to its stroke end;
- re-enter the outer boom of the jib and of the crane to its stroke end;
- operate, as described, to fold the crane in rest position.

(!) WARNING (!)

Always check and record the overall height of the crane in the folded position or in laid position in the body or on the load.

Always respect and pay proper attention that the load and dimension limits are in conformity with the road regulations.

20.6 Operations to remove the hydraulic jib from the crane

By operating the corresponding levers:

- re-enter the jib outer booms sliding sections to their stroke end;
- extend the crane outer ram to its stroke end;
- extend (of at least 1 - 1,5 m) the crane outer booms sliding sections;
- re-enter the outer ram of the jib and the inner ram of the crane to obtain the two rest brackets of the jib, either lay on the ground, or on the truck body or, if possible, on a specific rest trestle;
- remove screwing the locking pins;
- re-enter the outer booms sliding sections of the crane to free the first boom of the crane jib;
- disconnect the jib from the hydraulic circuit of the crane operating on the quick couplings.

- (!) Assure that the hydraulic jib is adequately stripped to avoid side turnover.

20.7 Operations to mount the hydraulic jib on the crane

By operating the corresponding levers:

- place the extension on the vehicle or on the ground in the direction of the movement of the extension booms;
- extend the crane outer ram to its stroke end and position the extension booms of the crane not too close to the first boom of the jib in order to allow the lining-up manoeuvres and the connection of the hoses;
- connect the jib hoses to the hydraulic plant through coupling unions, following indications of Paragraph 17.2, Hydraulic connections for implements - supplementary hoses;
- operate the outer ram of the jib and the inner ram of the crane in order to align the extension booms of the crane and the first boom of the jib thus allowing their connection;
- eventually repeat the previous operation until the fixing holes are aligned, working on the extension booms of the crane;
- insert the lock pin into the fixing holes and secure it with the check pin.



20.9 Use of the hydraulic jib articulated at 25 degrees (not available on the L102 and on the L515-L516)

USE OF IMPLEMENTS
GR4_5 20.9

This device permits to arrange the hydraulic jib (with its movement ram fully opened):

- or in standard configuration (fig. 1);
- or articulated at 25 degrees upwards in relation to the outer boom of the crane (fig. 2).

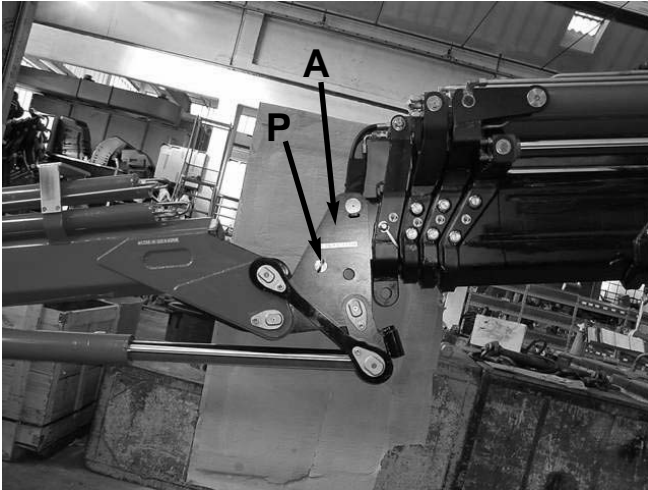


fig. 1

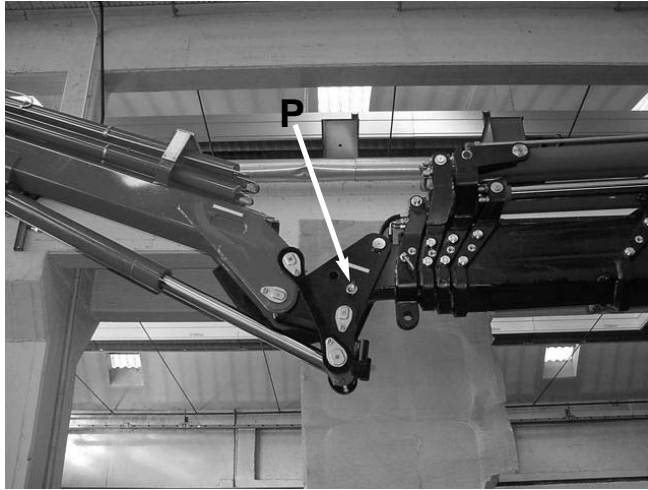



fig. 2

Procedure to change from the standard configuration to the 25 degrees's one:


- re-enter the extension booms;
- put the hook attack of the hydraulic jib on ground;
- remove the check pin, the nut and extract the pin **P**;
- lower the inner or the outer boom of the crane slowly until that the holes of the adapter **A** for the new configuration line up to those of the connecting boom;
- insert the pin **P** in its new seat, screw the nut and mount the check pin.

Use for the selector for configuration

On the cranes, equipped with jib articulated at 25 degrees, is installed a safety device which, activated through the selector of the fig. 3, prevents the verticalising of the jib further than the value reported on the capacity plates.

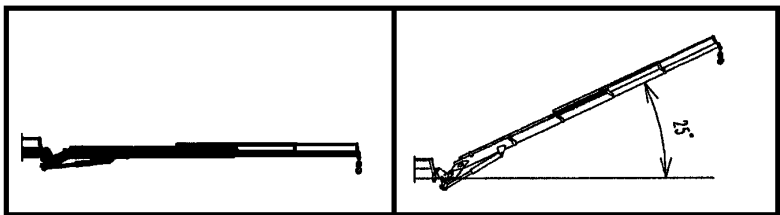

position of the selector
when the jib is in
standard configuration

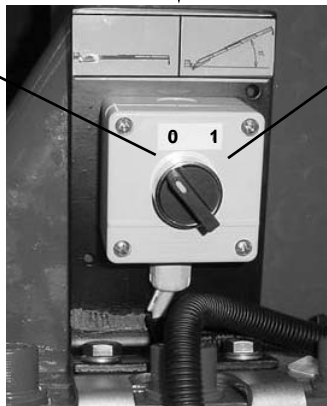

position of the selector
when the jib is
articulated at 25 degrees

fig. 3



20.9 GR4_5

USE OF IMPLEMENTS

(!) ATTENTION (!)

This device is not automatic and so, it is compulsory to position the selector of the fig. 3 on the configuration (standard or at 25 degrees) which you want to use.

(!) ATTENTION (!)

Before using, in the configuration of the jib articulated at 25 degrees, verify that the device is efficient.

When the selector is positioned for the configuration at 25 degrees, the safety device is activated.

If during the utilization, the verticalising limit value has been reached, the safety device intervenes.

Manoeuvres not allowed with the intervention of the safety device:

- lift of the inner boom;
- lift of the outer boom;
- lift of the jib movement boom.


Manoeuvres allowed:

- all other movements.

When the selector is positioned for jib in standard configuration, the safety device is disactivated.

(!) ATTENTION (!)

It is forbidden to use the crane with hydraulic extension articulated at 25 degrees without enabling the corresponding safety device (fig. 3) since when the vertical disposition angles of the jib extension are higher than those of the standard configuration, the extension boom sections of the crane and of the hydraulic jib can generate a very dangerous situation because they are not designed to work with the reverse actions.

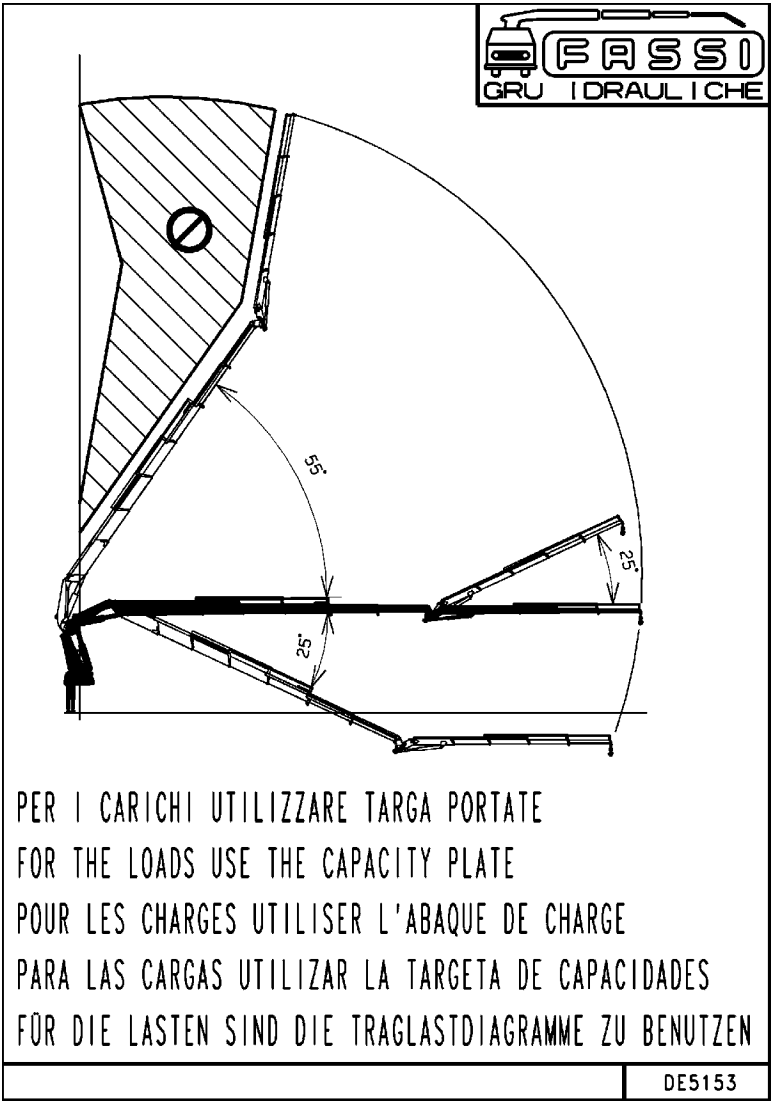



20.10 Crane with lifting moment limiting device and "pro link" (if fitted)

USE OF IMPLEMENTS

GR4_5 20.10

The cranes fitted with “**pro link**” can operate the outer boom and the hydraulic jib with an increased angle of about 15 degrees. In order to prevent the booms from exceeding the maximum angle over the horizontal line (generally 80 degrees) the crane is fitted with a suitable safety device.

Safety device for “pro link”

The safety device receives the signals about the inclination of the outer boom of the crane and of the hydraulic jib and transmits them to the limiting system that controls the manoeuvres; the significant values are the first and the second angle limit (**alfa1** and **alfa2** respectively about 70 and 80 degrees from the horizontal line).

Function of the safety device controlling the articulation “pro link”


When the first angle limit **alfa1** is reached, the safety device temporarily stops all movements and activates the flashing red light; “**Warning angle**” is displayed on the screen. In order to reactivate all the crane functions (**except for the lifting of the inner boom that in this case is definitely disabled**) just put the all the levers in neutral position. Press the LMI button to remove the message “**Warning angle**” (it will disappear when the temporary block angle **alfa1** is no longer exceeded).

When the second angle limit **alfa2** is reached, the safety device definitively stops all lifting movements and activates the fixed red light; “**Max angle crane**” or “**Max Angle jib**” are displayed according to which boom has reached the limit.

The outer booms of the crane and of the hydraulic jib can reach both the **alfa1** (temporary block) and **alfa2** (definitive block) limits, independently from the position of the other booms.

But if one of these two booms reaches the second limit **alfa2**, this condition evidently stops any other lifting.


Only if neither the crane outer boom nor the hydraulic jib reach the first angle limit **alfa1**, the inner boom can attain its max limit **alfa2**, that is its mechanic stroke end.

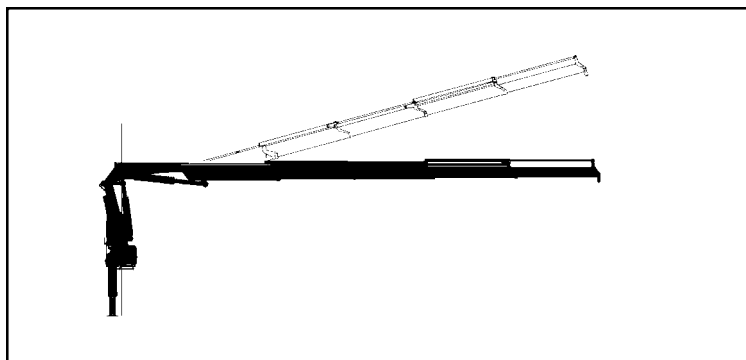

Folding the crane

When you fold the crane, the outer boom is positioned with an angle that generally exceeds the second limit **alfa2**; this is because the safety device “**pro link**” **never disables the descent of the inner and outer booms.**

At this point the inner boom lifting is not permitted. To unfold the crane just turn off the system; when you turn it on the message “**Crane Folded**” is displayed. At this point the only manoeuvre allowed is the folding of the outer boom (we recommend to perform this manoeuvre on all the cranes in order to ensure a correct and safe crane unfolding); if you activate it for some seconds, the message “**Crane Folded**” will disappear and **all the manoeuvres will be reactivated.**

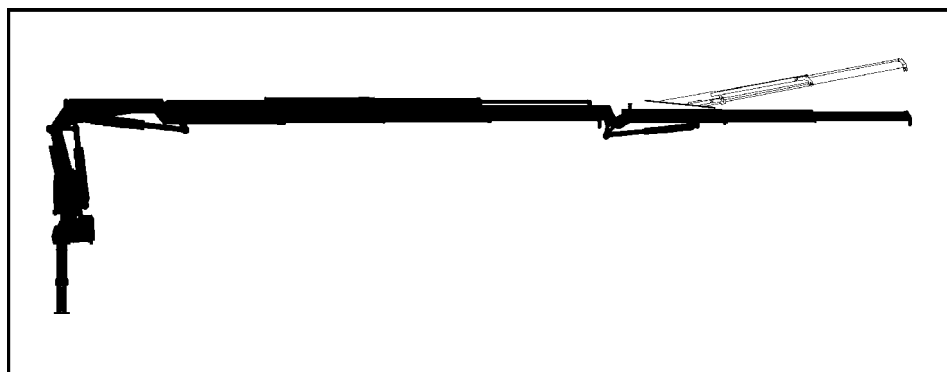





21 WINCH (when fitted)

20.1 Generality

The winch is made of a drum that can rotate by means of a hydraulic motor, on a structure fixed on the crane. The rotation of the drum on which the cable winds is achieved by a hydraulic motor controlled by a safety check valve connected to the crane circuit. A parking brake integrated to the motoreducer group hold the load in position when the winch control lever is in neutral position.

Nomenclature of winch unit (fig. 23)

Pos.	Description
1.	Winch
2.	Cable
3.	Fixed pulley
4.	Balance weight
5.	Hook
6.	Transmission pulley
7.	Block (double-triple.... line)

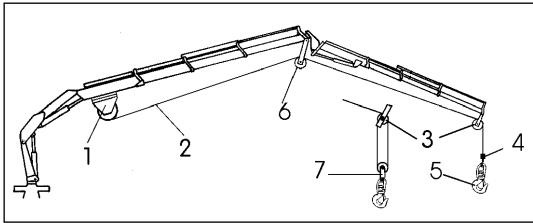


fig. 23

(!) ATTENTION (!)

Check the condition of wire rope.

(!) **On winches not equipped with cable layer, check the rewinding of the cable on winch drum proceeds regularly and without overlapping: it is suggested to rewind the cable only if it is sufficiently taut.**

Do not rotate the crane before the load is lifted. Lift the load vertically using the cable and not the boom in order to avoid swinging the load. With the suspended load rotate slowly and with care checking the stability of the vehicle.

21.2 Winch for crane

The identification data and the essential characteristics are marked on a plate fixed by the manufacturer and used for the CE mark which testifies its conformity to the Machine Directive (D.M.)

Manufacturer mark ...
Winch type ...
Serial number ...
Maximum line in N at the 4th layer...
Maximum speed in m/min ... or Maximum capacity pump l/min

(!) See operator winch manual supplied by the winches' manufacturer.

The winch has a maximum capacity (which cannot be exceeded), indicated by a plate, not related to the crane capacities which can also be lower.

Consequently avoid to lift, with the winch, heavier loads than those allowed by the crane capacity plate.

Note: We do not recommend using the winch with load moving (winch in or out) at the same time as the extension booms or the crane and hydraulic jib (if fitted), since it accelerates the wear of the extension guide pads reducing their life to one third compared to a standard application.

The couple limiter, installed on the winch structure, prevents that on the cable, can be created a load major to the value of maximum line at the 4th layer, quiescing all the crane controls.

(!) Under no circumstances interfere with the limiter device adjustment.



21.2.1 USE OF IMPLEMENTS
GRU FASSI

21.2.1 Winches equipped with a mechanical stroke end device

(!) ATTENTION (!)

The end stroke condition takes place when the block takes contact with the pulley structure. The operator must stop the manoeuvre before the block rotates the pulley completely with consequent activation of the load cell on the winch. Such end stroke device shall be used only under emergency conditions and not as a simple end stroke interrupter.

The mechanical stroke end device combined with the winch limiter prevents the hook bracket (or pulley/snatch block) from hitting the fixed pulley when lifting or when extending the extension booms, and thus from damaging the cable.

When the winch limiter is activated, all the crane functions are disabled.

Manoeuvres allowed:

- Rotation in both directions
- Re-entry of the crane extension boom sections
- Re-entry of the extension booms sections of the jib

Manoeuvres not allowed:

- Winch rope descent
- all other movements

When unwinding, an electric device maintains at least **three (3)** turns of the lifting cable wound around the winch drum on activation the following controls are desactivated:

Manoeuvres not allowed:

- Winch rope descent

Manoeuvres allowed:

- all other movements

(!) ATTENTION (!)

Limit the exit speed of the extension rams when, during the lifting, the hook bracket (or pulley/snatch block) is next to the fixed pulley, in order to avoid unnecessary stress to the cable.

(!) ATTENTION (!)

When the hook bracket (or pulley/snatch block, in case of double or triple line) and the fixed pulley are very close, and the operator needs to manoeuvre in their proximity (i.e. operations like load hook-up, arms folding, etc), we recommend to always stand side on with respect to the pulley plan (never in front or at the back) and to operate the crane at a low speed, since the contact (especially without load) can result in rapid and violent rotations of the hook group (from the fig. 26 to the fig. 27).

(!) ATTENTION (!)

The end stroke condition takes place when the block takes contact with the pulley structure. The operator must stop the manoeuvre before the block rotates the pulley completely with consequent activation of the load cell on the winch. Such end stroke device shall be used only under emergency conditions and not as a simple end stroke interrupter.



fig. 26



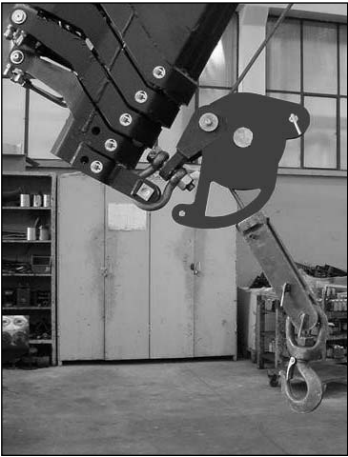



fig. 27

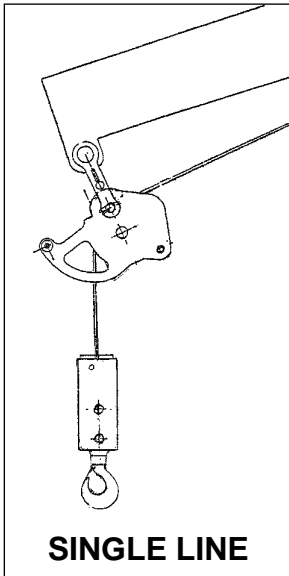


SINGLE LINE

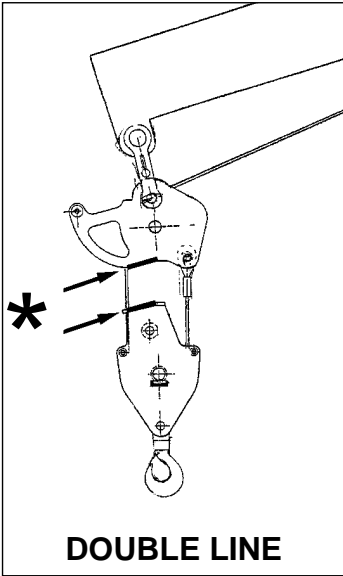

DOUBLE LINE

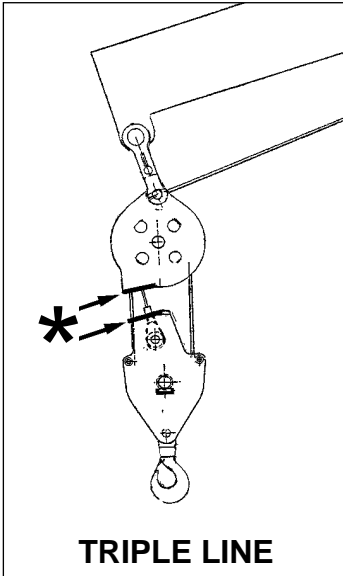

TRIPLE LINE

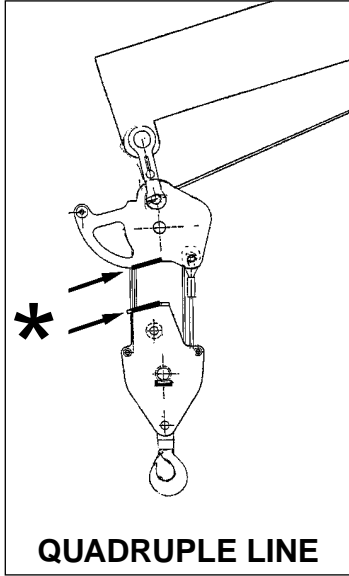

QUADRUPLE LINE

* CORRECT POSITION
FOR THE PULLEY AND
THE PULLEY BLOCK



21.3 Generality

(version with load limiting device)

The winch is made of a drum that can rotate by means of a hydraulic motor, on a structure fixed on the crane. The rotation of the drum on which the cable winds is achieved by a hydraulic motor controlled by a safety check valve connected to the crane circuit. A parking brake integrated to the motoreducer group hold the load in position when the winch control lever is in neutral position.

Nomenclature of winch unit (fig. 23)

- | Pos. | Description |
|------|--------------------------------|
| 1. | Winch |
| 2. | Cable |
| 3. | Fixed pulley |
| 4. | Balance weight |
| 5. | Hook |
| 6. | Transmission pulley |
| 7. | Block (double-triple.... line) |

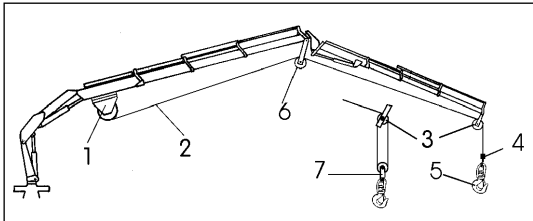


fig. 23

(!) ATTENTION (!)

Check the condition of wire rope.

- (!) **On winches not equipped with cable layer, check the rewinding of the cable on winch drum proceeds regularly and without overlapping: it is suggested to rewind the cable only if it is sufficiently taut.**

Do not rotate the crane before the load is lifted. Lift the load vertically using the cable and not the boom in order to avoid swinging the load. With the suspended load rotate slowly and with care checking the stability of the vehicle.

21.4 Winch for crane

The identification data and the essential characteristics are marked on a plate fixed by the manufacturer.

- Manufacturer mark ...
- Winch type ...
- Serial number ...
- Maximum line in N at the 4th layer...
- Maximum speed in m/min ... or Maximum capacity pump l/min

- (!) See operator winch manual supplied by the winches' manufacturer.

The winch has a maximum capacity (which cannot be exceeded), indicated by a plate, not related to the crane capacities which can also be lower.

Consequently avoid to lift, with the winch, heavier loads than those allowed by the capacity plate of the crane with the winch.

Note: We do not recommend using the winch with load moving (winch in or out) at the same time as the extension booms or the crane and hydraulic jib (if fitted), since it accelerates the wear of the extension guide pads reducing their life to one third compared to a standard application.

The cranes with winch feature a sensor that deactivates the exit of the extension boom sections when the load on the winch exceeds the nominal load by 20%. There is no other control on the maximum load lifting which is therefore limited only by the lifting limit of the winch itself. In order not to overload the winch, it is therefore forbidden to lift a load attached to the winch cable using the crane rams when the load exceeds the values indicated on the capacity plate of the crane with winch.



21.4.1

USE OF IMPLEMENTS
GRU FASSI

21.4.1 Winches equipped with a mechanical stroke end device

(!) ATTENTION (!)

The end stroke condition makes place when the block takes contact with the pulley structure. The operator must stop the manoeuvre before the block rotates the pulley completely. Such end stroke device shall be used only under emergency conditions and not as a simple end stroke interrupter.

When the load exceeds the winch nominal load by 20% the exit of the extension boom sections is deactivated.

When unwinding, an electric device maintains at least **three (3)** turns of the lifting cable wound around the winch drum on activation the following controls are desactivated.

Manoeuvres not allowed:

- Winch rope descent

Manoeuvres allowed:

- all other movements

(!) ATTENTION (!)

Limit the exit speed of the extension rams when, during the lifting, the hook bracket (or pulley/snatch block) is next to the fixed pulley, in order to avoid unnecessary stress to the cable.

(!) ATTENTION (!)

When the hook bracket (or pulley/snatch block, in case of double or triple line) and the fixed pulley are very close, and the operator needs to manoeuvre in their proximity (i.e. operations like load hook-up, arms folding, etc), we recommend to always stand side on with respect to the pulley plan (never in front or at the back) and to operate the crane at a low speed, since the contact (especially without load) can result in rapid and violent rotations of the hook group (from the fig. 26 to the fig. 27).

(!) ATTENTION (!)

The end stroke condition makes place when the block takes contact with the pulley structure. The operator must stop the manoeuvre before the block rotates the pulley completely. Such end stroke device shall be used only under emergency conditions and not as a simple end stroke interrupter.

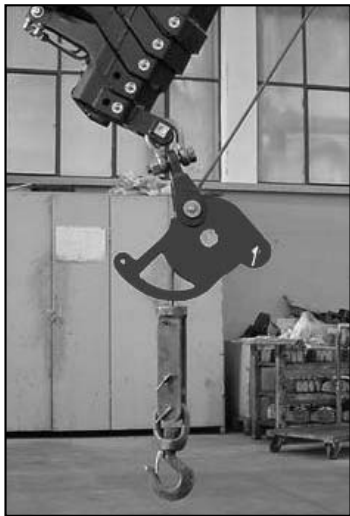


fig. 26



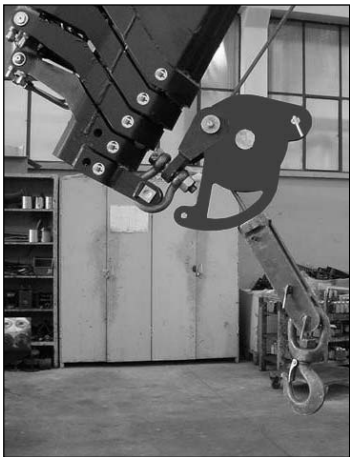



fig. 27

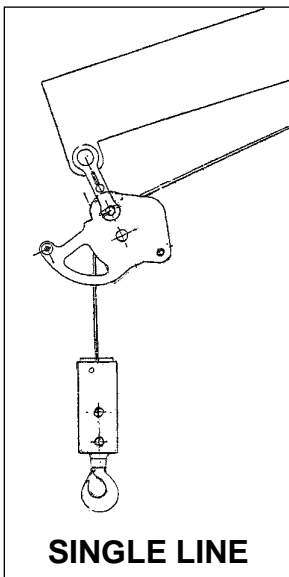


SINGLE LINE

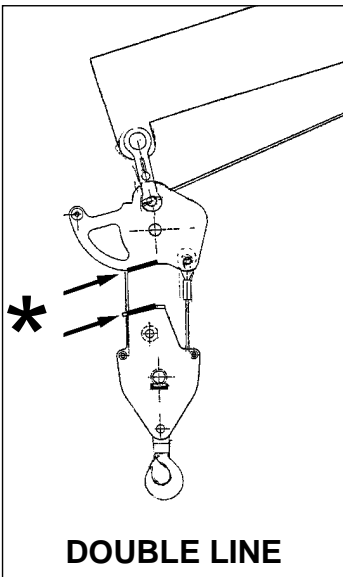

DOUBLE LINE

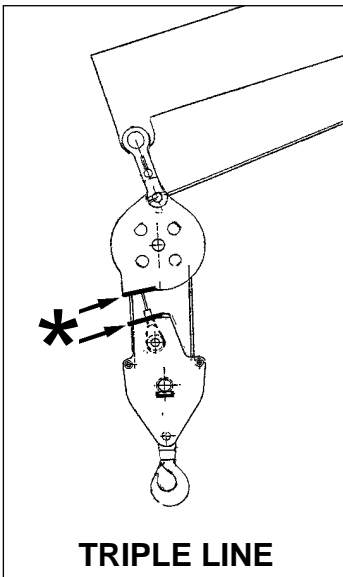

TRIPLE LINE

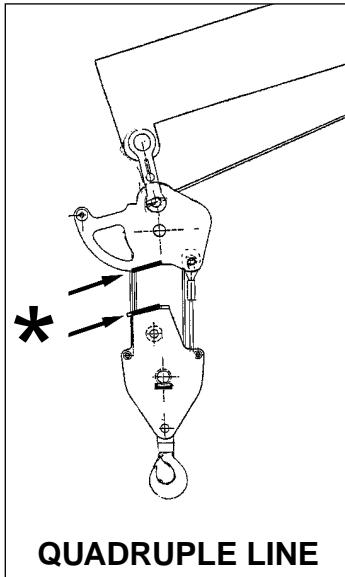

QUADRUPLE LINE

* CORRECT POSITION
FOR THE PULLEY AND
THE PULLEY BLOCK



22 MAINTENANCE INSTRUCTIONS

22.1 Generality

To assure a long life to the crane, it is necessary to meticulously follow the maintenance instructions.

General lubrication and small repairs can be carried out by the user; repairs of a more complicated nature must be carried out by authorized service personnel.

Spare parts must be original.

Good maintenance and proper use are imperative to maintain efficient use and guarantee the safety of the crane.

At least once a year you must take the crane to a **Fassi Service Center** for a check.

(!) Before disconnecting any hydraulic hoses, ensure that there is no pressure in the hydraulic circuit. After removing hoses always mark them and their respective ports on the crane. Faulty replacement can cause damage to the rams and to the hydraulic circuit.

Respect the information supplied for maintenance and technical assistance.

Any maintenance operation must be carried out with the crane power source turned off. (in case of fixed mounting with hydraulic power pack, the electric motor has to be turned off).

Do not place limbs, fingers or any other parts of anatomy into areas of the crane, which present possibilities of shearing, without having blocked such parts of the crane.

Do not weld, drill or grind any part of the crane without the Manufacturer's authorisation.

fig. 29

Do not weld the fixing rods of the crane (see plate DE1574 fig. 29)

When repairs to, or checks of, the hydraulic circuit and of the rams are carried out, it is very important not to use, or be in the proximity of, materials which can damage the circuit or contaminate the hydraulic oil eg. metal shavings, sand or dust.

Do not use the high pressure washing on the controls (deviators, distributors, double controls, hand cable controls...), on the electronic components (boxes, control panels...), on the tanks.

Never use detergents, petrolsol or inflammable liquids, always use non flammable or non toxic liquids.

To avoid down time, it is recommended to periodically carry out the following checks.



DE1574

TIRANTI:	NON SILDARE!
FIXING ROD:	DO NOT WELD!
TIRANTS:	NE PAS SOUDER!
ZUGSCHRAUBEN:	NICHT SCHWEISSEN!

**22.2****MAINTENANCE
INSTRUCTIONS
GRU FASSI****22.2 Timer (fig. 29a) (if fitted)**

The control panel of the "electronic" lifting moment limiting device, placed next to the distributor of the crane, features an alphanumeric readout for displaying the date, the activation time expressed in hours-minutes of the electric control panel ("Partial Time" and "Total time") or the working time of the crane whilst being operated via the control levers ("Work Time").

How to view the date

Press button **C2** (clock/-) to have the current date visualized on display **B**. Fig. 29.

Partial time

How to view the partial time of the electric panel; which can be reset.

- Keep button **C2 (-)** pressed until you read "Time" on display **B**.
- Press button **C1 (+)** until you see "Partial time".
- Press button **C3 (enter)** to view the time.

fig. 29a

**How to reset the "Partial time".**

To start a new count perform the following:

- Keep button **C2 (-)** pressed until you read "Time" on display **B**.
- Press button **C1 (+)** to read "Partial time" on the display.
- Press button **C1 (+)** again to read "Total time" on the display. fig. 29a.
- Press button **C1 (+)** again to read "Work time" on the display.
- Press button **C1 (+)** again to read "Reset partial" on the display.
- Press button **C3 (enter)** to read "Enter to confirm" on the display.
- Press button **C3 (enter)** again; the timer is reset and it will start recording again.

Total time

How to view the total activation time of the electric panel; this cannot be reset.

- Keep button **C2 (-)** pressed until you read "Time" on display **B**.
- Press button **C1 (+)** to read "Partial time" on the display.
- Press button **C1 (+)** again to read "Total time" on the display.
- Press button **C3 (enter)** to visualize, for about 5 seconds, the total time expressed in hours and minutes.

Work time

How to view the work time which is the actual time recorded whilst a crane operating lever/function is being activated.

- Keep button **C2 (-)** pressed until you read "Time" on display **B**.
- Press button **C1 (+)** to read "Partial time" on the display.
- Press button **C1 (+)** again to read "Total time" on the display.
- Press button **C1 (+)** again to read "Work time" on the display.
- Press button **C3 (enter)** to view, for about 5 seconds the work time of the crane expressed in hours and minutes.

**22.3 After every 8 working hours or at the end of every working day**

- Check that all safety devices are efficient.
- Check the level of the hydraulic oil in the tank.
- Check all the components of the hydraulic circuit for possible leaks.
- Check that the control and the oil diverter levers can easily be positioned; they must show no signs of forcing.
- Check the condition of shackles, hooks, wire ropes and any other lifting equipment.

22.4 After every 40 working hours or after every working week

Check the tightening torque of the fixing rods of the crane (fig. 30).

See table at paragraph 22.5

Clean the oil filter placed in the oil tank of the crane and if any, on the pump section and pressure hoses.

NOTE The filters of fibre or paper can not be cleaned, they must be replaced.

Cleaning of the wire mesh filter on the tank (oil return to the oil-tank) fig. 31.

- Unscrew the security bolts of the filter cover 1 and remove it.
- Extract the cartridge, clean by flushing with a non flammable, non corrosive and non toxic solvent (gas oil or other). Thoroughly dry the filter inside and out (do not use compressed air).
- Check if the cartridge has collapsed; if so, replace it!
- Remove the filter body 3 and clean it.
- Re-assemble the filter body and the cartridge: check the sealing of the 'O' ring 4-5-6; in case, replace it!

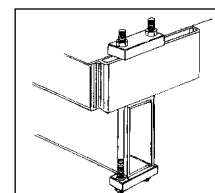


fig. 30

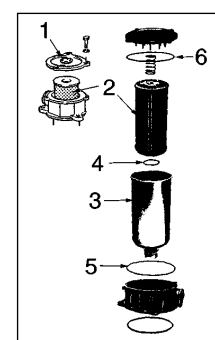


fig. 31

NOTE Take care that no contaminated material passes into the tank.

Replacement of the filter on the delivery line (before the distributor) fig. 32.

- When the visual indicator becomes red, replace the cartridge.
- Unscrew with a suitable spanner the filter body (1) from the head (2).
- Remove the cartridge (3) and clean inside the holder (1).
- Insert a new cartridge and re-assemble the filter body into the head checking the seal (4).

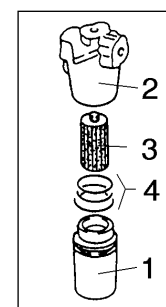


fig. 32

Check the oil level in the tank with the crane in the folded position and with the outriggers (crane and supplementary) fully re-entered. The oil level must not exceed the maximum or be lower than the minimum (fig. 33).

Top up using hydraulic oil with the same characteristics as those indicated in the table at paragraph 23.

The following lubricators have been centralized and gathered in a case (fig. 33a) positioned on the base (crane distributor side):

- rack guide shoe - rotation,
- upper and lower bush of the column - column support,
- rack group - column gear,
- column support group - pendulum beam.



fig. 33

(!) WARNING (!)

At low temperatures, the grease shall not crystallize or, to be more precise, shall not change its characteristics. At the effective operative temperature, the grease we recommend shall have a fluidity at least equal to rating **NLGI 0** or max. 1.

(!) WARNING (!)

Centralized lubrication shall not be used when room temperature is below -10°C / -20°C.

All the lubricators mounted on the crane are protected by a plastic cap so to avoid the oil contamination.

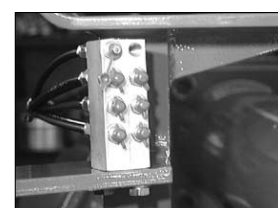


fig. 33a





22.5

MAINTENANCE
INSTRUCTIONS
GRU FASSI

22.5 After every 100 working hours or more frequently in case of more intensive utilisation

WITH RACK

Periodically grease the points indicated on the crane (fig. 34) (and on the hydraulic jib, when fitted, fig. 35) paying particular attention to the points not easily detected. For the sliding sections of the outrigger supports and of the extension booms guide shoes made from a special material have been fitted: to ease their movement it is recommended to smear a light film of grease on them, taking care that the surfaces of the extension booms are free from impurities such as sand etc. Top up using hydraulic oil with the same characteristics as those indicated in the table at paragraph 23.

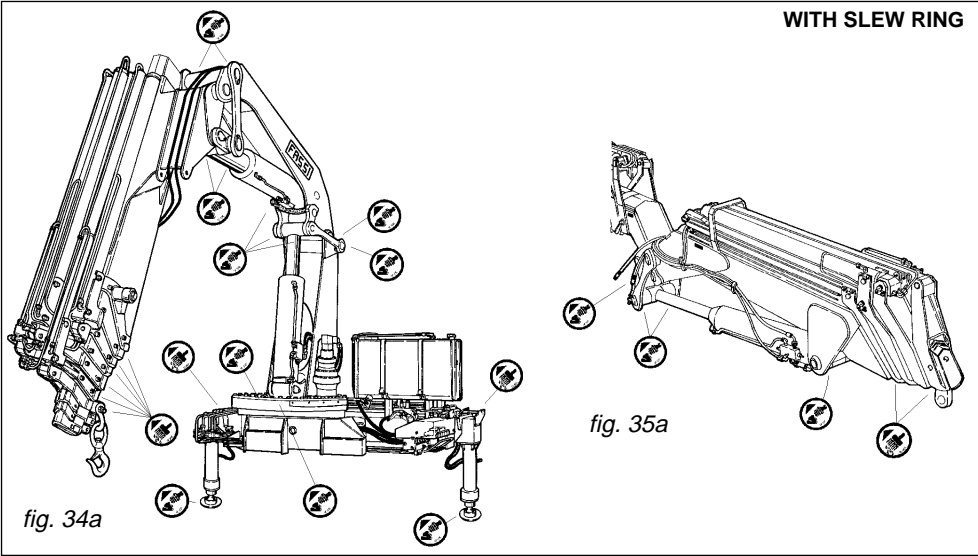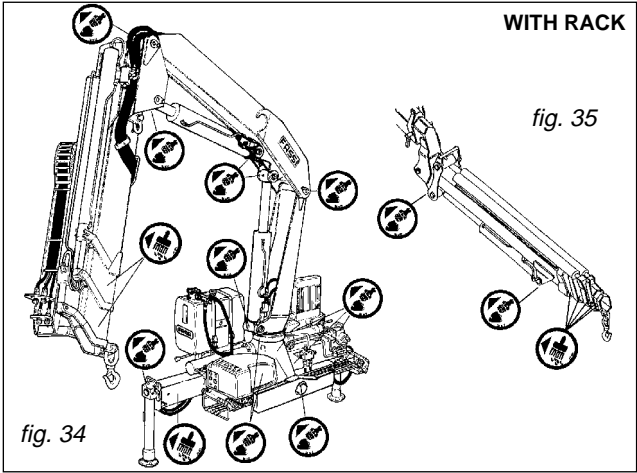

WITH SLEW RING

Grease the slew gear to prevent friction during rotation and to ensure that it is stable by preventing water (corrosion protection) and contaminants from entering the bearings. For a better internal distribution of the grease it is advisable

to rotate the crane and grease it in such a way as to see grease at the seals. Top up using hydraulic oil with the same characteristics as those indicated in the table at paragraph 23. Grease the winch cable (if fitted) after having first cleaned the cable of any encrustation (grease mixed with sand, dust, dirt etc.) The lubricant used must guarantee a good level of penetration in order to lubricate both the inside and the outside of the cable. Top up using hydraulic oil with the same characteristics as those indicated in the table at paragraph 23.


22.6 After every 500 working hours or after every 6 working months

Check the tightening torque:

- of the fixing rods of the crane; consult the following table in order to find it's value according to the bolt diameter:

Table of the tightening torques of the fixing rods of the crane on the vehicle
From "C0404 Kit for crane fixing".

D. Fixing rods	Tightening torque = Nm
M22x1,5	300
M24x2,0	400
M27x2,0	600
M30x2,0	471
M33x2,0	1200
M39x3,0	1800

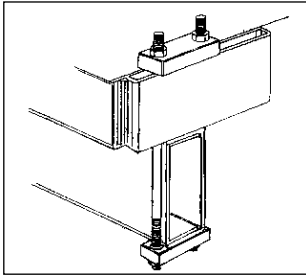



WITH SLEW RING

- of the slew gear screws (bolts M20 Class 12.9: Tightening torque = 620 Nm)

WITH RACK

- of the securing bolts for the ram pins and of all the other bolts and screws, where the tightening torque is not expressly indicated, consult the following table in order to find it's value according to the bolt diameter and class.

Table of the bolts tightening torque, in general, with average friction value (0,15) and average-good tightening accuracy (C).

From ... "ELEMENTS DE FIXATION - ASSEMBLAGES VISSES" (AFNOR E 25-030 1984)

Diameter Bolt = D	Class 8.8 Torque = Nm	Class 10.9 Torque = Nm	Class 12.9 Torque = Nm
3	1,06	1,56	1,83
4	2,44	3,58	4,19
5	4,83	7,10	8,30
6	8,30	12,30	14,30
8	20	29	35
10	40	59	69
12	69	102	119
14	111	163	191
16	173	255	298
18	239	352	412
20	339	499	584
22	466	685	802
24	584	858	1004
27	865	1271	1487
30	1173	1723	2016
33	1594	2342	2740
36	2046	3006	3517
39	2658	3905	4570

WITH SLEW RING

Check the rotation control motoreducer oil level. Fig. 34

- Remove the bleed plug (1) using a 22 mm Allen wrench.
- Remove the plug (2) using an 8 mm Allen wrench and the O-ring.
- Top up, if necessary, with the same type of oil as indicated in the table at Paragraph 23 via the mouth (bleed plug).
- The correct level is reached when oil starts to escape from the threaded hole in plug (2).
- Check the state of wear of the O-rings (replace if necessary) and then return the plugs.
The lubrication oil can be drained completely by removing plug (3) using an 8 mm Allen wrench.

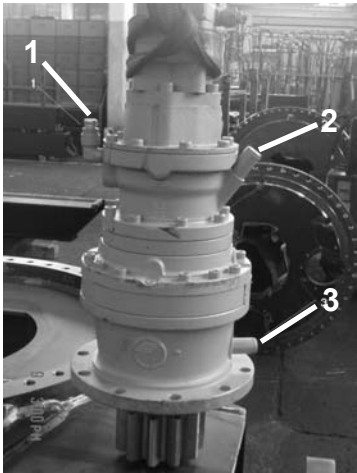


fig. 34

Check the guide shoe wear as it affects the sliding section tolerances; if the clearances are considerable, damage to the rams and the structure may occur.

Clean the air filter placed in the top of the oil tank filter cap.

Completely replace the hydraulic oil and the filter cartridges.

(!) The waste oil and the filter cartridges MUST be disposed of by authorized persons.

(!) CAUTION DANGER (!)

On the outer boom there is a mercury capsule (mercury level switch) duly protected and provided with the following warning stickers.

MERCURY IS EXTREMELY TOXIC. IN CASE OF REPLACEMENT AND/OR SCRAPPING, DISPOSE OF OR RECYCLE THE CAPSULE CONTAINING MERCURY WITH MAXIMUM CARE, AND IN ACCORDANCE WITH THE NATIONAL REGULATIONS IN FORCE.

Contiene mercurio: smaltire secondo le leggi in vigore

Es hat quecksilber: bitte beseitigen so wie gesetzlich

Mercury inside: scrap following laws in force

Contient du mercure: recycler selon les lois en vigueur





22.7

MAINTENANCE
INSTRUCTIONS
GRU FASSI

22.7 After every 1000 working hours or after every working year

Perform: Washing, Function Testing, Testing according to the capacity plates
Check: Identification plates, Capacity plates

Checklist in accordance with ISO 9927-1

Element	Checks to be carried out:
Subframe Structure and fixing rods	Tightening torque of the fixing rods, wear and any deformation, actions
<i>For crane with rack:</i> Base Rack group, compensator	Lubrication, tightening torque of the rods, wear and any deformation, actions
<i>For crane with slew ring:</i> Base Slew ring group, compensator	Lubrication, tightening torque of the screws wear and any deformation, actions
Outriggers Supports, rams, base plates safety catches, hoses	Greasing of extension supports, oil-leaks, wear, actions, inspection of hoses
Rotation cylinders Cylinders, pistons, seals,	Oil-leaks, chromium plating, any deformation, inspection of hoses
Column Inner boom connection, outrigger connection, pins, bushes	Lubrication, wear and any deformation, actions
Inner boom Pins, outrigger connections	Lubrication, wear and any deformation, actions
Inner ram Cylinder, rod, piston, seals, hoses	Oil-leaks, chromium plating, any deformation, inspection of hoses
Outer boom Pins, outrigger connections	Lubrication, wear and any deformation, actions
Outer ram Cylinder, rod, piston, seals, hoses	Oil-leaks, chromium plating, strains, inspection of hoses
Extension booms Guide shoes, pins, outrigger connections	Lubrication, wear and any deformation, actions
Extension rams Cylinder, rod, piston, seals, hoses	Oil-leaks, chromium plating, any deformation, inspection of hoses
Hydraulic jib Booms, pins, outrigger connections	Lubrication, wear and any deformation, actions
Rams (hydraulic jib): Cylinder, rod, piston, seals, hoses	Oil-leaks, chromium plating, any deformation, inspection of hoses
Winch Torque limiter, brake, rope slide guide, cable, stroke end, pulleys	Lubrication, wear and any deformation, actions
Distributors, deviators, valves Control levers, forks, joints, fixing screws, lead seals	Checking of the pressure, oil-leaks, wear and any deformation, actions,
Lifting moment limiting device Valves, pressure switches, electrovalves	Checking of the pressure, oil-leaks
Power take-off, pump, oil-tank Filters, hoses	Pump capacity, checking of the pressure, oil change, replacement of filters, inspection of hoses



Oil-pressure system Hoses, hose protection devices	Checking of the pressure, oil-leaks, inspection of hoses
Implements for lifting Hooks, chains, cables, slings	Safety check, wear and any deformation, actions
Implements Wallboard forks, buckets, rotators	Oil-leaks, wear and any deformation, actions, inspection of hoses
Seat, third control station Frame, fixing screws	Access inspection, wear and any deformation, strains
Tele(radio)remote control	Test

22.8 Complete overhaul of the crane is required when 10.000 working hours or 10 years' life are reached - i.e.:

When one of the limits indicated hereunder is reached:

10.000 working hours, (i.e.: 10 years, 50 weeks a year, 20 hours a week, or 5 years, 50 weeks a year, 40 hours a week)

or

10 years' life of the crane,

a complete overhaul with in-depth structural inspection of the crane must be carried out by the Manufacturer or by an authorised service centre.

22.9 Instructions for the dismantlement and the demolition of a FASSI crane

INSTRUCTIONS FOR THE DISMANTLEMENT AND THE DEMOLITION OF A FASSI CRANE

In case of demolition it is necessary to dismantle the whole machine and separate the different types of materials according to the respective waste disposals requirements.

The materials involved are the following:

- Ferrous materials: fabrications and mechanical components.
- Plastic materials: gaskets, belts, covers.
- Electric materials: windings, controls, electrovalves and similar.
- Oils and lubricants: hydraulic oil, lubricants for reducers, lubricating greases.
- For the truck follow the indications of the manufacturer
- Different material: Mercury (level sensor)

Take extreme care when slinging the components to be disassembled especially with respect to their weight.

Completely release the residual pressure in the hydraulic circuits and then fully drain the oil present in the circuits before starting the dismantlement of the relevant components. Be careful not to let the oil drop on the ground, therefore collect it in special containers, since exhausted oil must be eliminated in compliance with the waste disposal rules in force.

Disable all the electric power supplies (batteries etc.) before dismantling the components of the electric circuits.



23 **TABLE OF HYDRAULIC OIL AND LUBRICANTS
CHARACTERISTICS**

HYDRAULIC OIL WITH HIGH VISCOSITY: ISO-L-HV		
Minimal external temperature: -35°C -20°C	maximal oil temperature: +45°C +75°C	Gradation ISO VG 32 ISO VG 46

HYDRAULIC OIL WEAR RESISTANT: ISO-L-HM		
Minimal external temperature: -10°C + 0°C + 5°C +10°C	maximal oil temperature: +60°C +75°C +85°C +90°C	Gradation ISO VG 32 ISO VG 46 ISO VG 68 ISO VG 100

GREASE (for centralized system)
Use only GREASE NILEX EP1 of the firm NILS. NOTE: Do not ABSOLUTELY mix different types of grease.

GREASE (for slew ring, extension booms, outrigger supports...)
-30°C up to +130°C EP1 Gradation (cold climate) EP2 Gradation (warm climate) All grease used must be free from acid and resin, not hygroscopic and long-life such as BP GREASE LTX-EP1\EP2 or ELF EPEXA 1\2 ESSO BEACON EP1\EP2 or TEXACO EP1\EP2 MOBIL EP1\EP2 or SIMILAR.

HYDRAULIC OIL FOR MOTOREDUCER
Classification ISO-L-CC Gradation EP ISO-VG 150

LUBRICATING OIL (for winch cable)
The most suitable here is a general-purpose lubricating oil with about SAE 30° viscosity. A lubricating oil containing non-stick additives is recommended if the cables are expected to move quickly through the pulleys. BRILUBE 50 (BRITISH ROPES - BRINDON)

(!) WARNING (!)
Don't use greases with solid particles as "Bisulphide of Molybdenum"
(not compatible with eventual teflon bushes).



24 POSSIBLE FAULTS

24.1 Generality

Many years experience of our product has allowed us to identify and classify the most common faults which occur. In most cases it requires accurate hydraulic and electric troubleshooting and simple rectification. In the following table we report the most frequent inconveniences and our suggested remedies.

(!) Checking and adjustment of oil pressures of valve settings must be carried out by an authorized service agent, under penalty of warranty forfeiture.

(!) ATTENTION (!)

In the event that the crane ceases to operate and the code "alarm" with a number appears on the Display B. Call your **FASSI authorised service centre** reporting the Alarm number with the crane model and serial numbers. If the fault cannot be cleared follow the procedure in the chapter "Controls to operate the crane" and override the dump valve EVI. THIS IS ONLY A TEMPORARY ACTION FOR EMERGENCIES, the crane should be taken to a **FASSI service centre** for repair as soon as possible.

TO OPERATE THE CRANE FOR TOO LONGER PERIOD WITH THE OVERRIDE ACTIVATED MAY INVALIDATE THE CRANE WARRANTY.

24.2 Only operations which can be carried out by the user

Note: Any operation, other than those indicated hereunder, must be performed only and exclusively by specialized personnel from an authorized support centre, considering the potential residual risks.

FAULTS	CAUSE	REMEDIES
The crane does not rotate properly	Vehicle non in level position Lack of lubrication	Stabilize the vehicle - <u>WITH RACK</u> : Grease the bushes and the rotation guide shoe - <u>WITH SLEW RING</u> : Grease the slew ring and the pinion gear-slew ring group
The extension booms do not completely extend or work jerkily	Lack of lubrication of the guide shoes	Grease the guide shoes
Crane controls are not active	Lack of electric energy	Check the fuse, the battery and electric circuit
	Winch stroke end active (if fitted)	See 21.2
	The rotation limiting device is activated	See 16.6
Vibrations in crane operations	Shortage of oil	Check the level and top up if necessary
	Obstructed filters	Clean or replace the filter cartridge
Noteable decrease in movement speed	Obstructed filters	Clean or replace the filter cartridge



24.3


POSSIBLE FAULTS
GRU FASSI

24.3 Operations to be carried out only by an authorized service center

FAULTS	CAUSE	REMEDIES
The crane does not lift the loads indicated on the capacity plate	Non efficiency of the pump (main pressure or auxiliary) valves not properly adjusted, or worn Ram seals are not properly fitted	Replace the pump Check the pressure, adjust the valves or replace them! Replace the seals
A boom of the crane does not hold up the load and visually lowers	The safety check valve the ram is open Oil leaks inside the ram	Replace the valve Defective seals, replace them!
The crane does not rotate properly - <u>WITH RACK</u> : - <u>WITH SLEW RING</u> :	Valves controlling the rotation not adjusted Wear of rotation guide shoe Wear of the seals of the rotation cylinder Wear of the slew ring Wear of the motoreducer group	Adjust the valves Replace the guide shoe Replace the seals Check the slew ring wear, replace if necessary Check the motoreducer group wear, replace if necessary
The extension booms do not completely extend or work jerkily	Wear of guide shoes	Check the guide shoes wear, replace if necessary
Vibrations in crane operations	Non efficient pump	Check the pump
Noteable decrease in movement speed	Non efficient pump	Check the pump



25 INSTRUCTION AND WARNING PLATES



FASSI GRU IDRAULICHE SpA

24021 ALBINO (BG) ITALIA - Via dei Carmelitani, 2

Tel. + 39 35 77.64.00 - Fax + 39 35 75.50.20

INSTRUCTIONS FOR SAFE USE OF THE CRANE

DE4236

1 Only authorized persons are permitted to operate the crane.

2 The crane must be used on firm, level ground.

3 Check that the vehicle hand brake is on and that the wheels are chocked.

4 Before operation make sure that:

- no-one is within the working area of the crane;
- the safety devices are in place and operative;
- the minimum safe working distances from power lines are observed;
- the load is correctly slung and hooked.

5 Stabilize the vehicle with the outriggers, making sure that:

- the lateral supports are fully extended;
- the wheels are in contact with the ground and the suspension is not completely unloaded.

6 Use the crane in accordance with the use and maintenance manual, making sure that:


- the load and radius are within the maximum limits shown on the crane capacity plate;
- the crane is used progressively avoiding sudden load movements;
- swinging or dragging of the load is avoided;
- the load is lifted before rotating.

7 When using implements protect the working area with a barrier.

8 The vehicle/crane are not left unless the power take off is disengaged and the load is on the ground.

9 Before driving the vehicle ensure that the outriggers are fully retracted and re-entered, the safety taps closed and the crane is in the folded position.

DE 4236
Instruction plate and safety norms



FASSI GRU IDRAULICHE

ATTENZIONE: PRIMA DI AZIONARE LA GRU E' OBBLIGATORIO METTERE IN OPERA GLI STABILIZZATORI.

WARNING: BEFORE OPERATING THE CRANE IT IS COMPULSORY TO EXTEND THE OUTRIGGERS.

ATTENTION: AVANT D'UTILISER LA GRUE IL EST OBLIGATOIRE DE METTRE EN FONCTION LES STABILISATEURS.


ACHTUNG: VOR INBETRIEBNAHME DES KRANS MUESSEN DIE ABSTUETZUNGEN AUSGEFAHREN.

ATENCIÓN: ANTES DE ACCIONAR LA GRÚA ES OBLIGATORIO ESTABILIZAR EL VEHICULO.


ATENÇÃO: ANTES DE UTILIZAR A GRUA É OBRIGATÓRIO COLOCAR EM FUNCIONAMENTO OS ESTABILIZADORES.

DE2327

DE 2327
Warning plate to stabilize the vehicle before using the crane

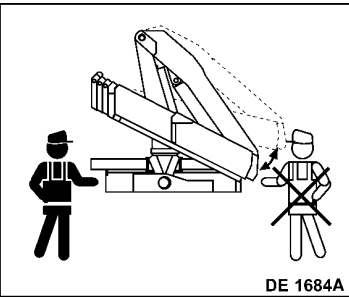


DE 1684A
Do not operate from the double control side, to unfold or fold the crane

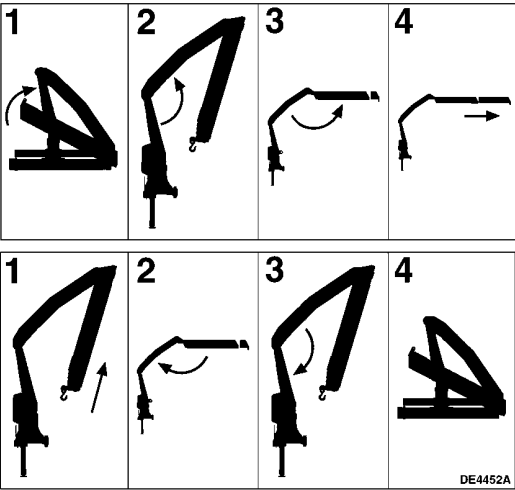


DE 4452A
Instruction plate to fold the crane into the rest condition



DE 4491
Do not operate from the frontal position, to
extend the outrigger supports

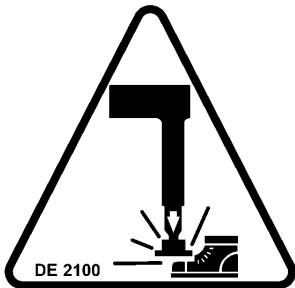


DE 2100
Danger plate for crushing of lower limbs

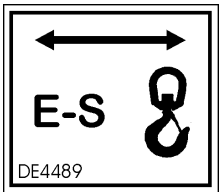


Oil-diverter
control plate

DE 4489

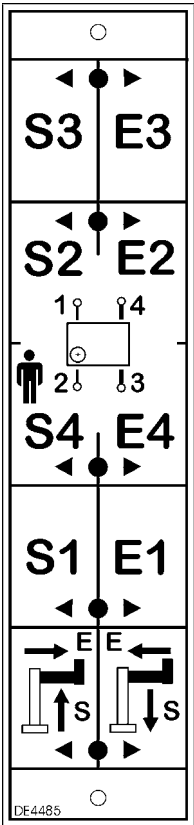

DE 4485

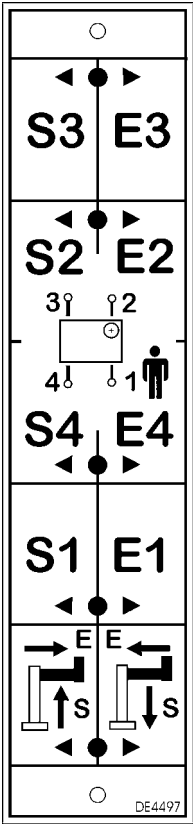

DE 4497


Instruction plates
to stabilize the vehicle




DE 1681
Greasing points with brush




DE 1682
Greasing points at pressure

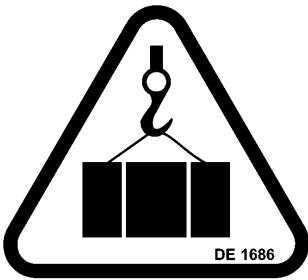

DE 1686
Do not walk or stop under a suspended load

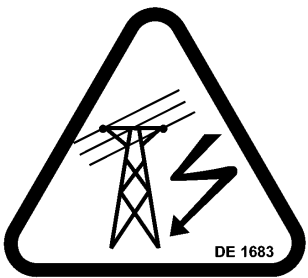

DE 1683
Do not operate in proximity of electric high-tension lines

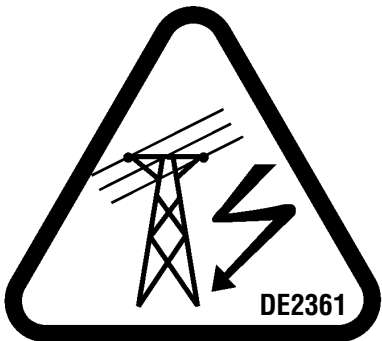

DE 2361
Do not operate in proximity of electric high-tension lines



DE 1679
Do not walk on...



DE 1680
Do not use water to extinguish fire

	TIRANTI:	NON SILDARE!
	FIXING ROD:	DO NOT WELD!
	TIRANTS:	NE PAS SOUDER!
	ZUGSCHRAUBEN:	NICHT SCHWEISSEN!

DE 1574
Do not weld the
fixing rods