

## LIFTMOORE 206REL CRANE

6,500 FT.-LB. MOMENT RATING 2,000 LB. MAXIMUM CAPACITY



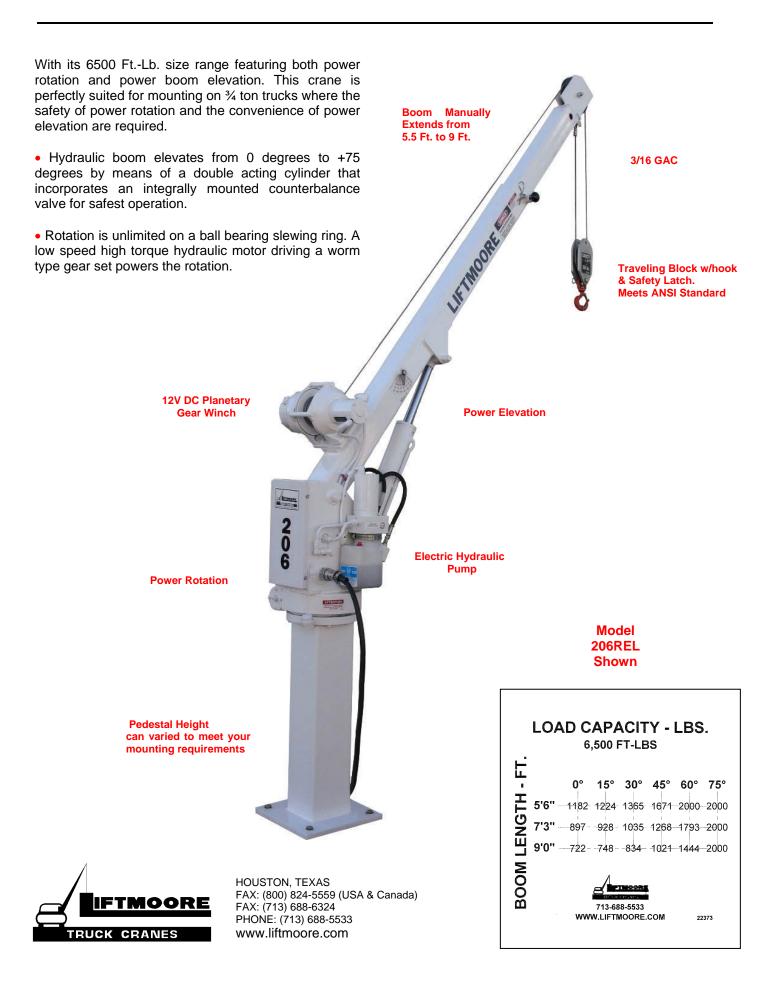

## 206REL SPECIFICATIONS

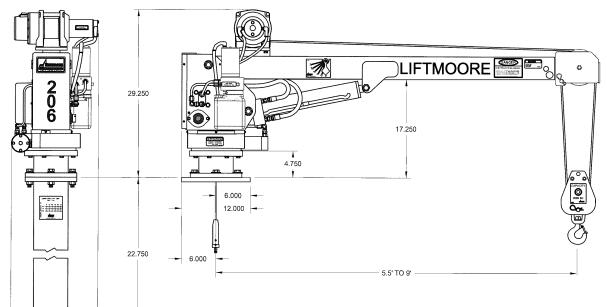

#### **HOIST WINCH:**

The Hoist winch uses a planetary gear drive for most efficient operation. The winch is powered by a permanent magnet electric motor. The single line capacity of the winch is 1200 lbs. An integral mechanical brake is included with the winch.

Winch performance as follows.

-- 15.250 --

Load (lbs)	Hook speed (Ft./ Min.)	Amp Draw
0	25	22
600	21	63
900	19	84

<sup>\*</sup> Use travel block double line, for loads above 1000 Lbs.

#### **WIRE ROPE and SHEAVES:**

The crane is supplied with 35 Ft. of 3/16 in. galvanized aircraft cable with a 4200 Lb. breaking strength. All sheaves meet ANSI requirements.

#### ROTATION

The hydraulic powered rotation is continuous and unlimited. The crane rotates on an external gear ball bearing slewing ring and is driven by a low speed high torque hydraulic motor.

**BOOM:** The standard boom length in the horizontal position is 5.5 Ft with a manually telescoping section to 9.0 Ft. Boom is elevated from 0 to +75 degrees by a double acting hydraulic cylinder. For safest operation the cylinder incorporates an integral counterbalance valve that will hold the load in the event of hose failure

#### **HYDRAULIC SYSTEM:**

RUCK CRANES

A 12-volt electric-hydraulic pump powers both boom elevation and crane rotation. Four way directional control valves are used to control the hydraulically driven functions.

# IFTMOORE FA

HOUSTON, TEXAS FAX: (800) 824-5559 (USA & Canada) FAX: (713) 688-6324

PHONE: (713) 688-5533 www.liftmoore.com

#### **PENDANT CONTROL:**

An 18-Ft. control is supplied with each crane. Each function is controlled by a weather resistant momentary contact toggle switch. The pendant control is removable to prevent unauthorized use of the crane.

#### **ELECTRICAL:**

The vehicle 12-volt DC system powers the crane. A second battery near the crane is advised. This will maintain the voltage at the highest possible level and extend the life of the crane's motors and solenoids.

A double pole electric contactor reverses the winch motor. The electric-hydraulic pump motor is controlled by a single pole solenoid. 25 Ft. of battery cable with quick disconnects, a 3-Ft. ground wire, quick disconnect switch, and a 150 Amp circuit breaker is supplied with each crane.

### **LOAD SENSOR:**

A load sensing pressure switch is mounted on the base of the elevation cylinder. The switch will shut down winch up and boom down when an overload is detected. The load sensor will reset after the load is reduced. The pressure relief setting in the pump limits boom up.

#### PEDESTAL:

A standard pedestal height of 27 In. from base of mounting plate to point of rotation is standard. This can be shortened to 5.5 in. to accommodate mounting on service body compartment top. (Special heights can be produced upon request)

#### MOUNTING: A minimum 9,00 Lb. GVWR recommended.

Four  $\frac{1}{2}$  in. X 2-3/4 ln. long grade 8 bolts are supplied. The base plate is a 12-ln. square with a 9.5-ln square bolt pattern.

#### **BOOM REST:**

A boom rest is required to support the boom whenever the vehicle is in motion. Liftmoore can supply your boom rest, its just one of the many options available.

**OPTIONAL:** Anti-Two Block

#### **ACCESSORIES:**

A jackstand or outrigger is necessary on most installations to keep the truck as level as possible and reduce the load on the rotation bearings as well as the truck's springs, axels, wheels and tires.

Bulletin 461-A 12/30/13